



Alcatel-Lucent Enterprise

OmniAccess Stellar AP User Guide - AWOS 5.0.3

September 2025

060966-00 Rev. A

The Alcatel-Lucent name and logo are trademarks of Nokia used under license by ALE. To view other trademarks used by affiliated companies of ALE Holding, visit: www.al-enterprise.com/en/legal/trademarks-copyright. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein.

Alcatel-Lucent 
Enterprise

Contents

1	How to Use This Manual	8
	Access Stellar AP Through the GUI	8
	Document Conventions	8
2	Configuration Sample	9
	Scenario 1: AP Group Without ALE OXO server	9
	Scenario 2: AP Group With ALE OXO Server (ZTP)	11
3	Connecting AP Group via Web Browser	13
	Prerequisites for Setting up and Accessing AP Group	13
	Connect to Pre-defined SSID and Browse URL	13
	Using the Initializing Wizard.....	14
	Connecting to the AP Group via Web	17
	PVM/SVM Election and AP Group Scalability	18
4	Introduction to the AP Group Web Management System	20
	Dashboard Overview	20
	WLAN Window	20
	AP Window.....	22
	Client Window	25
	Monitoring Window	27
	System Page.....	30
	General Window	30
	System Time Window	35
	Syslog & SNMP Window	36
	Wireless Page	38
	RF Window.....	38
	wIDS/wIPS Window	42
	Performance Optimization Window	45
	Access Page	47
	Authentication Window.....	48
	Customized Portal Page Panel.....	51
	Customized Portal Page - Login by Account.....	51
	Customized Portal Page - Login by Access Code.....	52
	Customized Portal Page - Login by Terms of Use.....	52
	Blocklist & Allowlist Window	53
	Access Control List Window	55
	Network Page	57
	Ethernet Over USB.....	58
5	WLAN Configuration.....	59

How to Use This Manual

Create New WLAN.....	59
Create an Enterprise WLAN	59
Create a Personal WLAN.....	65
Create a Captive Portal WLAN.....	69
Delete Your WLAN.....	73
Modify Your WLAN.....	73
Modify WLAN QoS.....	74
6 AP Management	75
AP Group Management	75
Import and Export AP Configuration	77
Upgrade AP Firmware	78
Modify AP Name and IP Address.....	80
Check AP Configuration Detail	81
Modify AP Transmission Power and Channel	82
AP LED Specification.....	83
Locate AP or Turn LED Off	83
Remove an AP from the Group.....	84
Allow an AP to Join the Group	85
How to Add a New AP to Group.....	86
How to Replace a Current AP in Group	86
How to Setup Wireless Networks With large scale of Stellar APs.....	86
How to Configure the AP if There is No DHCP server.....	87
How to Configure the Power Consumption.....	87
7 Authentication Management	89
Authentication and Encryption Methods.....	89
How to Configure Captive Portal Authentication	92
Create a Captive Portal WLAN.....	92
Enable Captive Portal Service	93
Select Your Login Method	93
Create Users or Access Code.....	94
Customize Your Splash Page (Optional).....	95
Log User Behavior (Optional)	95
Specify Your Walled Garden (Optional)	96
Specify Your Captive Portal Allowlist (Optional)	96
8 Tools	98
PMD	99
Reset the AP to Factory Default Settings.....	99
SSH Secure shell	99
9 AP UI	100
Login to AP UI	100

How to Use This Manual

AP Interface	101
AP Network	102
Configure Mesh/Bridge through AP UI	102
Configure DHCP through AP UI	106
Configure DNS Cache through AP UI	107
Configure NAT through AP UI	107
Configure Static Neighbor AP through AP UI	109
RF Environment	110
10 Web Management with HTTPS	113
Download the Certificate from AP	113
Install the Certificate on Different Platform accordingly.....	114
Case A: Microsoft Windows + Microsoft IE/Google Chrome	114
Case B: Microsoft Windows + Mozilla Firefox.....	117
Case C: Apple MAC OS X + Google Chrome	120
Case D: Apple MAC OS X + Mozilla Firefox	124
A. End-User Software License Agreement	125

Table of Figures

Figure 1-1 AP group without OXO	9
Figure 1-2 AP group with OXO	11
Figure 2-1 AP Group Login Page	15
Figure 2-2 Initialization Wizard-Welcome Page	15
Figure 2-3 Initialization Wizard-Modify Administrator Password	15
Figure 2-4 Initialization Wizard-Select country code and time zone	16
Figure 2-5 Initialization Wizard-Create New WLAN.....	16
Figure 2-6 Initialization Wizard-Complete Notice	17
Figure 3-1 Dashboard Overview.....	20
Figure 3-2 WLAN Window-Simplified Mode.....	21
Figure 3-3 WLAN Window-Advanced Mode	21
Figure 3-4 AP Window-Simplified Mode	22
Figure 3-5 AP Window-Advanced Mode	23
Figure 3-6 Clients Window-Simplified Mode	25
Figure 3-7 Clients Window-Advanced Mode.....	26
Figure 3-8 Monitoring Window - AP Group	27
Figure 3-9 Monitoring Window - WLAN	28
Figure 3-10 Monitoring Window - AP.....	29
Figure 3-11 Monitoring Window - Client.....	29
Figure 3-12 System page	30
Figure 3-13 General Window - Simplified Mode	31
Figure 3-14 General Configuration Window -Advanced Mode.....	31
Figure 3-15 Account Management Tab.....	33
Figure 3-16 Account Lockout.....	33
Figure 3-17 Command line Account	33
Figure 3-18 Certificate Management Tab	34
Figure 3-19 Service Management Tab.....	35
Figure 3-20 System Time Window	35
Figure 3-21 Syslog Window	36

How to Use This Manual

Figure 3-22 SNMP Window	37
Figure 3-23 Wireless Page	38
Figure 3-24 RF-2.4GHz	39
Figure 3-25 RF-5GHz.....	39
Figure 3-26 RF Configuration Window	40
Figure 3-27 Edit RF Information	41
Figure 3-28 Top 5 AP interfered	43
Figure 3-29 wIDS/wIPS Configuration Window	43
Figure 3-30 Foreign AP Allowlist.....	44
Figure 3-31 Foreign AP Blocklist.....	45
Figure 3-32 Wireless Optimization Tab	46
Figure 3-33 Access Page	47
Figure 3-34 Authentication Window - Simplified Mode	48
Figure 3-35 Authentication Window - Internal Portal Server	48
Figure 3-36 Authentication Window - External Portal Server.....	49
Figure 3-37 Customized Portal Page	51
Figure 3-38 Customized Portal Page - Login by account.....	51
Figure 3-39 Customized Portal Page - Login by access code	52
Figure 3-40 Customized Portal Page - Login by Terms of use.....	52
Figure 3-41 Customized Portal Page - Terms of use	53
Figure 3-42 Blocklist Tab	53
Figure 3-43 Allowlist Tab	54
Figure 3-44 Walled Garden Tab.....	54
Figure 3-45 Multicast Control Tab.....	55
Figure 3-46 ACL Window - Simplified Mode	56
Figure 3-47 ACL Window - Advanced Mode	56
Figure 3-48 Network Page	57
Figure 3-49 Ethernet Over USB	58
Figure 4-1 Create Enterprise WLAN - Simplified Mode	60
Figure 4-2 Create Enterprise WLAN - Advanced Mode	61
Figure 4-3 Create Personal WLAN - Simplified Mode	65
Figure 4-4 Create Personal WLAN - Advanced Mode.....	66
Figure 4-5 Create Captive Portal WLAN - Simplified Mode	69
Figure 4-6 Create Captive Portal WLAN - Advanced Mode	70
Figure 4-7 Delete a WLAN	73
Figure 4-8 Modify a WLAN	74
Figure 4-9 Modify WLAN QoS	74
Figure 5-1 AP Group Configuration Window	76
Figure 5-2 AP Group Information Location.....	76
Figure 5-3 AP Group Management IP.....	76
Figure 5-4 Export AP Group Configuration	77
Figure 5-5 Import AP Group Configuration	77
Figure 5-6 Update Single AP using Local Image File	78
Figure 5-7 Update Single AP from Remote TFTP Server	79
Figure 5-8 Update all APs' Firmware	79
Figure 5-9 Modify AP Name.....	80
Figure 5-10 Modify AP IP Address.....	81
Figure 5-11 Check AP Configuration Detail	82
Figure 5-12 RF Management.....	82
Figure 5-13 Turn LED off.....	83
Figure 5-14 Locate AP.....	84
Figure 5-15 Restore AP state.....	84
Figure 5-16 Remove an AP from Group.....	85
Figure 5-17 Allow AP to join group.....	85
Figure 5-18 Power Profile Window	87
Figure 5-19 Create Power Profile.....	88

How to Use This Manual

Figure 5-20 Create Power Control.....	88
Figure 6-1 Enterprise Authentication	90
Figure 6-2 SOHO Authentication	90
Figure 6-3 Authentication Security Type-Personal.....	91
Figure 6-4 Authentication Security Type-Enterprise	91
Figure 6-5 Create Captive Portal type WLAN	92
Figure 6-6 Enable Captive Portal Service	93
Figure 6-7 Select Your Login Method	93
Figure 6-8 Create Captive Portal Users.....	94
Figure 6-9 Create Access Code.....	95
Figure 6-10 Customize Your Splash Page	95
Figure 6-11 Log User Behavior	96
Figure 6-12 Wall Garden	96
Figure 6-13 Portal Allowlist	97
Figure 7-1 Tools in Dashboard	98
Figure 7-2 Troubleshooting Command	98
Figure 7-3 PMD	99
Figure 8-1 AP List - link to AP UI	100
Figure 8-2 AP UI	101
Figure 8-3 AP Interface	101
Figure 8-4 AP Network	102
Figure 8-5 MESH Topology	103
Figure 8-6 Configure Mesh Root	104
Figure 8-7 Configure Mesh Leaf.....	104
Figure 8-8 Configure Wireless Bridge	106
Figure 8-9 DHCP Server in AP group.....	106
Figure 8-10 DHCP Server	107
Figure 8-11 Source NAT	108
Figure 8-12 Destination NAT	108
Figure 8-13 Auto Neighbor AP.....	109
Figure 8-14 Static Neighbor AP	109
Figure 8-15 RF Environment	110
Figure 8-16 RF Scanning Data	111
Figure 8-17 Wireless Packet Capture	111
Figure 9-1 HTTP Login Page	113
Figure 9-2 Download Certificate from AP	114
Figure 9-3 Case A - Step 1	114
Figure 9-4 Case A - Step 2	115
Figure 9-5 Case A - Step 3	115
Figure 9-6 Case A - Step 4	116
Figure 9-7 Case A - Step 5	116
Figure 9-8 Case A - Step 6	117
Figure 9-9 Case B - Step 1	117
Figure 9-10 Case B - Step 2.....	118
Figure 9-11 Case B - Step 3.....	118
Figure 9-12 Case B - Step 4.....	119
Figure 9-13 Case B - Step 5.....	119
Figure 9-14 Case C - Step 1.....	120
Figure 9-15 Case C - Step 2.....	120
Figure 9-16 Case C - Step 3.....	121
Figure 9-17 Case C - Step 4.....	121
Figure 9-18 Case C - Step 5.....	122
Figure 9-19 Case C - Step 6.....	122
Figure 9-20 Case C - Step 7.....	123
Figure 9-21 Case C - Step 8.....	123
Figure 9-22 Case C - Step 9.....	124

1 How to Use This Manual

This manual describes all features supported by the Stellar AP and provides instructions and examples for configuring ALE series OmniAccess Stellar Access Point (AP). It is designed for network administrators who are responsible for configuring and maintaining the Wi-Fi network. It assumes the reader is familiar with Layer2 and Layer3 networks and 802.11 protocols and related technologies. The manual covers an introduction to the Stellar AP and configuration samples. The examples describe the general steps of setting up a Wi-Fi network based on several typical deployment scenarios. It is useful for those new to the ALE Access Point configuration and those already familiar with the software wanting to know more about certain functions.

Access Stellar AP Through the GUI

This manual is developed for the Stellar AP GUI (Wi-Fi Express mode). Each Stellar AP supports up to three simultaneous GUI connections. The GUI is accessible through a standard web browser from a remote management console or workstation. The GUI includes configuration wizards that guide you to change administrator password and complete basic WLAN configuration. In addition to the wizards, the GUI includes a Dashboard monitoring feature that provides visibility into your wireless network's performance and usage. This allows you to easily locate and diagnose WLAN issues. For details on the GUI Dashboard, see [Dashboard Overview](#).

Document Conventions

The following conventions are used throughout this manual to emphasize important concepts:



Note

It indicates helpful suggestions, pertinent information, and important things to remember.



CAUTION

It indicates a risk of damage to your hardware or loss of data or some incorrect or improper operation that should be avoided.

2 Configuration Sample

This chapter describes the general steps to configure the Stellar AP with respect to several deployment topologies. Follow the configuration steps in the guide to configure your Stellar AP. This chapter contains the following topics:

[AP Group without ALE OXO server](#)

[AP Group with ALE OXO server \(ZTP\)](#)

Scenario 1: AP Group Without ALE OXO server

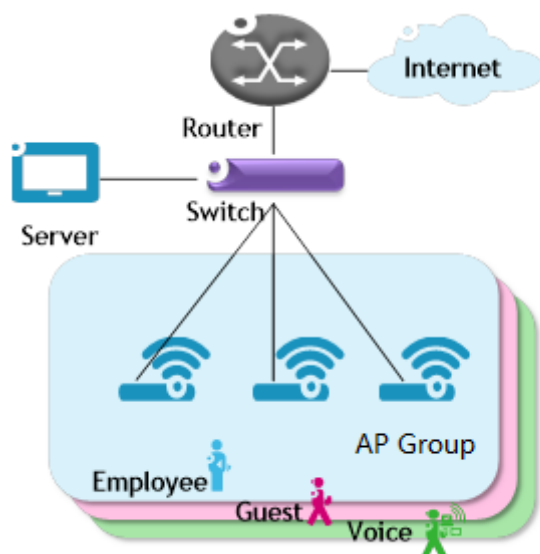


Figure 2-1 AP group without OXO

Following are the requirements for this scenario,

- ➔ There are three APs in this group. All APs connect to a standard PoE switch and the PoE switch connects to the core router. The core router provides DHCP server function to both APs and clients. The Primary Virtual Manager (PVM) in the group will be responsible for portal server, AP and client management and monitoring.
- ➔ All three APs broadcast three SSIDs: Employee, Guest and Voice.
- ➔ The Employee WLAN is used for company staff, by which both internal servers and the internet are accessible.

Configuration Sample

For security, this WLAN will use 802.1x authentication methods. Anyone who tries connecting to this WLAN will be requested to input the user name and password registered in an internal RADIUS server.

- ➔ The Guest WLAN is designed for guests and can access the internet ONLY. It uses a captive portal authentication and a portal page will pop up when browsing any website. Guest can access the Internet only after inputting the access code or user name and password provided by the network administrator. The splash page can be customized to the customer's style.
- ➔ The Voice WLAN is designed for VoIP application ONLY. It will authorize voice traffic to be highest priority in QoS profile so as to provide a stable voice connection. The SSID will be hidden and inaccessible to both internal and external networks.
- ➔ ALL APs usage and client connections are visible in the UI dashboard.

According to the topology, the clients are separate in three service VLANs (For example: VLAN 100, VLAN 200 and VLAN 300) while APs are in the management VLAN (default VLAN of the switch ports, for example: VLAN 1). The APs and clients will be assigned an IP address from the DHCP server via the router. The router is the default gateway for APs and clients. Following are the detailed configuration steps:

- ➔ **Step1:** Configure a PoE switch as follows:
 - 1) The ports used to connect the APs have their default (untagged) VLAN as the AP management VLAN;
 - 2) Add tagged VLANs to the ports for all WLANs that will be created on the APs;
 - 3) Tag (trunk) all of the user and AP-Management VLANs on the uplink between the switch and the router.
- ➔ **Step2:** Connect all APs to the PoE switch and all APs will obtain an IP address from the DHCP server. Login to the AP group, change the administrator password and initially create WLAN 'Employee' using the wizard. Refer to [Connect to pre-defined SSID and browse URL](#) and [Using the Initializing Wizard for details](#). Refer to [Modify Your WLAN](#) to set the mapping VLAN for WLAN 'Employee'.
- ➔ **Step3:** Create WLAN 'Guest' as per the steps in '[Create New WLAN](#)' and configure the captive portal authentication according to '[How to configure captive portal authentication](#)'.
- ➔ **Step4:** Create WLAN 'Voice' as per the steps in '[Create New WLAN](#)'.
- ➔ **Step5:** Configure ACLs according to [Access Control List](#) to restrict the access domain of each WLAN.
- ➔ **Step6:** Check AP, Client and monitor the performance in the dashboard. Refer to [Dashboard Overview](#) for detail.

Scenario 2: AP Group With ALE OXO Server (ZTP)

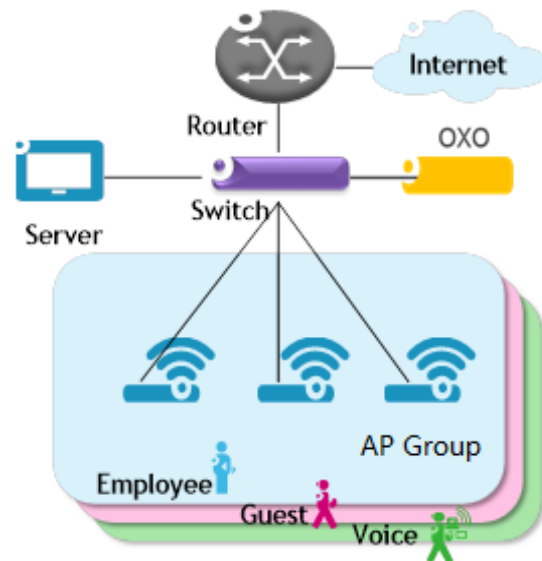


Figure 2-2 AP group with OXO

Following are the requirements for this scenario,

- ➔ There are three APs in this group. All APs connect to a standard PoE switch and the PoE switch connects to the core router and an ALE OXO server.
- ➔ All three APs broadcast three SSIDs: Employee, Guest, and Voice.
- ➔ The Employee WLAN is used for company staff, by which both internal servers and the internet are accessible.

For security, this WLAN will use 802.1x authentication methods. Anyone who tries connecting to this WLAN will be requested to input the user name and password registered in an internal RADIUS server.

- ➔ The Guest WLAN is designed for guests and has access to the internet ONLY. It uses a captive portal page authentication and a portal page will pop up when browsing any website. Guest can access the Internet only after inputting the access code or user name and password provided by the network administrator. The splash page of captive portal authentication can be customized to customer's style.
- ➔ The Voice WLAN is designed for VoIP application ONLY. It will authorize voice traffic to be highest priority in QoS profile so as to provide a stable voice connection. It will be hidden and inaccessible to both internal and external networks.
- ➔ ALL APs usage and client connections are visible in AP UI dashboard.

According to the topology, APs will be assigned an IP address from the OXO server. Router is the DHCP server for the clients. Following is the detailed configuration steps:

- ➔ **Step1:** Connect all APs to the PoE switch and all APs will obtain an IP address, download firmware (if necessary) and configuration file from the OXO server.

Configuration Sample

- ➔ **Step2:** The APs will reboot automatically to setup a group and allow configuration from the OXO server take effect, all three WLANs are created.
- ➔ **Step3:** Check AP, Client and monitor the performance in the dashboard. Refer to [Dashboard Overview](#) for detail.

3 Connecting AP Group via Web Browser

Prerequisites for Setting up and Accessing AP Group

- Connect all APs to switch and power up.
- Ensure that a DHCP server is present and accessible in the network. The AP group uses an external DHCP server for IP address management of the access points and the wireless clients.
- Ensure that a DNS server is available in the network, which helps to parse the web URL used to access the AP. (Refer to Note 3-1)
- It is recommended that your configuring terminal should have a compatible operating system and browser.

Recommended OS	Recommended Browser
• Window 10 • Window 11 • MAC OS X 10 • MAC OS X 11 • MAC OS X 12 • MAC OS X 13	• Google Chrome 102 and later • Mozilla Firefox 100 and later • Microsoft Edge 92 and later

After above prerequisites are met, proceed to: [Connect to pre-defined SSID and browse URL.](#)



Note 3-1: The process of connecting to a single AP through web is same as connecting to AP group.

Note 3-2: It is recommended to connect only one AP at a time to the network and complete the configuration, then plug in other APs one by one to synchronize the configurations.

Connect to Pre-defined SSID and Browse URL

The ALE WLAN solution is based on a cluster architecture. A maximum of 255 APs are supported in one AP cluster/group. All APs have the same cluster ID that uniquely defines the AP group and all APs have to be in the same VLAN because the communication between group members is based on multicast. The group will select the Primary Virtual Manager (PVM) and Secondary Virtual Manager (SVM) based on AP model and MAC address, more details refer to [PVM/SVM Election and AP Group Scalability](#). The PVM is responsible for the group management, such as configuration synchronization, usage data statistics, firmware upgrading, etc. and the SVM is the backup of the PVM. By default, the AP group will advertise the pre-defined SSID 'mywifi-xxxx' and you can connect to 'mywifi-xxxx' to browse the AP group GUI through <http://mywifi.al-enterprise.com:8080> to the initializing wizard. After you complete [Using the Initializing Wizard](#), the SSID 'mywifi-xxxx' will be deleted. ('xxxx' is the last two bytes of PVM's MAC address)



Note

Note 3-3: Besides the HTTP login method (port 8080), you can also login to the web manager using HTTPS protocol with the URL <https://mywifi.al-enterprise.com> , more details please refer to [Web management with HTTPS](#)

Note 3-4: If there is no DNS server in the network, you can connect to the AP group directly using the IP address of any AP in the group, accessing “<http://a.b.c.d:8080>”. (a.b.c.d is the AP’s IP address)

Note 3-5: If there is no DHCP server in the network, the AP will default to the 192.168.1.254 address. See [How to Configure the AP if there is no DHCP server](#).

Stellar AP1230 series, AP1311, AP1301, AP1351, AP1331, AP1411, AP1431 and AP1451 Access Points support dual uplink connection.

- AP1230 series, AP1311, AP1301, AP1351, AP1331, AP1411, AP1431 and AP1451 will establish a LACP (Linkagg) with upstream switch at boot up.
- AP1230 series supports LACP primarily to address 2GE throughput when connecting to access switches that are limited to 1GE.

AP1230 series, AP1311 and AP1301 support **PoE Redundancy** - AP will only accept PoE on one of the two uplinks for operation and block another. If the main source goes down, AP will go down first then the backup POE link will power up the access point.


AP1351, AP1331, AP1451 and AP1431 support dual uplink connection with **PoE Sharing** - AP will accept PoE from the two uplinks at the same time for operation. AP1351, AP1451 is class 7 and is supported only on switches that support IEEE802.3bt. To Support IEEE802.3bt, hardware should be compatible and also have appropriate PoE firmware (3.XX) should be loaded.

- OS6860N and last two ports of OS6360P48X supports IEEE802.3bt
- OS6860, OS9900 doesn’t support IEEE802.3bt.
- As of AOS 8.7.3, Platforms like OS6865, OS6560, OS6465 supports IEEE802.3bt only when it is enabled.

Using the Initializing Wizard

Initializing wizard page is loaded by connecting to the pre-defined SSID accessing the URL <http://mywifi.al-enterprise.com:8080>. Login with the Administrator account and the default password ‘admin’, illustrated in Figure 3-1. If you want to manage the AP group with HTTPS protocol, refer to [Web management with HTTPS](#).

Connecting AP Group via Web Browser

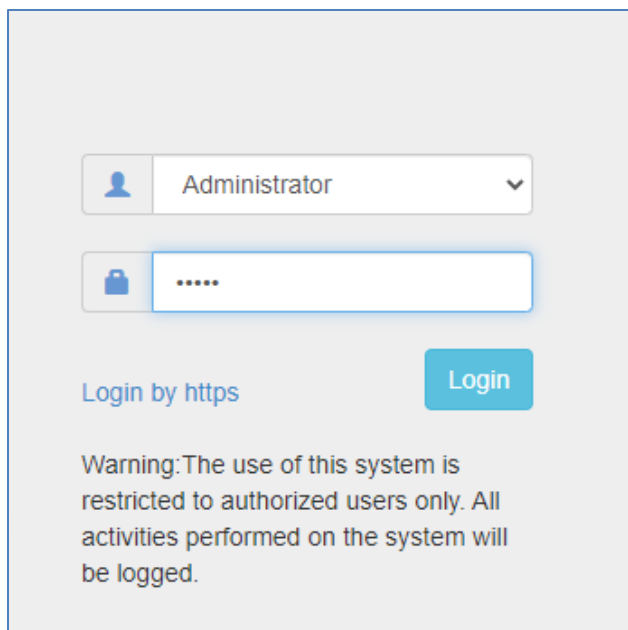


The login page features a light gray background. At the top, there is a user selection dropdown menu with a person icon and the text 'Administrator'. Below it is a password input field with a lock icon and masked characters. A blue 'Login' button is positioned to the right of the password field. Below the login fields, the text 'Login by https' is displayed. A warning message states: 'Warning: The use of this system is restricted to authorized users only. All activities performed on the system will be logged.'

Figure 3-1 AP Group Login Page

The following are the Initialization Wizards:


Step1: Welcome Page

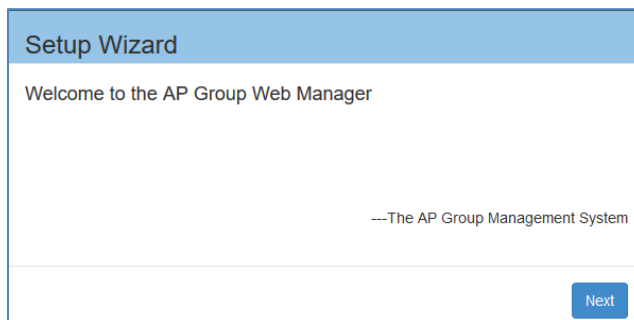

The welcome page has a blue header bar with the text 'Setup Wizard'. Below the header, the text 'Welcome to the AP Group Web Manager' is displayed. At the bottom right, there is a blue 'Next' button. A small text at the bottom center reads '---The AP Group Management System'.

Figure 3-2 Initialization Wizard-Welcome Page

Step2: Change your Administrator password.

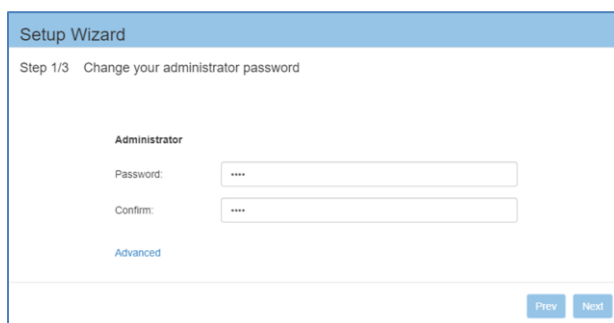

The password change page has a blue header bar with the text 'Setup Wizard'. Below the header, the text 'Step 1/3 Change your administrator password' is displayed. There are two input fields: 'Password:' and 'Confirm:', both masked with asterisks. Below these fields is a link labeled 'Advanced'. At the bottom right, there are 'Prev' and 'Next' buttons.

Figure 3-3 Initialization Wizard-Modify Administrator Password



Note 3-6: It is highly recommended and a best security practice to change the default passwords for the predefined login accounts.

Note

Note 3-7: For security the admin must change the CLI root, and support passwords before use. This is available under the [advanced](#) window, more can refer to [General Window](#) -> Account Management in main page.

Step3: Select your country code and time zone. (Only for -RW models)

Setup Wizard

Step 2/3 Choose your Country or Region

Country/Region: Albania - AL

Time Zone: (UTC-12:00)International-Date-Line-West

Prev Next

Figure 3-4 Initialization Wizard-Select country code and time zone

Step4: Create your own WLAN. You can click '[Create New WLAN](#)' for details.

Setup Wizard

Step 3/3 Create New WLAN

WLAN Name: mywifi-employee

Band: ☒ 2.4GHz ☒ 5GHz

Security Level: Personal

Key Management: Both(wpa2&wpa3)

PMF: Optional

Password Format: 8-63 chars

Password: *****

Confirm: *****

Prev Save

Figure 3-5 Initialization Wizard-Create New WLAN



Note 3-8: The VLAN assignment for the WLAN is not available in the initial wizard phase. You can modify the mapping VLAN value after the initial setup is completed, using the steps described in "[Modify your WLAN](#)" section which can be used to modify existing WLANs.

Note

Step5: Complete Confirmation Page

Connecting AP Group via Web Browser

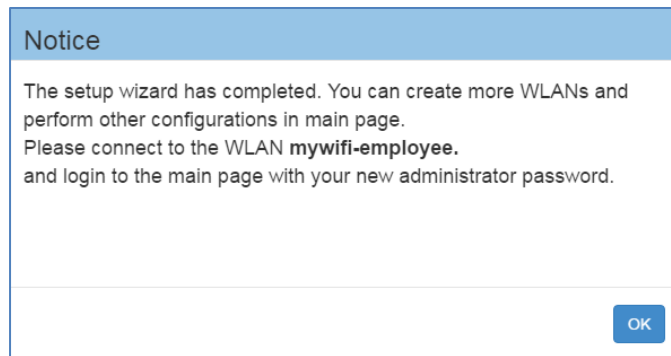


Figure 3-6 Initialization Wizard-Complete Notice



Note

Note 3-9: While configuring the Initialization Wizards, please make sure your configuring terminal is connected to the pre-defined WLAN 'mywifi-xxxx' to keep the communication operational between AP group (or AP) and web browser. If not, you may encounter the following prompt and fail to complete the wizard configuration correctly:



Note

Note 3-10: The pre-defined WLAN 'mywifi-xxxx' is deleted when the wizard is completed. For additional configuration through the wireless connection you need to connect to the new WLAN created in the wizard and then login to the web main page with your new administrator password.

Connecting to the AP Group via Web

When the initializing wizard has completed and new WLANs have been created, you can connect to each of the WLANs and browse the URL <http://mywifi.al-enterprise.com:8080> to manage the AP group.

Another way of connecting to the AP group web management system is through the AP group management IP address. For information on setting of the Management IP address refer to [AP Group Management](#).

The AP group web management system can be accessed through the wired network if the group management IP address is configured and is reachable.


PVM/SVM Election and AP Group Scalability

The APs with the same cluster ID will form a group and it will select the Primary Virtual Manager (PVM) and Secondary Virtual Manager (SVM) based on AP model and MAC address. The PVM election rules are as following:

1. PVM/SVM election priority:
AP1451>AP1351>AP1431/AP1331>AP1521>AP1320/AP1360>AP1511/AP1411>AP1311/AP1301>AP1301H>AP1220/AP1230/AP1251/AP1201>AP1101/AP1201H/AP1201L/AP1201HL>AP1311BG>AP1201BG
2. Among the APs with same priority, the one with highest MAC address will be selected as PVM, the second highest MAC address AP will be selected as SVM.
3. AP1101/AP1201H/AP1201L/AP1201HL as PVM in the cluster, it can scale to 32 APs.
4. AP1521/AP1511/AP1451/AP1431/AP1411/AP1351/AP1331/AP1320/AP1360/AP1311/AP1301/AP1301H/AP1220/AP1230/AP1251/AP1201/AP1201BG/AP1311BG as PVM in the cluster, it can scale to 255 APs.
5. The idea in general is to be able to have enough resiliency in the network design, so if there is a cluster size >64 always there is either (AP1220 series, AP1230 series, AP1251, AP1320 series or AP1360 series, AP1311, AP1301, AP1351, AP1451, AP1431, AP1411, AP1521, AP1511) to take up PVM/SVM role. Recommend in network segments of every 64 APs there are at least 4x APs of either AP1220 series, AP1230 series, AP1251, AP1320 series, AP1360 series, AP1311, AP1351, AP1451, AP1431, AP1411, AP1521, AP1511.
6. For resiliency deployment, to scale to 64 APs you will need at least 4 AP12XX (AP1220/AP1230/AP1251) or 4 AP13xx (AP1351, AP1320/AP1360/AP1311) or 4 AP14xx (AP1451/AP1431/AP1411) or 4 AP15xx (AP1521/AP1511) in the cluster.
7. For resiliency deployment, to scale even further for 255 APs you will need at least 16 AP12XX (AP1220/AP1230/AP1251) or 16 AP13XX (AP1351/AP1320/AP1360/AP1311) or 16 AP14XX (AP1451/AP1431/AP1411) or 16 AP15xx (AP1521/AP1511) in the cluster.
8. If AP1201 coexists with AP1220/AP1230/AP1251 in the same cluster, and AP1201 is selected as PVM by the system automatically, suggest to manually intervene and turn one of the AP1220/AP1230/AP1251 to be PVM for better management performance consideration. (See “Update to PVM” parameter in Chapter 4 - AP Window)
9. If a higher priority AP joins an existed AP group, it will take over the PVM role. For example, an AP1221 will become PVM after it joins an existed pure AP1101 group, and the old PVM will change to SVM or member in the AP group.

Example network design ...

Connecting AP Group via Web Browser

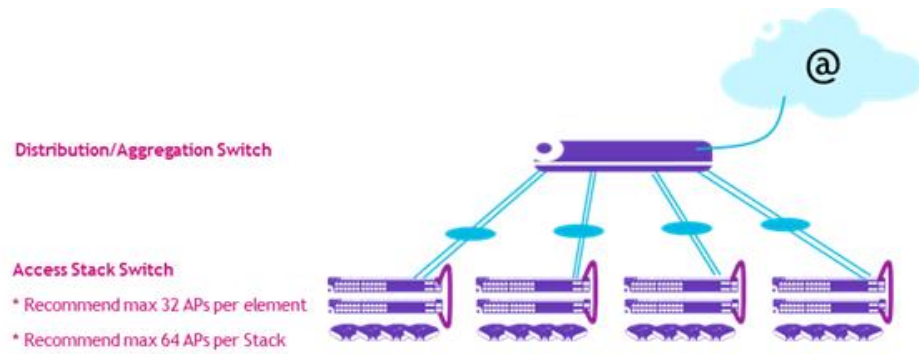

4 Introduction to the AP Group Web Management System

Dashboard Overview

The Stellar AP provides a visualized dashboard for AP and client monitoring and configuration. As illustrated in Figure 4-1 Dashboard Overview, the dashboard is split into sub-windows for [WLAN Window](#), [AP Window](#), [Client Window](#) and [Monitoring Window](#), [System Page](#), [Wireless Page](#) and [Access Page](#). You can briefly check the WLANs, APs or Clients in the dashboard or double click the framework of each window to see the details.



Figure 4-1 Dashboard Overview

WLAN Window

The WLAN configuration window is integrated with all WLAN related monitoring and operation tasks. There are two modes for the WLAN Window, Simplified Mode illustrated in Figure 4-2 and Advanced Mode illustrated in Figure 4-3. You can easily launch the Advanced Mode from Simplified Mode by clicking the WLAN Window Frame.

WLAN		Enable: 2	Disable: 0
WLAN Name	Status	Clients	
mywifi-employee	on	1	
mywifi-guest	on	2	
New			

Figure 4-2 WLAN Window-Simplified Mode



Note 4-1: The label below displays the number of enabled or disabled WLANs.

Note

WLAN			Enable: 0	Disable: 1
------	--	--	-----------	------------

Table 4-1: Key word specification in WLAN Window (Simplified Mode)

WLAN Name	Label or name of WLAN, which is composed by 0-9, a-z or other string.
Status	Indicates the WLAN state, on indicates that WLAN is in broadcast state, while off indicates WLAN is not in broadcast state.
Clients	The number of users connected to the WLAN.
New	Launch the WLAN creation window.

WLAN Configuration				
WLAN Name	Status	Security Level	Captive Portal	Operate
mywifi-1X	Enable	enterprise	No	wmm
mywifi-employee	Enable	personal	No	wmm
mywifi-guest	Enable	open	Yes	wmm
mywifi-portal	Enable	open	Yes	wmm
Create				

Figure 4-3 WLAN Window-Advanced Mode

Table 4-2 Key word specification in WLAN Configuration Window (Advanced Mode)

WLAN Name	Label or name of WLAN.
Status	Indicates the WLAN state,  indicates that WLAN is in broadcast state, while  indicates WLAN is not in broadcast state.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open.
Captive Portal	Indicates whether the WLAN is using captive portal authentication. Yes means the WLAN is configured with captive portal authentication, while No means the WLAN is without captive portal authentication.
Operate	Operation for the WLAN.  see Modify Your WLAN ,  see Delete Your WLAN ,  see Modify WLAN QoS .
	Link for Creating new WLAN, see Create New WLAN .

AP Window

AP Window is integrated with all APs and group related monitoring and configuration functions. Similar to the WLAN Window, there are two modes for AP Window, Simplified Mode illustrated in Figure 4-4 and Advanced Mode illustrated in Figure 4-5. You can easily launch the Advanced Mode from Simplified Mode by clicking the AP Window Frame.

AP Working: 2 Down:0 Joining:0		
	Primary Name	Status
	AP-00:E0	Working
	AP-00:F0	Working
		Clients
		2
		3

Figure 4-4 AP Window-Simplified Mode

Table 4-3 Key word specification in AP Window (Simplified Mode)

Primary Name	AP Mac address.
Status	Connection status of AP, there are three indication for AP status, they are Working, Down and Joining. See more in Note 4-2.
Clients	The total number of users currently connected to AP.



Note

Note 4-2: AP has three status indications when connecting to group, they are ‘working’ which indicates that AP has connected to the PVM successfully and is working normally, ‘Down’ indicates that AP is disconnected from the group, and ‘Joining’ indicates that AP is requesting to join the group but hasn’t completed yet. The Label in AP Window indicates the number of APs in each status.

AP Working:2 Down:0 Joining:0

Select an AP from the AP Configuration Window (Advanced Mode), you can learn the detailed information of the AP, see in Figure 4-5.

Introduction to the AP Group Web Management System

AP Configuration

Primary Name	IP	Firmware	Operate
PVC			
AP-11:10	192.168.20.107(AP) (M)	3.0.4.1025	 
SVC			
MEMBER			
Joining			
Pending			
Neighboring Group			
AP-2B:D0	192.168.20.176	3.0.5.5	
AP-E6:80	192.168.20.126	3.0.5.6	
AP-7E:20	192.168.20.59	3.0.4.1027	
AP-13:40	192.168.20.38	3.0.4.1027	

Detailed Information

AP Name: AP-11:10 [Edit](#)
MAC: 34:E7:0B:11:11:10
Location: [Edit](#)
Status: Working
Role in Group: PVC
Serial Number: 11111111
Model: OAW-AP1101
Firmware: 3.0.4.1025
Upgrade Time: Wed Aug 29 20:43:24 2018
Upgrade Flag: successfully

IP Mode: DHCP [Edit](#)
IP: 192.168.20.107
Netmask: 255.255.254.0
Default gateway: 192.168.21.254
DNS: 219.141.136.10
AP Mode: Express [Edit](#)

Reboot All AP

Clear All Configuration

Backup All Configuration

Restore All Configuration

Upgrade All Firmware

Connect To Cloud

Convert To Enterprise

Figure 4-5 AP Window-Advanced Mode

Table 4-4: Key word specification in AP Configuration Window (Advanced Mode)

Primary Name	Name of the AP.
IP	IP address of the AP.
Firmware	Firmware version of the AP.
Operate	There are three optional operations for the AP:  ,  and  .
PVM	Primary Virtual Manager in the AP group.
SVM	Secondary Virtual Manager in the AP group.
MEMBER	Other member APs in the group except PVM/SVM.
Joining	APs in joining state, needs to be authorized to join the group.
Pending	APs in pending state, needs to upgrade the software to join the group.
Neighboring Group	Neighboring AP groups with different group ID.
	Checking the detailed configuration on the AP.
	Upgrading firmware for the AP.
	Execute to reboot the AP.
Reboot All AP	Reboot all the APs in the group.
Clear All Configuration	Restore factory settings for all the APs in the group.

Introduction to the AP Group Web Management System

Backup All Configuration	Backup the configuration of the AP group.
Restore All Configuration	Restore the configuration for the AP group.
Upgrade All Firmware	Update the firmware for all the APs in the group.
Connect To Cloud	• Contact to Cloud - Enable/Disable contacting to OmniVista Cirrus periodically. If AP in the cluster are authorized to register OV Cirrus, the AP will reboot the register to OV Cirrus, then user can monitor and manage the AP from OV Cirrus. By default, it is enabled. • Management Server - OV Cirrus server address to which AP send the register request. User can modify the management server address for the purpose of using other OV Cirrus server than the default one.
Convert To Enterprise	Convert all the APs in the cluster to be managed through OmniVista On-Premise. Once configured, AP will reboot and register to On-Premise OV server. • Management Server - OV On-Premise server address to which AP register. DHCP Option - Obtain the On-Premise OV server address through DHCP option 138 or option 43 during AP booting up state. Static - Configure a static On-Premise OV server to which AP will register after rebooting.
Detailed Information	Detailed information for the selected AP.
AP Name	Name of the AP.
Location	Location of the AP.
Status	Connection status of AP, there are three indications for AP status, they are Working, Down and Joining. See more in Note 4-2.
Kick Off	Remove the AP from the group. When an AP is removed from the group, it changes into Joining state until the administrator permits it to join the group again. See more in Allow an AP to Join the Group .
Role in Group	AP role in the group, including PVM, SVM and Member.
Update to PVM	Upgrade the member or SVM to be the PVM of the AP group.
Serial Number	Serial Number of the AP selected.
Model	Product Model of the AP selected.
Upgrade Time	Last firmware upgrade time.
Upgrade Flag	Flag of last time firmware upgrade. Success means the firmware was upgraded successfully on the Upgrade Time, Failed means the firmware wasn't upgraded successfully on the Upgrade Time.
IP Mode	The way by which the AP attains its IP address, dynamically assigned from DHCP server or static IP configured manually. Only IPv4 static address can be configured for AP.
IP	IPv4/IPv6 address of the AP selected.
Netmask	Netmask of the IPv4 address of the AP selected.
Default Gateway	Default Gateway of the AP selected.
DNS	DNS server in the network.
AP Mode	• Express - AP working in cluster mode. • Enterprise - Change the AP to be managed and configured through OmniVista On-Premise edition. You need to specify the OmniVista server address when changing to Enterprise mode. DHCP Option - Obtain the On-Premise OV server address through DHCP option 138 or option 43 during AP booting up state. Static - Configure a static On-Premise OV server to which AP will register after rebooting.

Client Window

Client Window displays all the connected clients. Similar to the WLAN Window, there are two modes for Client Window, Simplified Mode illustrated in Figure 4-6 and Advanced Mode illustrated in

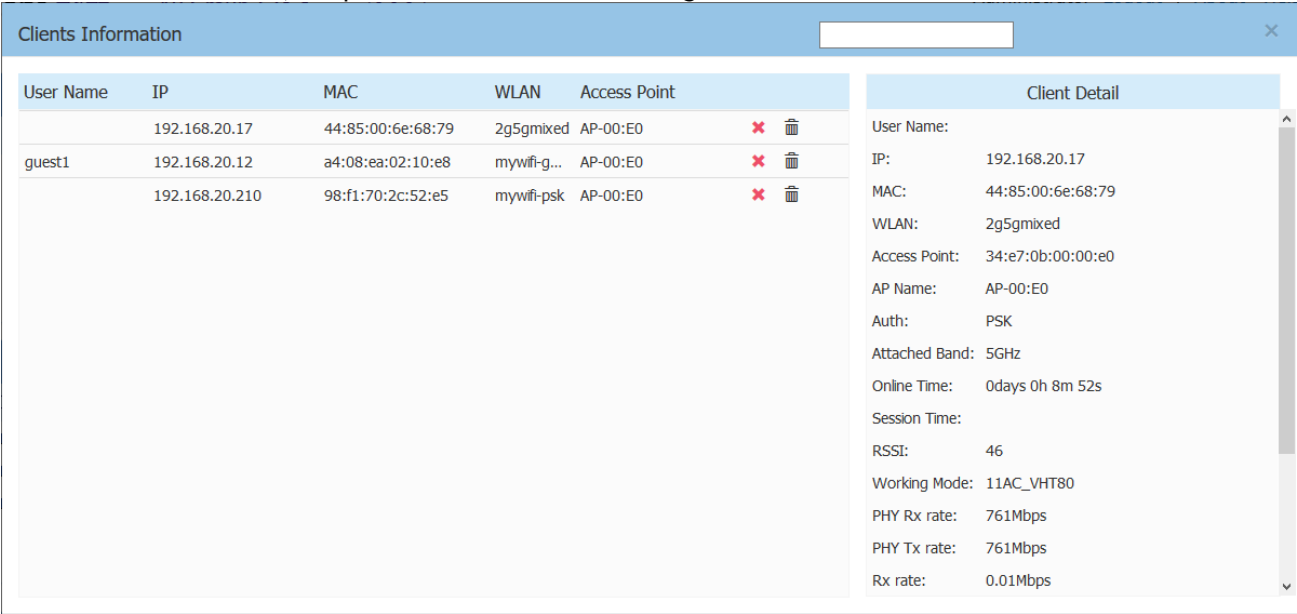


Figure 4-7. You can launch the Advanced Mode from Simplified Mode by clicking the Client Window Frame.

Clients		For Group: mywifi_in_office			Total:3
Name	IP	MAC	WLAN	Auth	
guest2	192.168.20.80	d0:7a:b5:74:da:34	mywifi-guest	PORTAL	
guest1	192.168.20.1	00:26:c7:63:0d:16	mywifi-guest	PORTAL	
	192.168.20.102	44:85:00:6e:68:79	mywifi-empl...	PSK	

Figure 4-6 Clients Window-Simplified Mode

Table 4-5: Key word specification in Client Window (Simplified Mode)

For Group: mywifi_in_office	Clients connected to the group.
For WLAN: mywifi-employee	Clients connected to the specified WLAN in the group.
For AP: 34:e7:0b:00:00:e0	Clients connected to the specified AP in the group.
Name	User name or host name of the client. For 802.1X or captive portal authentication through username & password, username is populated in the field. For client authentication without username (Open/PSK/Captive portal through terms and conditions check only), hostname is populated in the field. Stellar AP obtains client hostname from client DHCP packets. For some cases of client DHCP packets not being carried, hostname cannot be obtained, and the Name filed could be empty.
IPv4	IPv4 address of the client.
IPv6	IPv6 address of the client.
MAC	MAC address of the client. When the MLO client connects to the MLO WLAN, the MLD address of the MLO client is displayed in the client information.

WLAN	WLAN to which the client connected.
Auth	Authentication type: Open, Portal (Captive portal), PSK (Personal), 802.1X (Enterprise).

The screenshot shows the 'Clients Information' window in Advanced Mode. It features a search bar and a table of client information. The table has columns for User Name, IP, MAC, WLAN, and Access Point. Three clients are listed, with the first one named 'guest1'. To the right of the table is a 'Client Detail' panel showing various attributes for the selected client.

User Name	IP	MAC	WLAN	Access Point	
	192.168.20.17	44:85:00:6e:68:79	2g5gmixed	AP-00:E0	
guest1	192.168.20.12	a4:08:ea:02:10:e8	mywifi-g...	AP-00:E0	
	192.168.20.210	98:f1:70:2c:52:e5	mywifi-psk	AP-00:E0	

Client Detail	
User Name:	
IP:	192.168.20.17
MAC:	44:85:00:6e:68:79
WLAN:	2g5gmixed
Access Point:	34:e7:0b:00:00:e0
AP Name:	AP-00:E0
Auth:	PSK
Attached Band:	5GHz
Online Time:	0days 0h 8m 52s
Session Time:	
RSSI:	46
Working Mode:	11AC_VHT80
PHY Rx rate:	761Mbps
PHY Tx rate:	761Mbps
Rx rate:	0.01Mbps

Figure 4-7 Clients Window-Advanced Mode

Table 4-6: Key word specification in Client Information Window (Advanced Mode)

User Name	User Name of the client.
IP	IPv4 address of the client.
MAC	MAC address of the client.
WLAN	WLAN to which the client connected.
Access Point	Access point to which the client connected.
	Force the client to disconnect the wireless network.
	Remove the client from the wireless network and put it within the blocklist. If removed, the client can be displayed and operated in the Blocklist window .
AP Name	Name of access point that the client connected.
Auth	Authentication type: Open, Portal (Captive Portal), PSK (Personal), 802.1X (Enterprise).
Attached Band	The radio band through which the client attaching to AP, 2.4GHz or 5GHz or 6GHz. For MLO client, the attached band will show only the prior one(6GHz>5GHz>2.4GHz).
Online Time	Time when the client attached to the wireless network.
Session Time	Time when the client has passed the captive portal authentication, only for captive portal clients.
RSSI	Received Signal Strength Indication of the client, Value 0-99.
Working Mode	Wireless working mode of the client.
PHY Rx rate	Physical receiving rate of the client.
PHY Tx rate	Physical sending rate of the client.
Rx rate	Packet receiving rate of the client.
Tx rate	Packet sending rate of the client.
Download	Total download data size since the client connected to the wireless network.
Upload	Total upload data size since the client connected to the wireless network.
Device type	Device type of the client.
OS Type	Operating system type of the client.

Rx Error	The number of error packets received by the client. Interference is the most major cause of packet error. Another cause of packet error is the mismatch of broadcast power levels (Tx Power). If an AP and client device are communicating at much different broadcast strengths, then this can cause packet error.
Tx Retry	The number of retry packets sent by the client. The Retry indicates packets that had to be re-sent because they were corrupted upon arriving at the proper destination.
Roaming History	Showing roaming history between SSID/AP/Band for the client, total 32 roaming records can be displayed and will be separated by connection sessions. • Connection Session - A session represent a period which starting from associating to the wireless network and ending by disassociating. Roaming records are distributed within sessions. • The connection sessions are arranged based to time sequence. The latest session will be positioned on the top of roaming history display. • The Offline status represent the connection session has ended. The Online status represent an ongoing session and the client is not disassociated.

Monitoring Window

The monitoring window displays the utilization of the wireless network, including statistics of traffic throughput and client working state.

The monitoring window can monitor from four different levels: group level, WLAN level, AP level and client level, illustrated in Figure 4-8, Figure 4-9, Figure 4-10 and Figure 4-11.

The group monitoring is the default display, you can select to monitor certain WLAN/AP/client from the WLAN Window/AP Window/Client Window on left side of the [Dashboard](#).

The monitoring window is automatically refreshed every 30 seconds by default, and the data polling cycle can be set to 30s /60s /120s.

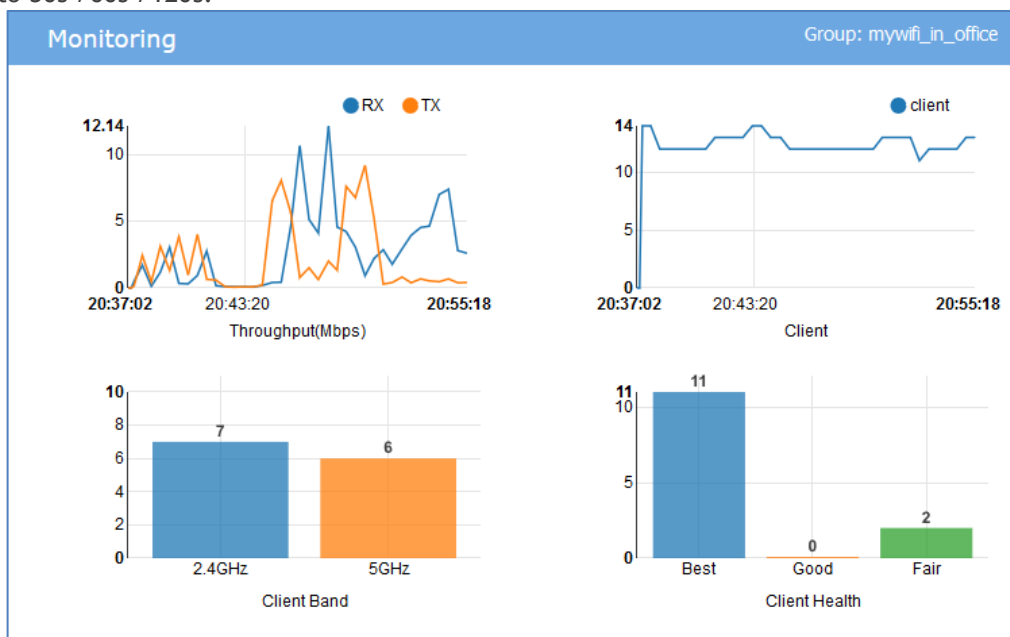


Figure 4-8 Monitoring Window - AP Group

Table 4-7: Key word specification in AP group Monitoring Window

RX	Total receiving rate of the AP group.
TX	Total sending rate of the AP group.
Client	The number of clients connected to the AP group.
Client Band	The working band distribution of clients connected to the AP group, including number of clients working on 2.4GHz band and number of clients working on 5GHz band, and number of clients working on 6GHz if applicable.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: - Best— Number of clients whose signal strength is more than 30. - Good— Number of clients whose signal strength is between 15 ~30. - Fair—Number of clients whose signal strength is less than 15.

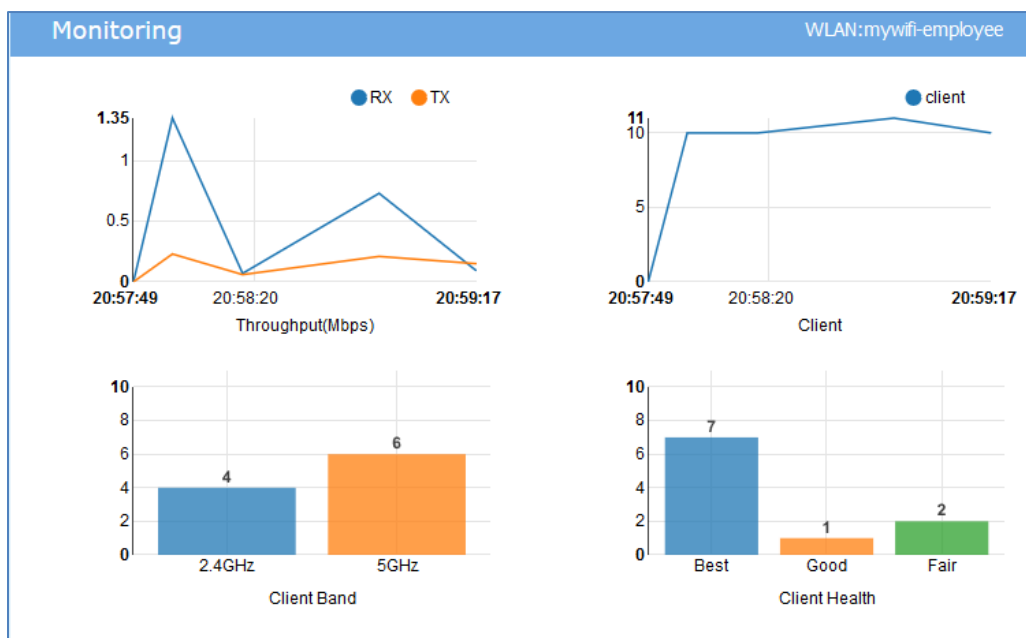


Figure 4-9 Monitoring Window - WLAN

Table 4-8: Key word specification in WLAN Monitoring Window

RX	Total receiving rate of the WLAN.
TX	Total sending rate of the WLAN.
Client	The number of clients connected to the WLAN.
Client Band	The working band distribution of clients connected to the WLAN, including number of clients working on 2.4GHz band and number of clients working on 5GHz band, and number of clients working on 6GHz if applicable.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: - Best— Number of clients which signal strength is more than 30. - Good— Number of clients which signal strength is between 15 ~30. - Fair—Number of clients which signal strength is less than 15.

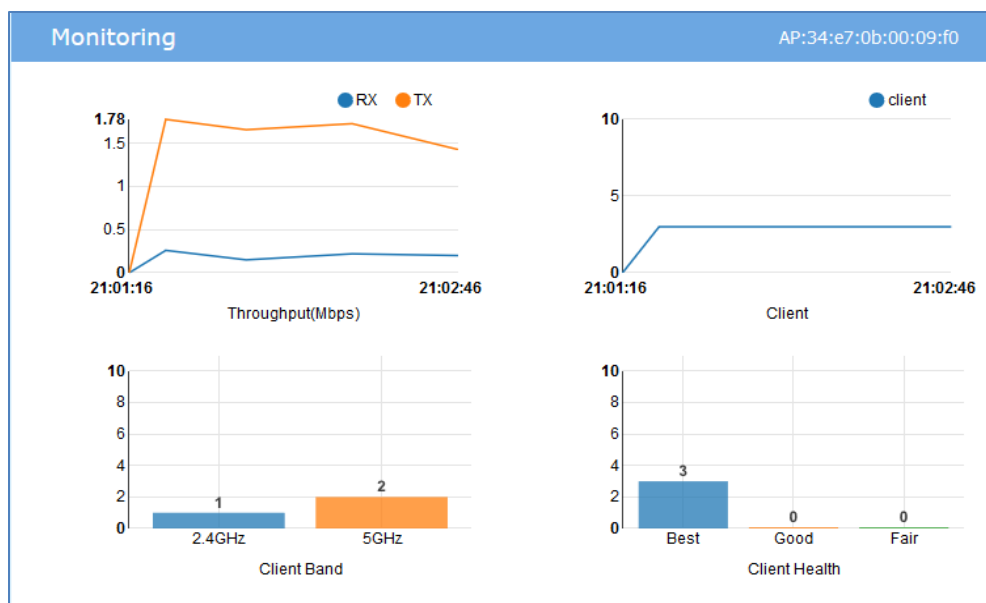


Table 4-9: Key word specification in AP monitoring Window

RX	Total receiving rate of the AP.
TX	Total sending rate of the AP.
Client	The number of clients connected to the AP.
Client Band	The working band distribution of clients connected to the AP, including number of clients working on 2.4GHz band and number of clients working on 5GHz band, and number of clients working on 6GHz if applicable.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: - Best— Number of clients which signal strength is more than 30. - Good— Number of clients which signal strength is between 15 ~30. - Fair—Number of clients which signal strength is less than 15.

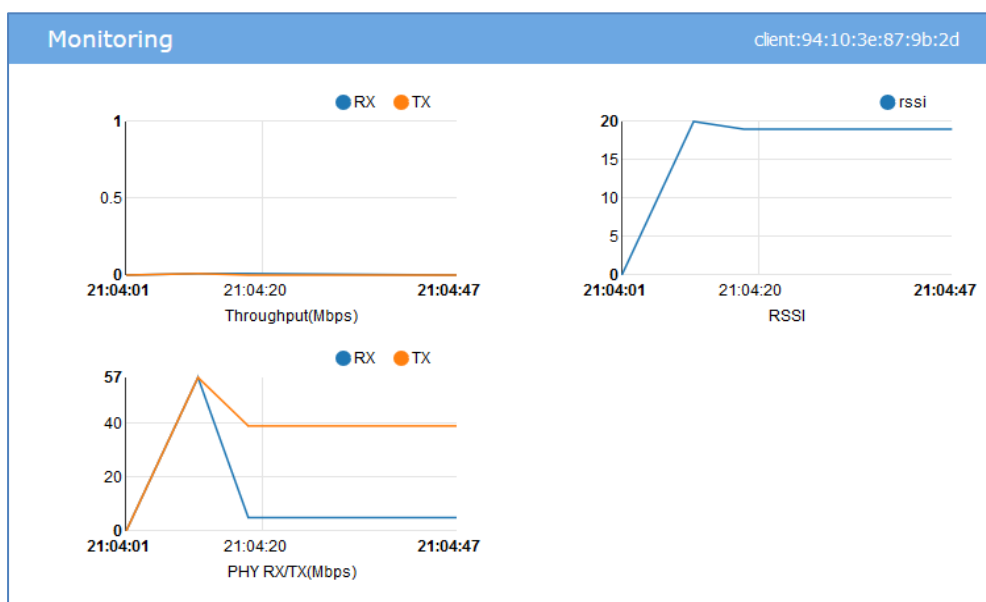


Table 4-10: Key word specification in Client Monitoring Window

RX	Receiving rate of the client.
TX	Sending rate of the client.
RSSI	Received Signal Strength Indication of the client
PHY RX	Physical receiving rate of the client.
PHY TX	Physical sending rate of the client.



Note 4-3: The data shown in the monitoring window is collected and displayed while the window is open. The data is not stored and no historical view of the data is available.

Note

System Page

The System page focus on the basic settings of the AP group, including: AP group attributes, system management accounts, system time and syslog.

It is divided into three windows in System Page: General window, System Time window and Syslog window, illustrated in Figure 4-12 System page.

Figure 4-12 System page

General Window

General Window displays the basic information of the wireless system. There are two modes for General Window, Simplified Mode illustrated in Figure 4-13 General Window - Simplified Mode and Advanced Mode illustrated in Figure 4-14 General Configuration Window -Advanced Mode. You can launch the Advanced Mode from Simplified Mode by clicking the General Window Frame.

Introduction to the AP Group Web Management System

General	
Group ID:	8818
Group Name:	mywifi_in_office
Group Location:	Paris
Group Management IP:	192.168.20.162
Group Management Netmask:	255.225.255.0
User - Viewer:	Enable
User - GuestOperator:	Enable

Figure 4-13 General Window - Simplified Mode

The General Configuration window includes two tabs: **Group Info Management** and **Account management**, illustrated in Figure 4-14 .

Group Info Management

Group Info Management contains the basic information of the AP group, you can edit it with your own group settings to identify a private Wi-Fi network.

General Configuration

Group Info Management

Account Management

Certificate Management

Group Name:

mywifi-office

(1-25 chars)

Location:

Paris

(1-32 chars)

Group Management IP:

192.168.24.172

Group Management Netmask:

255.255.255.0

Group Management IPv6:

::

Group ID:

8848

(1-9999)

Cancel

Save

Cancel

Save

Figure 4-14 General Configuration Window -Advanced Mode

Table 4-11: Key word specification in Group Info Management Tab

Group Name	Name of the AP group.
Location	Location of the AP group.
Group Management IP	A virtual IP address for AP group management, default is 10.0.0.1, see more in Note 4-4.
Group Management Netmask	Netmask of Group Management IP.
Group Management IPv6	A virtual IPv6 address for AP group management.

Group ID	Identification of the AP group, default is 100.
MQTT Compatibility	Enable to allow AP with lower version firmware (AWOS4.0.0 and before) to join. The lower version firmware is low-level security on MQTT. By default, it is not allowed AWOS4.0.0 and before version AP to join.
Downlink Port PSE	Enable/Disable PSE POE of AP1301H and AP1360 in the cluster



Note

Note 4-4: AP of a group usually obtains its IP address dynamically from a DHCP server, and it is difficult to keep the same assigned IP address for the AP. So managing the AP group by the AP's dynamic IP address can be difficult. The Group Management IP (GMIP) is a static IP address configured for the AP group web management, and you can manage the AP group via accessing the URL: <http://GMIP:8080> by wired or wireless. The GMIP is configured on the PVM of the AP group, and you have to make sure the GMIP on the PVM is routable from your configuring terminal (browser). A recommended method is to choose an idle IP address from the AP group domain to configure as a GMIP.

Account Management

There are three accounts can login to the Web GUI with different privileges: Administrator, Viewer, and GuestOperator. Administrator account allows configuring and viewing the whole system, Viewer account allows checking configuration and monitoring of WLAN operations, while GuestOperator ONLY has the privilege to edit the guest portal users. Each account can be logged in at the same time. By default, only the Administrator account is enabled; Viewer and GuestOperator are disabled.

In the Account Management tab, you can enable/disable the Viewer and GuestOperator account, change the password for Administrator, Viewer and GuestOperator, illustrated in Figure 4-15.

General Configuration

Group Info Management

Account Management

Administrator

Password:

0-9a-zA-Z_

(4-16 chars)

Confirm:

Viewer

Enable

Disable

Password:

(4-16 chars)

Confirm:

GuestOperator

Enable

Disable

Password:

(4-16 chars)

Confirm:

Tip: In order to ensure user security, please set the different password!

Cancel

Save

Stellar AP User Guide
ALCATEL-LUCENT ENTERPRISE

32

Figure 4-15 Account Management Tab

There are security methods to protect AP group management web UI from unsecure usage:

The screenshot shows the 'General Configuration' window with the 'Account Management' tab selected. Under the 'Account Lockout' section, there are four settings: 'Lockout Threshold' set to 3 (with a note '(2-5 invalid logon attempts)'), 'Lockout Duration' set to 1 (with a note '(1-15 minutes)'), 'Inactivity Time' set to 30 (with a note '(5-60 minutes)'), and 'Warning Banner' with a text area containing 'The use of this system is restricted to authorized users only. All activities performed on the system will be logged.' (with a note '(0-128 chars)'). At the bottom right of the settings are 'Cancel' and 'Save' buttons.

Figure 4-16 Account Lockout

Account Lockout Threshold - Specify how many times a user must fail against a valid account before the user is denied login. By default, the lockout threshold is 3 times of invalid login attempts.

Account Lockout Duration - Specify how long will the user be denied from login after exceeding invalid attempts. Be default, the lockout duration is 1 minute.

Inactivity Time - Specify the inactivity time for automatic lock due to no operation.

Warning Banner - Warning banners are brief messages that are used to inform users of policies and legislation regarding the use of Stellar AP group web management system. User can customize the content for Warning Banner on demand.

There are two accounts can login to the Stellar AP command line interface with different privileges: support and root. Administrator can change the login password for those command line accounts. The root password is a string held by the customer only and is used to generate real root access credential by AP.

Notice: For security the admin should change the CLI root, and support passwords before use.

The screenshot shows the 'General Configuration' window with the 'Account Management' tab selected. It displays two sections for password configuration. The 'Support Account' section has 'Password' and 'Confirm' fields, with a note '(4-16 chars)' and a 'Save' button. The 'Root Account' section also has 'Password' and 'Confirm' fields, with a note '(4-16 chars)' and a 'Save' button. Both sections have 'Cancel' buttons. There are also 'Cancel' and 'Save' buttons at the top of the configuration area.

Figure 4-17 Command line Account

Certificate Management

AP support 3 types of build-in certificates, user can customize their own certificate on demand:

- (1) Internal Web Server - The certificate is utilized to setup the secure connection between web browser and AP web server for https management. By default, there is a build-in CA certificate generated by ALE with the domain ‘mywifi.al-enterprise.com’. User can use open SSL to generate his/her own CA certificate and replace the default one (User needs to use domain ‘mywifi.al-enterprise.com’ for your own certificate because the login URL cannot be changed).
- (2) Internal Portal Server - The certificate is utilized to setup the secure connection between captive portal page and the AP web server for protecting the user login credentials being stolen. User can define its own captive login URL and replace the certificate accordingly.
- (3) External Portal Server - The certificate is utilized to setup the secure connection between captive portal page and the AP web server for protecting the user login credentials being stolen. User can define its own captive login URL and replace the certificate accordingly.
- (4) Syslog Server - The certificate is utilized to setup the secure connection between AP and syslog server. User can define his/her own certificate for syslog over TLS accordingly.
- (5) Radsec - The certificate is utilized to setup the secure connection between AP and Radius server. User can define his/her own certificate for Radsec accordingly.

General Configuration

Group Info Management

Account Management

Certificate Management

Certificate

Name:

(4-20 chars)

Certificate Type:

Internal Web Server(Domain)

Certificate File:

Choose File

No file chosen

Password:

0-9a-zA-Z_

(4-16 chars)

Confirm:

Certificate Format:

PEM

Cancel

Add

Certificate List

Name	Certificate	Type	Format	Status	Operate
------	-------------	------	--------	--------	---------

Figure 4-18 Certificate Management Tab

Service Management

Stellar AP support Layer 3 IPv6 traffic forwarding between clients and other network elements if the IPv6 Service is enabled. By default, it is disabled.

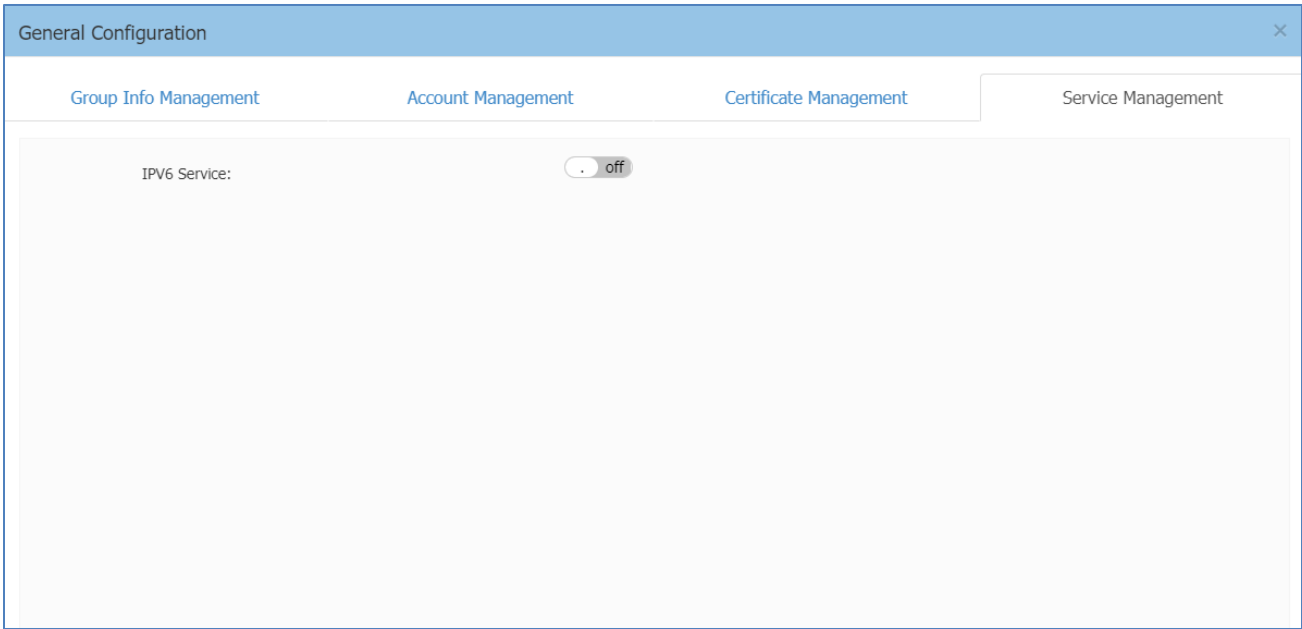


Figure 4-19 Service Management Tab

System Time Window

It is important to ensure the system time is correct, this is because proper communication between network elements and syslog for troubleshooting are based on the correct time.

NTP (RFC 1305 - Network Time Protocol) is a networking protocol for time synchronization between the elements across the network. If you don't have a private NTP server in your network, it is suggested to add your favorite NTP server and prioritize it to the top of the NTP Server List, or use the default NTP servers in the system, illustrated in Figure 4-20 System Time.

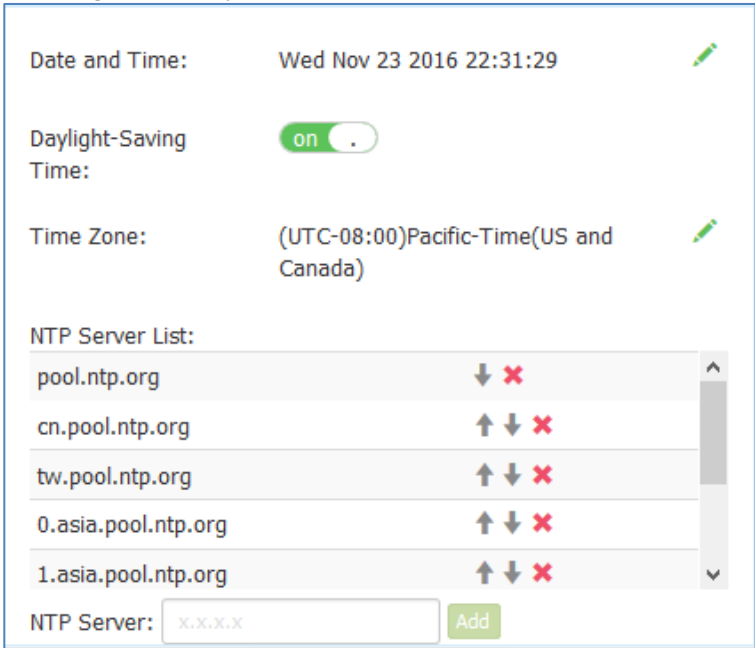


Figure 4-20 System Time Window

If configured, APs in the group synchronize the time with NTP sever in 15-minute intervals.

You can also specify the **Time Zone** and daylight-saving time of the AP group to coordinate with the local time. The daylight-saving time is automatically enabled on supporting time zone.



Note

Note 4-5: In order to ensure time synchronization, it is recommended to check the reachability before adding an NTP server. If the NTP server is not configured or is unreachable, an AP reboot may lead to variation in time.

Syslog & SNMP Window

Syslog is a standard for message logging. Syslog is used for system management and security auditing as well as general informational, analysis, and debugging messages.

APs in group generate logs following the standard of Syslog, you can view logs and configure corresponding attributes in the Syslog Window.

Upper part of the Syslog Window displays **error** (and lower, see in Note 4-5) level Syslog generated by APs in the group.

Title is the content of the log message.

Level is the severity of the log message.

Source is the generator's IP address of the log message.

When you move the mouse cursor to certain row of log message, the generating time of the log displays, illustrated in Figure 4-21 Syslog Window.

Syslog

Title	Level	Source
Device IP conflicts with other hosts IP	err	192.168.50.216
Device IP conflicts with other		Tue Aug 23 16:19:21 2016 68.50.216

Log Level:

Notice

Save

Log Remote:

off

192.168.100.1

Run

Log File:

wanglili

Download

Figure 4-21 Syslog Window

Log Level: Setting of Syslog message severity. If certain level is specified, the AP group will generate Syslog messages including all lower levels. That is, if Syslog messages are separated by individual severity,

a Warning level entry will also be included in Notice, Info and Debug processing. Notice is the default level of Syslog setting, and the system generates logs including levels of Notice, Warning, Error, Critical, Alert and Emergency. User can specify separate log level for different facilities (System, Security, Wireless, Network, User):

- AP Debug - Detailed log about the AP device
- System - Log about AP configuration and system status
- Security - Log about network security
- Wireless - Log about wireless RF
- Network - Log about network change
- User - Log about client

Log Remote: Setting of remote log server. If configured and enabled, besides storage in local file, Syslog messages of all APs in group can be sent to and stored in the server once generated. User can enable TLS to setup secure connection between AP and syslog server.

Log File: Download the log file on a selected AP in the group to your configuring machine. Syslog messages are stored in a local file when generated. **For one AP, up to 1MB size of syslog messages can be saved in the local log file. The log file is FIFO, new syslog messages will replace the old ones if the size exceeds 1MB.**



Note

Note 4-5: Syslog is divided into eight levels, and lowest level 0 is Emergency severity while highest level 7 is Debug severity. Definition of Syslog severity as follow:

Level Value	Severity	Keyword	Description
0	Emergency	emerg	System is unusable
1	Alert	alert	Should be corrected immediately
2	Critical	crit	Critical conditions
3	Error	err	Error conditions
4	Warning	warning	May indicate that an error will occur if action is not taken
5	Notice	notice	Events that are unusual, but not error conditions
6	Informational	info	Normal operational messages that require no action
7	Debug	debug	Information useful to developers for debugging

Figure 4-22 SNMP Window

With SNMP user can monitor AP status in the group through traditional network management platform.

- SNMP Agent - Enable/Disable the SNMP agent on AP. Network management platform can fetch information from AP through SNMP protocol.

- SNMP Trap - Enable/Disable AP to send trap to network management platform.
- Version - SNMP version, SNMPv2c or SNMPv3. For SNMPv3, admin needs to specify the username and passphrase for communication between AP and management platform. For Stellar AP, the SNMPv3 authentication mechanism is fixed to sha algorithm, privacy mechanism is fixed to aes128.
- Community - Applicable for SNMPv2c, the credential used to communicate between AP and network management platform.
- Trap Server - Network management platform to which AP send SNMP traps.
- Trap List - Specify the trap items needs to be sent to network management platform.

Wireless Page

The Wireless page focuses on advanced wireless functions, including three windows: RF (Radio Frequency), Wireless Intrusion Detection System/Wireless Intrusion Prevention System (wIDS/wIPS), and wireless performance optimization, illustrated in Figure 4-23 Wireless Page.

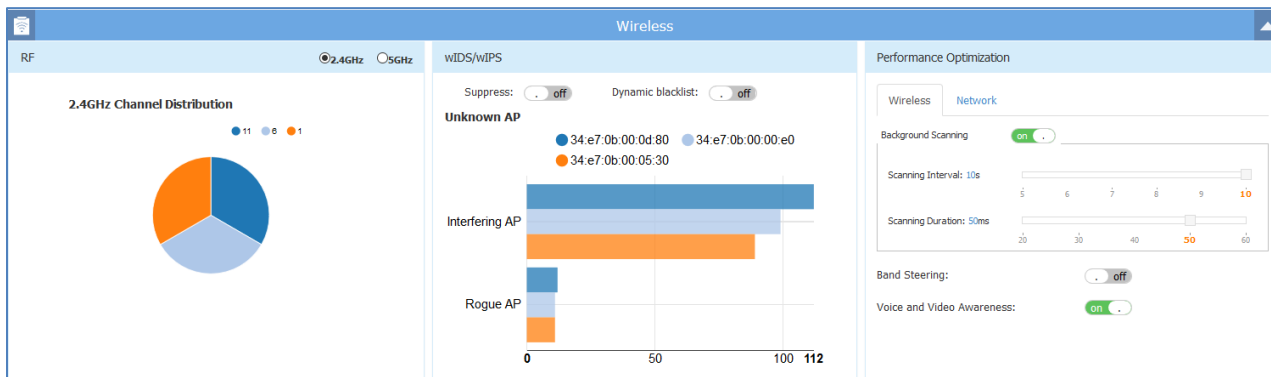


Figure 4-23 Wireless Page

RF Window

Radio Frequency (RF) window is for monitoring the wireless utilization and configuring wireless attributes like channel and transmitting power.

There are three modes for RF Window, Simplified Mode illustrated in Figure 4-24 RF-2.4GHz and Advanced Mode illustrated in Figure 4-26. You can launch the Advanced Mode from Simplified Mode by clicking the RF Window Frame.

Panel of RF displays the monitoring information of channel distribution, can be selected on 2.4GHz band or 5GHz band or 6GHz (if applicable). Channels are separated by different colors, when you move the mouse cursor to the colored section of the pie chart, it displays the clients connected to the AP group through 2.4GHz band or 5GHz band or 6GHz (if applicable), illustrated in Figure 4-24 RF-2.4GHz and Figure 4-25 RF-5GHz.

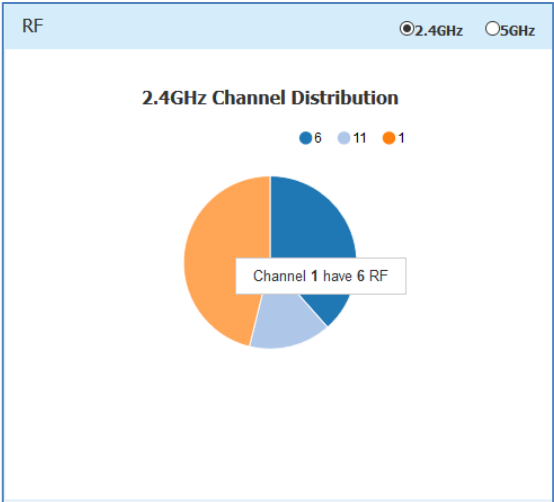


Figure 4-24 RF-2.4GHz

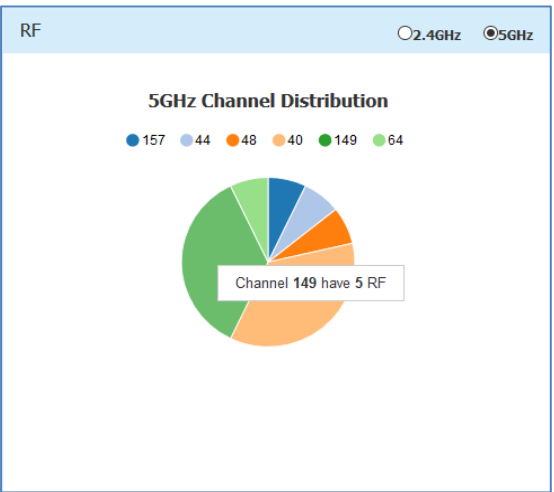


Figure 4-25 RF-5GHz

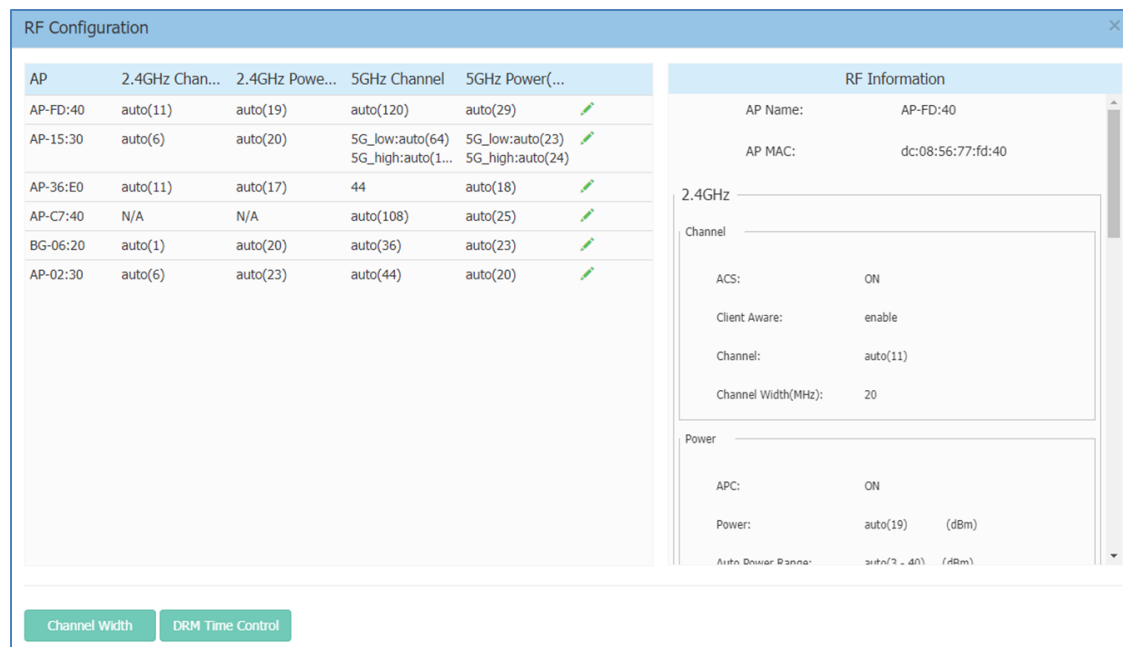


Figure 4-26 RF Configuration Window

The left side of the RF Configuration window displays the list of working channels and transmitting power of all APs in the group. When you pick an AP from the list, its detailed RF information is displayed on the right side of the window, illustrated Figure 4-26. The global configuration can be used to change channel width for all APs in the cluster for efficiency or you can change the channel width for specific AP by individually editing it. The latter configuration will take effect if both global setting and specific AP configuration both exist.

You can turn OFF specific wireless radios for APs in the cluster to reduce the radio emissions or for other purpose with Radio ON/OFF button.

For AP1222, AP1232, AP1322, AP1362 with external antenna deployment, you can specify the gain of the antenna which you want to use (Note: please subtract cable loss from the gain). AP will coordinate and comply with local law on signal transmitting.

For Wi-Fi 6E AP1411, it supports Dual-radio Tri-band 2.4GHz, 5GHz and 6GHz (dual concurrent). AP1411 radios can be configured in three working modes and user can specify the according to deployment needs:

- 2.4GHz + 5GHz (default)
- 2.4GHz + 6GHz
- 5GHz + 6GHz

By default, the working channel and transmitting power are automatically managed by Radio Dynamic Adjustment™ (RDA) technology. You can specify the channels list/power range applicable for auto selection, which can reduce the risk of low power transmitting or DFS channel conflict. If you want to set the channel and power values for an AP manually, you need to disable the ACS/APC function on the AP, illustrated in Figure 4-27.

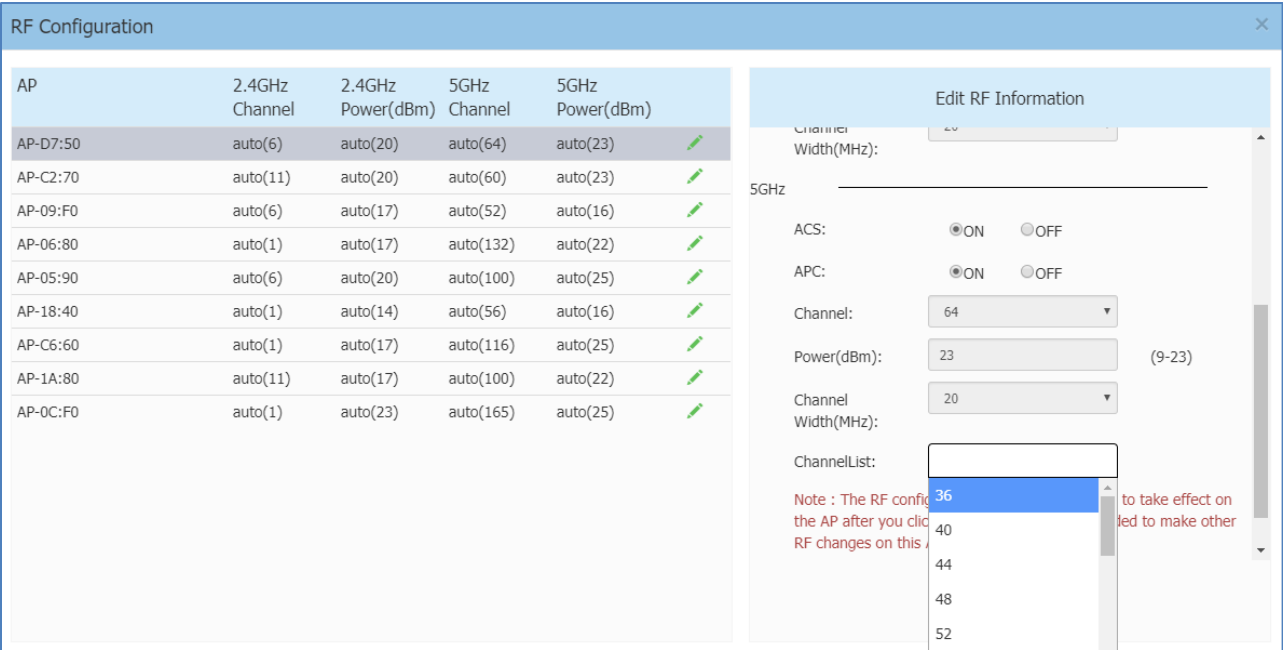


Figure 4-27 Edit RF Information



Note4-6: Radio Dynamic Adjustment™ (RDA) is a technology that adjusts the radio working channel and transmitting power according to the wireless environment around it. It includes Auto Channel Selection (ACS) and Auto Power Control (APC) functions. By default, RDA is enabled.

Auto Channel Selection and Auto Power Control will perform in a periodical time manner. You can change the period or time to trigger auto channel selection through DRM Time Control configuration, illustrating in Figure-26.

RDA relies on the background scanning feature. To ensure the RDA is effective, make sure the background scanning is ON, see “[Performance optimization Window](#)”.

Table 4-12: Key word specification in RF Configuration Window

Parameter	Specification
Client Aware	When enabled, Auto Channel Selection does not change channels for Stellar APs with connected clients, except for high-priority events such as RADAR detected. If "Client Aware" is Disabled, the Stellar AP may change to a more optimal channel, which may temporarily disrupt current client traffic.
Channel Width	• Wi-Fi 6E Access Point AP1451/AP1431/AP1411 support 160MHz channels • Wi-Fi 6 Access Points AP132X, AP136X and AP1351 support 160MHz channels • Wi-Fi 6 Access Points AP1311/AP1301 do not support 160MHz channels. • 160MHz channel width is supported on 5G band or 6G band. • Only static 160MHz channel width is supported, Auto Channel Selection will not use 160MHz channels.

Short GI	Enable/Disable Short Guard Interval. In IEEE 802.11 OFDM-based communications, Guard Interval is used to ensure that distinct transmissions occur between the successive data symbols transmitted by a device. The standard symbol Guard Interval used in 802.11 OFDM is 800 nanoseconds in duration. To increase data rates, the 802.11 standard added optional support for a 400 nanoseconds guard interval (Short Guard Interval). This would provide approximately an 11% increase in data rates. However, using the Short Guard Interval will result in higher packet error rates when the delay spread of the RF channel exceeds the Short Guard Interval, or if timing synchronization between the transmitter and receiver is not precise. By Default, Short Guard Interval is enabled on the wireless radio. If the multipath effect is too serious (too many metals or other reflecting materials), disabling Short Guard Interval is recommended.
MU-MIMO	Enable/Disable MU-MIMO (multi-user, multiple-input, multiple-output) feature.
High Efficiency	Enable/Disable 802.11ax high efficiency wireless functionality. When disabled, the HE mode capable AP will downgrade to VHT (Very High Throughput) mode.
Extremely High Throughput	Enable/Disable 802.11be extremely high throughput wireless functionality. When disabled, the EHT mode capable AP will downgrade to HE (High Efficiency) mode.
Beacon Interval	Specify the Beacon period for the AP in milliseconds. This indicates how often the 802.11 beacon management frames are transmitted by the access point. You can specify a value within the range of 60-500. The default value is 100 milliseconds.
CSA	Channel Switch Announcement. The CSA enables an AP to advertise that it is switching to a new channel before it begins transmitting on that channel. This allows the clients, which support CSA, to transition to the new channel with minimal downtime. By default, CSA is enabled. CSA utilizes beacon frames to notify clients, and the packet count range is 1-10.

wIDS/wIPS Window

wIDS/wIPS window focus on the wireless security of the Stellar AP network.

Wireless is a borderless network and always works in an open environment which can be interfered with and attacked. It is useful to discover the surrounding wireless conditions, and based on that, provide instructions and tools to help administrators improve the quality of the wireless network. Usually there are two types of foreign unknown APs having a negative effect on the wireless network, they are interfering APs and rogue APs.

An **interfering AP** is an AP seen in the wireless environment but not connected to the wired network. The interfering AP can provide RF interference potentially, however, it is not considered a direct security threat, because it is not connected to the wired network.

A **rogue AP** is an unauthorized AP plugged into the wired side of the network or a foreign interfering AP broadcasting the same SSID with the AP group. A rogue AP is considered a security threat to the AP group.

Panel of wIDS/wIPS displays top 5 Stellar APs with interference from surrounding APs, and the top 5 Stellar APs with the most rogue APs surrounding, illustrated in Figure 4-28.

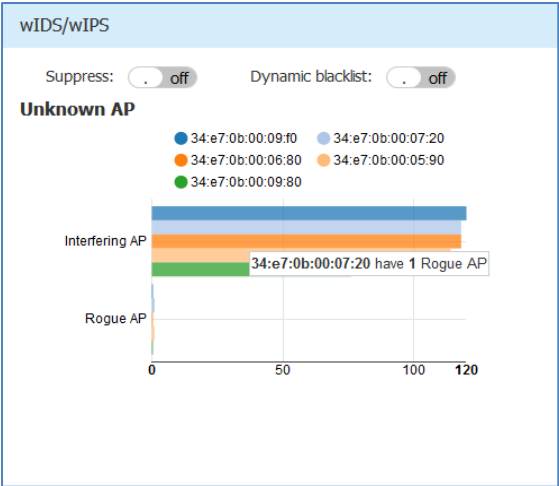


Figure 4-28 Top 5 AP interfered

AP allowlist: Both interfering APs and rogue APs are foreign unknown APs which can be found by background scanning and are listed in the unknown AP table, illustrated in Figure 4-29. However, some foreign APs found are trusted APs, those are not suitable for being classified as interfering APs or rogue APs. To avoid trusted foreign APs from being classified as interfering APs or rogue APs, you can add the trusted MAC address or MAC prefix to the AP allowlist, illustrated in Figure 4-30. If a foreign AP MAC address is added to the allowlist, it will not be displayed in the unknown AP list.

AP blacklist: Only rogue APs can be added to the blacklist. If a rogue AP is added to the blacklist, it cannot change its role to act as a client and access to the Stellar AP wireless network, illustrated in Figure 4-31.

Suppress: Enable/disable the function of rogue AP suppress. If enabled, the detecting Stellar AP will send DEAUTH frames to clients that have associated to the rogue AP, keeping the clients away from the unsafe wireless network. By default, the detecting Stellar AP does not send DEAUTH frames, see in Figure 4-28.

Dynamic blacklist: If enabled, all the ad-hoc devices found will be added to the AP blacklist automatically, which prevents the ad-hoc device from changing its role to act as a client and access to Stellar AP wireless network. By default, the ad-hoc device is not added to the blacklist automatically.

wIDS/wIPS Configuration					Unknown AP Information	
Unknown AP	SSID	Type	AP	Operate		
00:02:03:04:05:06	OpenWrt_1_2.4	Interfering	duanmingzhe	Trust	Unknown AP:	08:57:00:88:10:4b
4c:48:da:24:f4:47	chenjun_VLAN_...	Interfering	duanmingzhe	Trust	RSSI:	44
4c:48:da:24:e4:88		Interfering	duanmingzhe	Trust	SSID:	SoftAP
00:1f:64:ca:42:a9	NiuBin-work-2.4	Interfering	duanmingzhe	Trust	Channel:	1
08:57:00:88:10:4b	SoftAP	Rogue	duanmingzhe	Trust	Type:	Rogue
4c:48:da:24:f1:90		Interfering	duanmingzhe	Trust	Already In blacklist:	No
4c:48:da:24:11:10		Interfering	duanmingzhe	Trust	AP Name:	duanmingzhe
4c:48:da:24:cb:b0	y-2	Interfering	duanmingzhe	Trust	AP MAC:	34:e7:0b:00:09:f0
00:1f:64:12:13:91	DMZ-TEST2	Interfering	duanmingzhe	Trust	AP Location:	
4c:48:da:24:11:11	fdfsd	Interfering	duanmingzhe	Trust	Distance:	far
4c:48:da:24:f1:91	Imm123	Interfering	duanmingzhe	Trust	Encryption Type:	WPA2/RSNA
00:1f:64:12:13:92	DMZ-TEST3	Interfering	duanmingzhe	Trust	Attached Clients:	1
					64:cc:2e:0a:49:4d	

Figure 4-29 wIDS/wIPS Configuration Window

Table 4-13: Key word specification in wIDS/wIPS Configuration Window

Parameter	Specification
Unknown AP	MAC address of the unknown AP detected in the nearby.
SSID	SSID broadcasting by the unknown AP.
Type	Classified result of the unknown AP, can be interfering AP or rogue AP.
RSSI	Received Signal Strength Indication of the unknown AP.
Channel	Working channel of the unknown AP.
Already In Blocklist	Flag of ad-hoc device, depends on “the Dynamic blocklist” switch. If on, the ad-hoc devices will be automatically added to the blocklist and the flag is true (Yes); If off or the unknown AP in list is not an ad-hoc device, the flag is false (No).
AP/AP Name	Name of detecting AP in the group.
AP MAC	MAC of detecting AP in the group.
AP Location	Location of detecting AP in the group.
Distance	Distance between unknown AP and the detecting AP in the group, it is measured by RSSI of the unknown AP: Nearest - RSSI>(-20dBm); Near - (-45dBm)<RSSI< (-20dBm); Far - (-70dBm) <RSSI<(-45dBm); Farthest - RSSI<(-70dBm);
Encryption Type	The encryption type of the SSID being broadcast by the unknown AP.
Attached Clients	The number of clients attached to the unknown AP, and MAC of each client.
Operate	Operation to trust the foreign AP and delete it from the unknown AP list. If the foreign AP is trusted, its MAC address will be added to the allowlist.
Allowlist	Allowlist of foreign APs. Those not considered as security threat to the Stellar AP network, you can add the trusted MAC address into allowlist manually, see more in Figure 4-30.
Blocklist	Blocklist of foreign APs. Those classified as rogue APs and pretending to act as a client to access the Stellar AP network. If enabled and there are detected ad-hoc devices, all of them will be added to the blocklist automatically. You can remove a foreign AP from the blocklist by the Trust operation, see more in Figure 4-31.

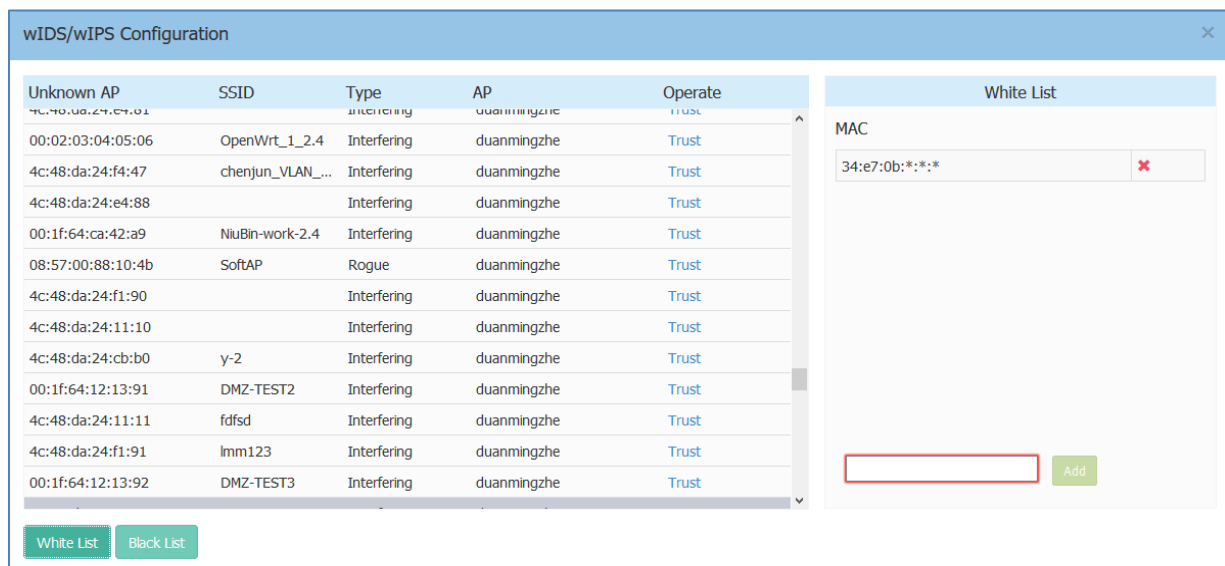


Figure 4-30 Foreign AP Allowlist

wIDS/wIPS Configuration					Black List	
Unknown AP	SSID	Type	AP	Operate	MAC	
01:60:02:00:00:00	OpenWrt-2g	Interfering	AP-00:E0	Trust	00:11:22:33:44:60	Trust
00:11:22:33:44:60		Rogue	AP-00:E0	Trust	4c:48:da:24:f0:e0	Trust
4c:48:da:27:47:a0		Interfering	AP-00:E0	Trust	00:11:22:33:44:61	Trust
4c:48:da:24:f1:c0		Interfering	AP-00:E0	Trust	00:1f:64:ca:42:a9	Trust
4c:48:da:24:f4:c0		Interfering	AP-00:E0	Trust	4c:48:da:04:ef:50	Trust
4c:48:da:24:f2:00		Interfering	AP-00:E0	Trust	00:11:22:33:44:50	Trust
4c:48:da:24:f0:e0		Rogue	AP-00:E0	Trust	4c:48:da:28:ef:50	Trust
4c:48:da:24:f0:e1	chenjun001	Interfering	AP-00:E0	Trust	4c:48:da:24:11:10	Trust
4c:48:da:24:f4:c1	test_8021x	Interfering	AP-00:E0	Trust	4c:48:da:54:ef:50	Trust
00:11:22:33:44:61	w33	Rogue	AP-00:E0	Trust	4c:48:da:24:f1:90	Trust
4c:48:da:27:47:a1	test_8021x	Interfering	AP-00:E0	Trust		
4c:48:da:24:f2:01	lvshuaijiang	Interfering	AP-00:E0	Trust		
4c:48:da:24:f4:a1	fdfsd	Interfering	AP-00:E0	Trust		

White List Black List

Figure 4-31 Foreign AP Blocklist

You can remove a foreign AP from the Unknown AP list or blocklist by the **Trust** operation. If you trust an unknown AP (interfering AP/rogue AP), it is removed from the Unknown AP list and blocklist, and its MAC address will be added to allowlist.

Performance Optimization Window

Wireless performance optimization is useful to enhance the quality of wireless service for users. The performance optimization includes Background Scanning, Band Steering, Load Balance, RSSI Threshold, Roaming RSSI, Voice and Video Awareness, and Airtime Fairness, illustrated in Figure 4-32.

Performance Optimization

Background Scanning ☒ on

Scanning Channel: Working Channel

Scanning Interval: 0 min 20 sec **Save**

Scanning Duration: 50ms

Band Steering: ☒ on Force 5G: ☐ **Exclude**

Load Balance: ☒ on

RSSI Threshold: 2.4G: 0 5G: 0 **Save**

Roaming RSSI: 2.4G: 0 5G: 0 **Save**

Voice and Video Awareness: ☐ off

Airtime Fairness: 2.4G: ☐ off 5G: ☐ off

Figure 4-32 Wireless Optimization Tab

Background Scanning: Wireless networks operate in environments with electrical and radio frequency devices that can interfere with network communications. Microwave ovens, cordless phones, and even adjacent Wi-Fi networks are all potential sources of continuous or intermittent interference. The background scanning is able to examine the radio frequency (RF) environment in which the Wi-Fi network is operating, identify interference and classify its sources.

Background scanning is the basis for some advanced features such as: wIDS/wIPS, RDA (ACS/APC) etc. When it's turned OFF, the foreign AP detection and rogue suppression will stop and the RDA will drop its precision. By default, background scanning is enabled.

The scanning channel can be defined on demand: For highly sensitive packet delay use case, suggest enabling background scanning only for the working channel. The scanning interval of Background Scanning can be configured from 5 seconds to 3 hours (180 minutes) according to deployment requirement. For highly sensitive packet delay use case, it is recommended to prolong the interval from default 20-second setting. If the interval is longer than 1 minutes, RDA and wIPS feature accuracy will be impacted.

Band Steering: Band steering supports **Prefer 5GHz** and **Force 5G**.

Prefer 5GHz feature assigns the dual band clients to the 5 GHz band prior to the 2.4G band. Thus can reduce co-channel interference and increase available bandwidth for clients, because there are more channels on 5 GHz band. By default, band steering is enabled. When Band Steering is enabled and Force 5G is NOT selected, AP is working in Prefer 5G mode. The prefer-5GHz-band-steering is based on channel utilization and client density. When the 5G band is busy and connecting too many clients, a new client will be guided to connect to free 2.4G band.

Force 5G: AP forces dual band clients to connect to the 5 GHz band. Dual band clients are not allowed to connect 2.4G radio. Those clients only supporting 2.4G band are permitted to connect to 2.4G radio. When Band Steering is enabled and Force 5G is selected, AP is working in Force 5G mode.

Exclude: Excludes the clients from Band Steering. For example, user can exclude some dual band voice terminals from Band Steering and AP will let those terminals choose wireless band to connect freely.

Load Balance: The principle of this is to provide fair distribution of clients among neighboring APs. Based on the client density, channel utilization on adjacent APs, and associating clients RSSI value, it is steered from a busy AP to an idle AP. The thresholds for client density is 10, channel utilization is 70% for 2.4G and 70% for 5G. By default, Load Balance is enabled.

RSSI Threshold: Wireless access control, client with lower RSSI value than configured setting is forbidden to access. By default, RSSI threshold is disabled (0). RSSI threshold can be applied to 2.4G band or 5G band or 6G band separately. Recommended 2.4G (5), 5G (10), 6G (10). RSSI threshold is recommended to be deployed in high density scenario.

Roaming RSSI: Wireless access control, client with lower RSSI value than setting is forced to roaming. By default, roaming RSSI is disabled (0). Roaming RSSI can be applied to 2.4G band or 5G band or 6G band separately. Roaming RSSI is used in conjunction with 802.11k and 802.11v. Clients that support these protocols will be informed with sufficient information on which AP to roam to when the threshold is breached. When 802.11k and 802.11v is enabled. Recommended 2.4G (10), 5G (15), 6G (15).

Voice and Video Awareness: Background scanning needs to be aware of existing traffic on the Stellar AP, if there is an ongoing voice/video service, scanning should not be done to ensure uninterrupted traffic; and allows to resume scanning when there is no active voice/video session. By default, Voice and Video Awareness feature is disabled.

Airtime Fairness: All clients share the wireless transition time slice equally, even with traditional low speed clients present. By default, Airtime fairness is disabled.

Access Page

The Access page focuses on user access management including user authentication, blocklist and allowlist and user access control list.

The Access page is divided into three windows: Authentication window, Blocklist & Allowlist window, ACL window, illustrated in Figure 4-33.

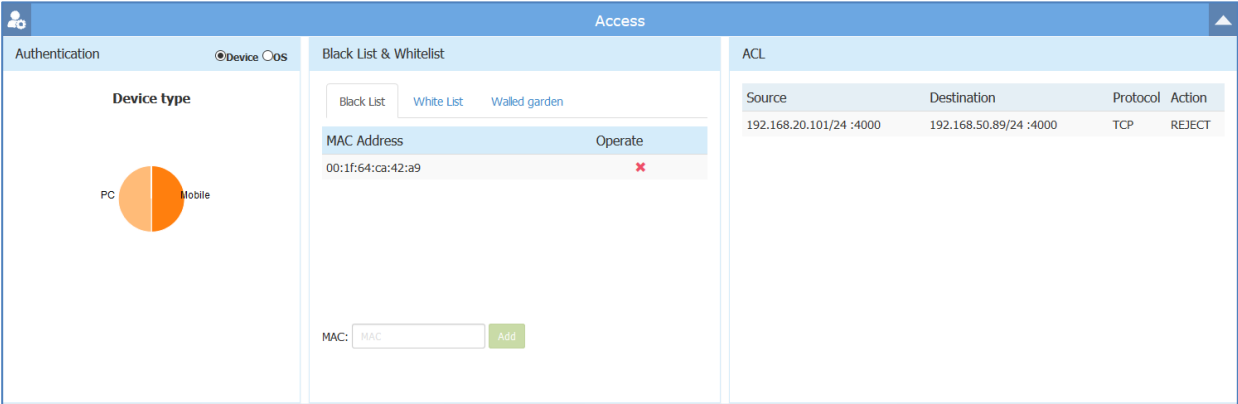


Figure 4-33 Access Page

Authentication Window

Authentication Window displays the user authentication and accessing information.

There are two modes for Authentication Window, Simplified Mode illustrated in Figure 4-34 and Advanced Mode illustrated in Figure 4-35. You can launch the Advanced Mode from Simplified Mode by clicking the Authentication Window Frame.

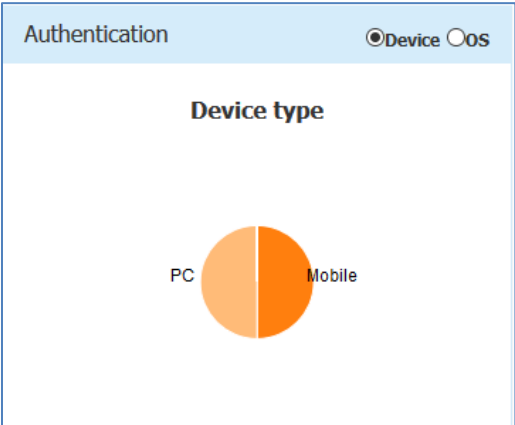


Figure 4-34 Authentication Window - Simplified Mode

The simplified Authentication Window displays the statistics information of the users’ device and operating system, illustrated in Figure 4-34.

The advanced Authentication Window is mainly used to configure the captive portal authentication, illustrated in Figure 4-35.

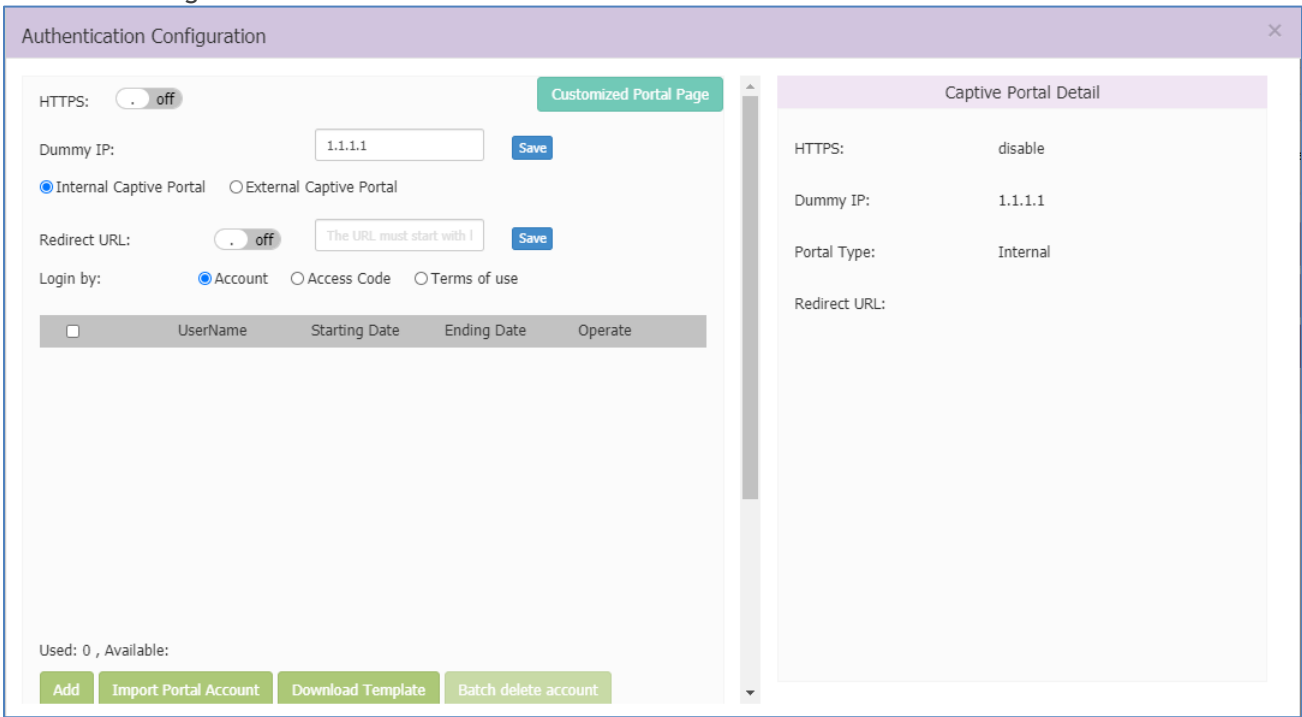


Figure 4-35 Authentication Window - Internal Portal Server

Authentication Configuration

HTTPS: ☒ on

☐ Internal Captive Portal ☒ External Captive Portal

Captive Portal Server

Hostname:

Redirect URL:

Redirect URL param: ☐ enable ☒ disable

Authentication Server:

Server IP /Hostname:

Authentication Server Port: (1-65535)

Secret:

Confirm:

☒ Radius Accounting

Accounting Server Port: (1-65535)

Client Behavior Tracking: ☒ on

☒ Logging Client Connections ☒ HTTP/HTTPS ☒ ALL

Log To Server:

☐ TFTP Server ☒ SFTP Server

Edit Client Behavior

*Server IP:

*Server Port:

Remote Path:

*UserName:

*Password:

Cycle:

Figure 4-36 Authentication Window - External Portal Server

Table 4-14: Key word specification in Authentication Window (Advanced Mode)

HTTPs	Specify the captive portal login protocol, https or http.
Dummy IP	IP address of captive portal FQDN
Captive Portal Type	- Internal Captive Portal - Use AP internal captive portal server for authentication. - External Captive Portal - Use external captive portal server for authentication.
Login by: ☒ Account ☐ Access Code ☐ Terms Of use	Login method used by the captive portal users, corresponding to different login page and credentials: - Account - Login by user account, you need to add accounts for portal users, see Create Users or Access Code. The users enter their usernames and passwords to pass the authentication and access the wireless network, see more in Customized Portal Page - Login by Account. - Access Code - Login by access code, you need to add access code for portal user, see Create Users or Access Code. The users enter the access code to pass the authentication, see more in Customized Portal Page - Login by access code. - Terms of use - Login by terms of use. The users accept the terms of use and pass the authentication, see more in Customized Portal Page - Login by Terms of use.
Redirect URL: ☒ on	Redirect user to a specific URL defined by administrator. By default, it is disabled.
UserName	Account of captive portal user.

Introduction to the AP Group Web Management System

Starting Date	Account effective starting date.
Ending Date	Account effective ending date.
Operate	Edit or delete captive portal users.
Add	Add users for captive portal authentication when using login by account.
Import Portal Account	Import portal user account through excel file. Suggest downloading the excel template, add user accounts into it and then upload to the AP. Maximum 2000 accounts supported in AP local database for internal captive portal authentication.
Download Template	Download the user account template.
Batch delete account	Batch delete unnecessary user account from AP.
Customized Portal Page	Customized portal web page according to application requirement.
Preview	Preview the customized portal web page.
Default	Return the customized portal web page to the system default.
Client Behavior Tracking	Enable logging user behavior to a FTP server or syslog server. Connection information of all users including online and offline will be recorded. More details can see in Note4-7.
Logging Client Connections	- HTTP/HTTPS - Record the HTTP/HTTPS web session of wireless clients - ALL - Record the all the session including HTTP(s)/TCP/UDP of wireless clients
Log To Server	- TFTP Server - Record the client connection information to a specific TFTP server by uploading log files - SFTP Server - Record the client connection information to a specific SFTP server by uploading log files - Syslog Server - Record the client connection information to a specific server by syslog message
Cycle: 1h	Specify the cycle for uploading user behavior logs to FTP server, can be set to 1 hour, 2 hours and 4 hours.
Save	Save the FTP setting for uploading user behavior logs.
Upload Now	Upload the user behavior logs to the FTP server manually.
RADIUS Setting	Setting RADIUS attributes which will be utilized by AP for authentication Called-Station-ID: Specify the value for Called-Station-ID which will be used while AP sending RADIUS access request, max 64 bytes string.



Note 4-7: The log information of user behavior includes: username, user MAC, user IP, connecting WLAN, Online/Offline behavior and time stamp.

Note

Customized Portal Page Panel

You can customize your splash page used in the captive portal authentication by changing the Logo, background and terms of use, illustrated in Figure 4-37.

The screenshot shows the 'Authentication Configuration' window. On the left, the 'Captive Portal' is set to 'on'. Below it, 'Login by:' has 'Account' selected. 'Redirect URL' is 'http://www.google.com'. A table lists users: 'guest1' with 'Starting Date' '2016.11.21' and 'Ending Date' '2016.11.28'. At the bottom, 'User Behavior' is 'on' and 'TFTP Server' is '192.168.20.161'. On the right, the 'Customized Portal Page' panel is active, showing options to upload a 'Logo', 'Background', and 'Terms of use'. Each option has a 'Browse...' button and a note about file format and size. A red circle highlights the 'Customized Portal Page' tab, and a red arrow points to it from the left.

Figure 4-37 Customized Portal Page

There are three splash page templates provided by the system, you can choose your captive portal login method and customize your own splash page accordingly, see more in [Customized Portal Page - Login by Account](#), [Customized Portal Page - Login by access code](#) and [Customized Portal Page - Login by Terms of use](#).

Customized Portal Page - Login by Account

The screenshot shows the 'Customized Portal Page - Login by Account' splash page. At the top left is the 'Alcatel-Lucent Enterprise' logo, with a red box around it and a red arrow pointing to it labeled 'LOGO'. Below the logo is a large image of a city skyline, with a red box around it and a red arrow pointing to it labeled 'Background'. The main content area contains a login form with fields for 'Username:' and 'Password:', a checkbox for 'I accept the terms of use' (with a red box around 'terms of use' and a red arrow pointing to it labeled 'Terms of use'), and a 'Log In' button. At the bottom, there is a link to 'Contact a staff member if you are experiencing difficulty logging in.'

Figure 4-38 Customized Portal Page - Login by account

Customized Portal Page - Login by Access Code

The screenshot shows the Alcatel-Lucent Enterprise login interface. At the top left is the Alcatel-Lucent Enterprise logo, with a red arrow pointing to it labeled "LOGO". At the top center is a red arrow pointing down to a large banner image of a city skyline, labeled "Background". Below the banner, the text "Please login to the network using your access code." is displayed. Underneath is the label "Access Code:" followed by a text input field. Below the input field is a checkbox labeled "I accept the" followed by a red box around the text "Terms of use", which has a red arrow pointing to it labeled "Terms of use". Below this is a blue "Login" button. At the bottom, there is a link: "Contact a staff member if you are experiencing difficulty logging in." The footer contains the copyright notice "© 2016 Alcatel-Lucent".

Figure 4-39 Customized Portal Page - Login by access code

Customized Portal Page - Login by Terms of Use

The screenshot shows the Alcatel-Lucent Enterprise login interface for terms of use login. At the top left is the Alcatel-Lucent Enterprise logo, with a red arrow pointing to it labeled "LOGO". At the top center is a red arrow pointing down to a large banner image of a city skyline, labeled "Background". Below the banner, the text "Terms:" is displayed. Underneath is a checkbox labeled "I accept the" followed by a red box around the text "Terms of use", which has a red arrow pointing to it labeled "Terms of use". Below this is a blue "Log In" button. At the bottom, there is a link: "Contact a staff member if you are experiencing difficulty logging in." The footer contains the copyright notice "© 2016 Alcatel-Lucent".

Figure 4-40 Customized Portal Page - Login by Terms of use



Figure 4-41 Customized Portal Page - Terms of use

Blocklist & Allowlist Window

Blocklist & Allowlist Window focuses on the basic access control mechanism for users connecting to the Stellar WLAN network based on the client level. It includes following tabs: Blocklist Tab, Allowlist Tab, Wall Garden Tab and Multicast Control Tab.

Those clients on the blocklist are denied associating to the Stellar AP wireless network. Once a client is in the blocklist , it cannot connect to any WLAN of any security level (Enterprise/Personal/Open). You can add/delete the blocklist based on client’s MAC address, illustrated in Figure 4-42.

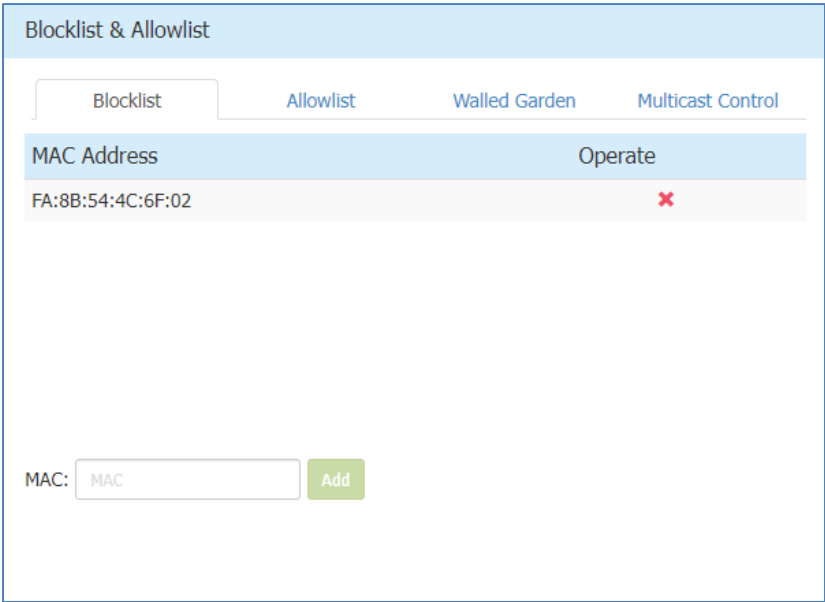


Figure 4-42 Blocklist Tab

The allowlist is applied to captive portal authentication ONLY. Those clients on the allowlist are permitted to access the network resource without passing the captive portal authentication. You can manually

add/remove client(s) to/from the allowlist for captive portal authentication by MAC address, illustrated in Figure 4-43. The allowlist does not support Enterprise/Personal WLANs. This means that the clients in the allowlist are not allowed to access Enterprise/Personal WLANs without using correct credentials.

Blocklist & Allowlist

Blocklist

Allowlist

Walled Garden

Multicast Control

MAC Address	Operate
90:E7:0B:03:D5:D0-90:E7:0B:03:D5:D0	✖

Starting MAC:

Starting MAC

Ending MAC:

Ending MAC

Add

Figure 4-43 Allowlist Tab

The walled garden is a control mechanism over network resources, it restricts access to non-approved applications or content. The walled garden is applied for captive portal authentication ONLY. The client can access the network resource (For example: website of the hotel) before passing the captive portal authentication. You can add/remove allowed domain(s) or IP(s) to/from the walled garden, illustrated in Figure 4-44.

Blocklist & Allowlist

Blocklist

Allowlist

Walled Garden

Multicast Control

IP	Operate
192.168.1.2-192.168.1.100	✖

Domain: ☐

IP: ☒

Starting IP:

IP Address (v4 | v6)

Ending IP:

IP Address (v4 | v6)

Add

Figure 4-44 Walled Garden Tab



Note 4-7: To allow the user to access some network resources (For example: office website or open file server) before passing the captive portal authentication, you must know the IP address or domain name of the network resource and add it into the walled garden.

The Multicast Control targets on the mDNS multicast traffic forwarding from wired network (switch ports) towards AP. When enabled, only traffic from the configured multicast source in the allowlist can be forwarded by AP to the clients connecting to it. Maximum 8 items of multicast allowlist are supported. When Multicast Allowlist is disabled, the mDNS multicast traffic is forwarding without conditions.

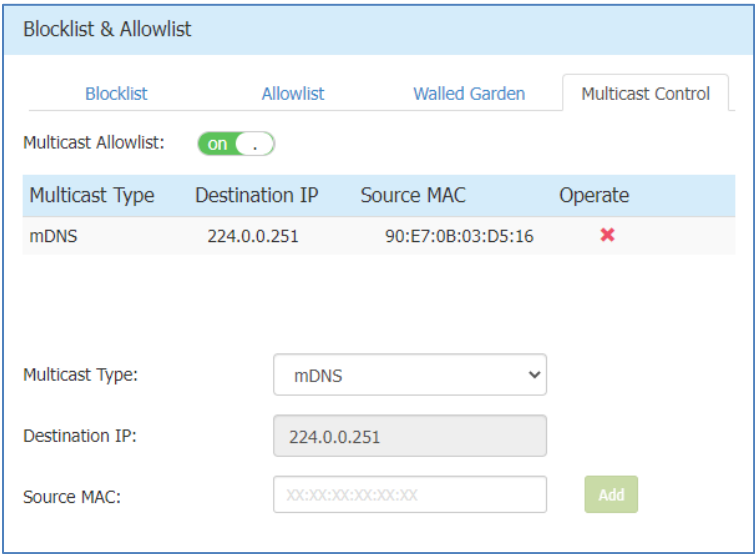


Figure 4-45 Multicast Control Tab

Access Control List Window

There are two modes for ACL Window, Simplified Mode illustrated in Figure 4-46 and Advanced Mode illustrated in Figure 4-47.

You can launch the Advanced Mode from Simplified Mode by clicking the ACL Window Frame. The simplified ACL Window displays the ACLs configured, illustrated in Figure 4-46.

You can create L3 ACLs using wildcard entries for both IP address and TCP/UDP/ICMP ports. See the advanced ACL Window illustrated in Figure 4-47.

The ACL rules created in the list are applied sequentially, based on the precedence of top-to-bottom.

By default, traffic is allowed to pass if no ACL rules are matched (Default ACL action is 'Accept').

ACL			
Source	Destination	Protocol	Action
192.168.20.101/24 :4000	192.168.50.89/24 :4000	TCP	REJECT

Figure 4-46 ACL Window - Simplified Mode

ACL Configuration

Default ACL Action: ☒ Accept ☐ Reject

Source IP	Destination IP	Protocol	Action	Apply To	Operate

Add

Add ACL

Source IP: ☒ Any

*Destination IP: ☐ Any

Source Port: ☒ Any

Destination Port: ☒ Any

Protocol Type:

Action:

Apply To WLAN: ☒ Any

Apply To EthPort: ☐ Any

Cancel Save

Figure 4-47 ACL Window - Advanced Mode

Table 4-15 ACL Parameter Specification

Parameter	Specifications
Source IP	The source IP address.
Destination IP	The destination IP address.
Source Port	Source UDP or TCP port.
Destination Port	Destination UDP or TCP port.
IP Protocol	There are three options for IP Protocol, TCP, UDP or ICMP.
Action	Accept or Reject
Apply To WLAN	Indicate the range which the ACL rule take effect for wireless connection, specific SSID or any SSID.
Apply To EthPort	Indicate the range which the ACL rule take effect for downlink wired connection, dedicated for AP1201H/AP1201HL/AP1311/AP1301H.

**Note**

Note 4-8: Stellar AP supports L2 ACLs, you can block/allow certain MACs or a range of MAC addresses, see [Blocklist & Allowlist Window](#). Also, you can setup rules based on 802.1p/DSCP while creating a new SSID, see [Modify WLAN QoS](#).

Network Page

The Network page is mainly focus on wired downlink port configuration. For example, user can view and configure AP1201H/AP1201HL/AP1311/AP1301H downlink ports in network page.

Figure 4-48 Network Page

If there is not any online AP1201H/AP1201HL/AP1311/AP1301H in the cluster, Network page is hidden and cannot be operated until an AP with downlink port is online and joins into the cluster.

Table 4-16 Wired Network

Parameter	Specifications
AP Model	AP model needs to configure ethernet downlink port
Ethernet	Ethernet downlink port of AP
Admin Status	Enable/Disable the ethernet downlink port
Bypass VLAN	To specify the default VLAN traffic forwarding behavior. When enabled, the traffic in the default VLAN will skip the CPU process and forward directly in/out the AP. Bypass VLAN can improve the traffic forwarding efficiency greatly.

Introduction to the AP Group Web Management System

VLAN ID	VLAN ID assigned to the ethernet downlink port as default VLAN
Upstream	Maximum upstream bandwidth for the down Link port
Downstream	Maximum downstream bandwidth for the down Link port
Tagged VLAN	Traffic with VLAN tagged through the ethernet port will skip the CPU process and still keeps the VLAN tag

Ethernet Over USB

Recognize the AP USB interface as an ethernet port, making external USB dongle as terminal to communicate with other network element.

Support enabling and disabling the USB dongle and configuring the VLAN for USB interface.

The screenshot displays the 'Network' configuration page. On the left, under 'Wired Network', there is a table with columns: AP Model, Ethernet, Bypass VLAN, VLAN ID, Admin Status, and Operate. The table contains one entry for OAW-AP1511 with Ethernet set to 'Usb0', Bypass VLAN as 'N/A', Admin Status as 'Disable', and an 'Operate' button. On the right, the 'Wired Network Configuration' panel shows the AP Model as 'OAW-AP1511', Ethernet over USB set to 'Usb0', and Admin Status as 'off'. The VLAN ID is set to '0,2-4090' with a range '(0,2-4090)' indicated. 'Cancel' and 'Save' buttons are at the bottom right.

AP Model	Ethernet	Bypass VLAN	VLAN ID	Admin Status	Operate
OAW-AP1511	Usb0	N/A		Disable	

Wired Network Configuration

AP Model: OAW-AP1511

Ethernet over USB: Usb0

Admin Status: ☐ off

VLAN ID: (0,2-4090)

Figure 4-49 Ethernet Over USB

5 WLAN Configuration

Configuring WLAN should be the first step when setting up your Wi-Fi network. This section contains the following topics:

- [Create NEW WLAN](#)
- [Delete Your WLAN](#)
- [Modify Your WLAN](#)
- [Modify WLAN Qos](#)

Create New WLAN

To create a new WLAN, click on the hyperlink 'New' to launch the WLAN creation window. There are three security levels of WLANs that can be created: Enterprise, Personal and Open (Captive Portal).

Enterprise: Also referred to as 802.1X mode, this is designed for enterprise networks and requires a RADIUS authentication server. This requires a more complicated setup, but provides additional security (e.g. protection against dictionary attacks on short passwords). Various kinds of the Extensible Authentication Protocol (EAP) are used for authentication. Enterprise mode is available with both WPA and WPA2.

Personal: Also referred to as PSK (pre-shared key) mode, this is designed for home and small office networks and doesn't require an authentication server. Each wireless network device encrypts the network traffic using a 256 bit key. This key may be entered either as a string of 64 hexadecimal digits, or as a passphrase of 8 to 63 printable ASCII characters. Personal mode is available with both WPA and WPA2.


Open (Captive Portal): No Authentication or encryption method for the wireless network. User data will be transmitted as plain text transmit mode over the air. Captive portals are mainly used in wireless open networks where the users are shown a welcome message informing them of the conditions of access. Often captive portals are used for marketing and commercial communication purposes and they allow the providers of this service to display or send advertisements to users who connect to the Wi-Fi access points.

Create an Enterprise WLAN

Enterprise WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-1 and Figure 5-2. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are six essential parameters needed to be configured in simplified mode, they are WLAN Name, Security Level, Key Management and AuthServer, AuthPort and AuthSecret. Other parameters will be considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-1 for details about each parameter.

WLAN Configuration

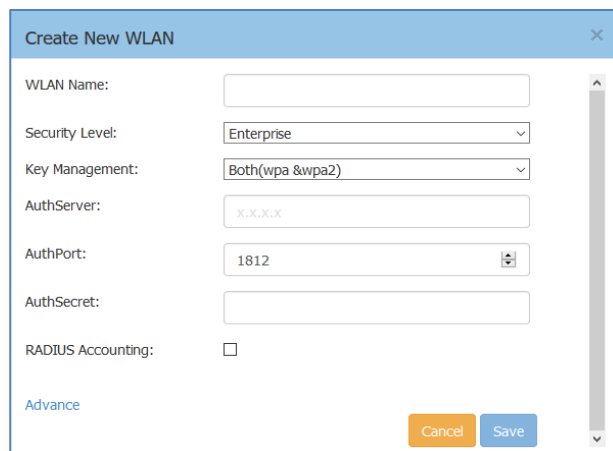

The image shows a 'Create New WLAN' dialog box with a blue header bar containing a close button (X). The dialog contains several configuration fields: 'WLAN Name' (text input), 'Security Level' (dropdown menu showing 'Enterprise'), 'Key Management' (dropdown menu showing 'Both(wpa & wpa2)'), 'AuthServer' (text input with a placeholder 'X.X.X.X'), 'AuthPort' (text input with '1812' and a spinner icon), 'AuthSecret' (text input), and 'RADIUS Accounting' (checkbox). At the bottom left is a blue 'Advance' link. At the bottom right are two buttons: an orange 'Cancel' button and a blue 'Save' button. A vertical scrollbar is on the right side of the dialog.

Create New WLAN

WLAN Name:

Security Level: Enterprise

Key Management: Both(wpa & wpa2)

AuthServer: X.X.X.X

AuthPort: 1812

AuthSecret:

RADIUS Accounting: ☐

[Advance](#)

Cancel Save

Figure 5-1 Create Enterprise WLAN - Simplified Mode

WLAN Configuration

Create New WLAN

WLAN Name:

(1-32 chars)

Security Level:

Enterprise

Key Management:

Both(wpa &wpa2)

AuthServer:

XXXXX

AuthPort:

1812

AuthSecret:

Nas Identifier:

nasidentifier

Radius Accounting:

☒

AcctServer:

XXXXX

AcctPort:

1813

AcctSecret:

Inactivity Timeout Status:

☐ off

Inactivity Timeout Interval:

600

(60-1200)s

Enable:

☒ Yes ☐ No

Hidden:

☐ Yes ☒ No

Multicast:

☐ Yes ☒ No

Broadcast ARP:

☐ Yes ☒ No

VLAN ID:

0

(0-4090)

Band:

☒ 2.4GHz ☒ 5GHz

WLAN Access Timer:

☐ off

MaxClients Per Band:

64

(1-256)

Upstream Per Client:

0

(0-65536)kbps

Downstream Per Client:

0

(0-65536)kbps

Client Isolate:

☐ off

802.11r:

☐ off

802.11v:

☒ on ☐

802.11k:

☒ on ☐

802.11b:

☒ on ☐

802.11g:

☒ on ☐

OKC:

☐ off

2.4G Client Rate Control:

☐ off

2.4G Client Rate:

1

Mbit/s

5G Client Rate Control:

☐ off

5G Client Rate:

6

Mbit/s

2.4G MGMT Rate control:

☐ off

2.4G MGMT Rate:

1

Mbit/s

5G MGMT Rate control:

☐ off

5G MGMT Rate:

6

Mbit/s

Hide

Cancel

Save

Figure 5-2 Create Enterprise WLAN - Advanced Mode

Table 5-1: Key word specification in Enterprise WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security mode of WLAN, from high to low is Enterprise>Personal>Open. Here select the Enterprise mode.
Key Management	WPA3/WPA2/WPA encryption method. It is applicable to Enterprise/Personal WLANs only. - Both(wpa&wpa2): Allowing WPA or WPA2 capable wireless client to connect to the WLAN - wpa2-enterprise: Allowing WPA2 capable or WPA3 capable wireless client to connect to the WLAN - wpa3-enterprise: Allowing WPA3 capable wireless client to connect to the WLAN. CSNA: Allowing client supporting WPA3 with CNSA (Suite B) to connect when checked. <i>Note: AP1101 full band does not support WPA3 CNSA encryption, AP1201H and AP1201L 2.4Ghz band does not support WPA3 CSNA encryption. All other APs and radio bands support CSNA encryption. When CSNA encryption is applied to an AP that does not support it, the encryption will automatically fall back to non-CSNA mode (WPA2).</i>
PMF	Stellar supports the IEEE802.11w standard, also known as Protected Management Frames (PMF). The PMF function increases the security by providing data confidentiality of management frames. PMF is applicable for WPA2 and WPA3 encryption method. - Disabled: Disables 802.11w PMF protection for the WLAN. - Optional: Both 802.11w PMF capable clients and 802.11w PMF non-capable clients can connect the WLAN. - Required: Only 802.11w PMF capable clients can associate to the WLAN. - For WPA3 Enterprise authentication, if the CNSA is selected, PMF is set to 'required' which means only PMF capable client can connect.
AuthServer	IPv4/IPv6 address of the authentication server (RADIUS). With Dynamic VLAN feature, Stellar supports VLAN assignment for the clients connecting to the Enterprise WLAN. Below RADIUS attributes are supported in Stellar Express mode (RFC-2868): - Tunnel-Type (IETF #64) = VLAN - Tunnel-Medium-Type (IETF #65) = 802 (6) - Tunnel-Private-Group-ID (IETF #81) = [tag, string]
AuthPort	Communication port of the authentication server. The default value is 1812. If RadSec is enabled, the AuthPort should be configured 2083 or the value mapping RadSec server.
AuthSecret	Shared secret key used by the authentication server, in ASCII format.
Nas Identifier	Nas Identifier is used to notify the source of a RADIUS access request, which enables the RADIUS server to choose a policy for that request. The Nas Identifier is sent to the RADIUS server by the AP through an authentication request to classify users to different groups. This enables the RADIUS server to send a customized authentication response.
TLS	Enable to make Stellar AP use TLS tunnel and to enable secure communication between the RADIUS server and Stellar AP. Enabling RADIUS communication over TLS increases the level of security for authentication that is carried out across the cloud network. When configured, this feature ensures that the RadSec protocol is used for safely transmitting the authentication and accounting data between the Stellar AP and the RadSec server. When configured, the AuthPort value should be also adjusted to map the RadSec server. The RadSec feature is applicable for wireless client only.
RADIUS Accounting	Select the checkbox if accounting service is needed. By default, it is not selected.

AcctServer	IPv4 address of the accounting server.
AcctPort	Communication port of the accounting server. The default value is 1813.
AcctSecret	Shared secret key used by the accounting server, in ASCII format.
Secondary RADIUS Server	Specify the secondary RADIUS server for backup. Note: TLS functionality only supports Primary Server.
Inactivity Timeout Status	Specify the inactivity timeout interval configuration status. The clients will be disconnected from the wireless network for a specific duration that not transmitting any packets. If Inactivity Timeout Status is disabled, the inactivity timeout interval is set to fixed 600 seconds. If Inactivity Timeout Status is enabled, the configured Inactivity Timeout Interval will be used to disconnect inactivity client.
Inactivity Timeout Interval	Configure the inactivity timeout period, with a valid range of 60 to 12000 seconds.
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast (for up to 6 clients) can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services.
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.
VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4GHz, 5GHz, or 6GHz (if applicable for the region). Note: 6GHz wireless networks only support WPA 3 and Enhanced Open encryption methods.
MLO	MLO is a key technological innovation in Wi-Fi 7, which allows devices to simultaneously utilize multiple frequency bands (such as 2.4GHz, 5GHz, and 6GHz) for data transmission. This multi band aggregation method enables Wi-Fi 7 devices to significantly improve the efficiency and speed of data transmission. MLO Band: The band selected to enable MLO feature on the WLAN. Note: MLO function also relies on radio status and its EHT setting. Make sure corresponding radio and its EHT being enabled to activate MLO.
Scope Type	Specify the scope of APs in the cluster which will create the WLAN. - All - All APs in the cluster will create the WLAN. - Group - Select the APs which will create the WLAN. The AP which MAC address is in the group will be valid for the WLAN.
WLAN Access Timer	Specify the WLAN working period, in which only SSID broadcasts. If NOT configured (Disabled), SSID will always broadcast if the WLAN is activated. - Access Days - Specify the days for broadcasting SSID per week. - Operational Hours - Specify the time of the day in which broadcasting SSID.
Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 1 to 256. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
FDB update on Association	Enable/Disable FDB update on Association. If enabled, when a client roams to a new AP, the AP will send ARP packets to the uplink switch to notify the switch to change the downstream forwarding port for the wireless client's traffic.

Client Isolate	Not permit the clients attached to the same WLAN to communicate with each other, they can only communicate with upstream gateway.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an AP to request a voice client to transition to a specific AP or suggest a set of preferred APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best AP to transition to as they roam.
802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP
2.4G Client Rate Control	Enables/Disables 2.4G band access control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not be allowed to access, recommended value 12
5G Client Rate Control	Enables/Disables 5G band access control based on client data rate
5G Client Rate	5G band client with lower data speed will not be allowed to access, recommended value 24
6G Client Rate Control	(If applicable) Enables/Disables 6G band access control based on client data rate
6G Client Rate	(If applicable) 6G band client with lower data speed will not be allowed to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage. 2.4G Beacon frame does not support 9 Mbps or 18 Mbps speed. When 9/18 Mbps is configured for 2.4G MGMT Rate, beacon frame will broadcast on 11/24 Mbps rate and other management frames (such as probe frame) will broadcast on 9/18 Mbps.
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage. 5G Beacon frame does not support 9 Mbps speed. When 9 Mbps is configured for 5G MGMT Rate, beacon frame will broadcast on 12 Mbps rate and other management frames (such as probe frame) will broadcast on 9 Mbps.
6G MGMT Rate Control	(If applicable) Enables/Disables 6G band wireless management frame rate control
6G MGMT Rate	(If applicable) 6G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage.
Advertise AP Name	Advertise AP name in the beacon frame, disabled by default.
OKC	If OKC is enabled, a cached pairwise master key (PMK) is used when the client roams to a new AP. This allows faster roaming of clients without the need for a complete 802.1x authentication.
UAPSD	Unscheduled Automatic Power Save Delivery (UAPSD) is a part of 802.11e and helps in increasing the battery life of Wi-Fi terminals. By default, UAPSD is enabled.

DTIM Interval	The DTIM interval indicates the DTIM period in beacons, which determines how often the AP should deliver the buffered broadcast and multicast frames to associated clients in the power save mode. The default value is 1, which means the client checks for buffered data on the AP at every beacon. User can also configure a higher DTIM value for power saving.
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

Create a Personal WLAN

Personal WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-3 and Figure 5-4. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are five essential parameters to be configured for a Personal WLAN in simplified mode, they are WLAN Name, Security Level, Key Management, Password Format and Password. Other parameters will be considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-2 for details about each parameter.

Figure 5-3 Create Personal WLAN - Simplified Mode

Create New WLAN

WLAN Name:

(1-32 chars)

Security Level:

Personal

Key Management:

Both(wpa &wpa2)

Password Format:

8-63 chars

Password:

Please enter a valid 8-63 digits of Eng

Confirm:

Inactivity Timeout Status:

off

Inactivity Timeout Interval:

600

(60-1200)s

Enable:

Yes No

Hidden:

Yes No

Multicast:

Yes No

Broadcast ARP:

Yes No

VLAN ID:

0

(0-4090)

Band:

2.4GHz 5GHz

WLAN Access Timer:

on

Access Days:

Mon Tue Wed Thu Fri Sat Sun

Operational Hours:

on

Start Time:

00:00

hr:min

End Time:

23:59

hr:min

MaxClients Per Band:

64

(1-256)

Upstream Per Client:

0

(0-65536)kbps

Downstream Per Client:

0

(0-65536)kbps

Client Isolate:

off

802.11r:

off

802.11v:

on

802.11k:

on

802.11b:

on

802.11g:

on

2.4G Client Rate Control:

off

2.4G Client Rate:

1

Mbit/s

5G Client Rate Control:

off

5G Client Rate:

6

Mbit/s

2.4G MGMT Rate control:

off

2.4G MGMT Rate:

1

Mbit/s

5G MGMT Rate control:

off

5G MGMT Rate:

6

Mbit/s

Hide

Cancel

Save

Figure 5-4 Create Personal WLAN - Advanced Mode

Table 5-2: Key word specification in Personal WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open. Here select the Personal type.
Key Management	WPA3/WPA2/WPA encryption method. It is applicable to Enterprise/Personal WLANs only. - Both(wpa&wpa2): Allowing WPA or WPA2 capable wireless client to connect to the WLAN - wpa2-personal: Only Allowing WPA2 capable wireless client to connect to the WLAN - Both(wpa2&wpa3): Allowing WPA2 or WPA3 capable wireless client to connect to the WLAN - wpa3-personal: Only Allowing WPA3 capable wireless client to connect to the WLAN - Static-wep: Wireless client is authenticated with Static Wired Equivalent Privacy security algorithm, which is specified in 802.11b and is designed to provide a WLAN with a level of security and privacy comparable to what is usually expected of a wired LAN. You can specify up to 4 WEP keys and make one of them effective for authentication. Each WEP key can be 10 or 26 hexadecimal characters. Recommendation is that a static-wep WLAN is ONLY applicable for those 802.11b clients.
PMF	Stellar supports the IEEE802.11w standard, also known as Protected Management Frames (PMF). The PMF function increases the security by providing data confidentiality of management frames. PMF is applicable for WPA2 and WPA3 encryption method. - Disabled: Disables 802.11w PMF protection for the WLAN. - Optional: Both 802.11w PMF capable clients and 802.11w PMF non-capable clients can connect the WLAN. - Required: Only 802.11w PMF capable clients can associate to the WLAN.
Password Format	Password format of Personal WLAN. There are two password formats to be selected: Either as a string of 64 hexadecimal digits, or as a passphrase of 8 to 63 printable ASCII characters.
Password	Enter the password for the Personal WLAN.
Confirm	Reenter the password for the Personal WLAN.
Inactivity Timeout Status	Specify the inactivity timeout interval configuration status. The clients will be disconnected from the wireless network for a specific duration that not transmitting any packets. If Inactivity Timeout Status is disabled, the inactivity timeout interval is set to fixed 600 seconds. If Inactivity Timeout Status is enabled, the configured Inactivity Timeout Interval will be used to disconnect inactivity client.
Inactivity Timeout Interval	Configure the inactivity timeout period, with a valid range of 60 to 12000 seconds.
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast (for up to 6 clients) can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.

VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4GHz, 5GHz, or 6GHz (if applicable for the region). Note: 6GHz wireless networks only support WPA 3 and Enhanced Open encryption methods.
MLO	MLO is a key technological innovation in Wi-Fi 7, which allows devices to simultaneously utilize multiple frequency bands (such as 2.4GHz, 5GHz, and 6GHz) for data transmission. This multi band aggregation method enables Wi-Fi 7 devices to significantly improve the efficiency and speed of data transmission. MLO Band: The band selected to enable MLO feature on the WLAN. Note: MLO function also relies on radio status and its EHT setting. Make sure corresponding radio and its EHT being enabled to activate MLO.
Scope Type	Specify the scope of APs in the cluster which will create the WLAN. All - All APs in the cluster will create the WLAN. Group - Select the APs which will create the WLAN. The AP which MAC address is in the group will be valid for the WLAN.
WLAN Access Timer	Specify the WLAN working period, in which only SSID broadcasts. If NOT configured (Disabled), SSID will always broadcast if the WLAN is activated. - Access Days - Specify the days for broadcasting SSID per week. - Operational Hours - Specify the time of the day in which broadcasting SSID.
Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 1 to 256. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
FDB update on Association	Enable/Disable FDB update on Association. If enabled, when a client roams to a new AP, the AP will send ARP packets to the uplink switch to notify the switch to change the downstream forwarding port for the wireless client's traffic.
Client Isolate	Not permit the clients attached to the same WLAN to communicate with each other, they can only communicate with upstream gateway.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an AP to request a voice client to transition to a specific AP, or suggest a set of preferred APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best AP to transition to as they roam.
802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP
2.4G Client Rate Control	Enables/Disables 2.4G band accessing control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not be allowed to access, recommended value 12

5G Client Rate Control	Enables/Disables 5G band accessing control based on client data rate
5G Client Rate	5G band client with lower data speed will not be allowed to access, recommended value 24
6G Client Rate Control	Enables/Disables 6G band accessing control based on client data rate
6G Client Rate	6G band client with lower data speed will not be allowed to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
6G MGMT Rate Control	Enables/Disables 6G band wireless management frame rate control
6G MGMT Rate	6G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
Advertise AP Name	Advertise AP name in the beacon frame, disabled by default.
DTIM Interval	The DTIM interval indicates the DTIM period in beacons, which determines how often the AP should deliver the buffered broadcast and multicast frames to associated clients in the power save mode. The default value is 1, which means the client checks for buffered data on the AP at every beacon. User can also configure a higher DTIM value for power saving.
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

Create a Captive Portal WLAN

Captive Portal WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-5 Create Captive Portal WLAN - Simplified Mode and Figure 5-6 Create Captive Portal WLAN - Advanced Mode. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are three essential parameters to be configured for a Captive Portal WLAN in simplified mode, they are WLAN Name, Security Level (Open) and Captive Portal (Yes). Other parameters will be considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-3 for details about each parameter.

Figure 5-5 Create Captive Portal WLAN - Simplified Mode

Create New WLAN

WLAN Name:

(1-32 chars)

Security Level:

Open

Captive Portal:

☐ Yes
☒ No

Inactivity Timeout Status:

off

Inactivity Timeout Interval:

600

(60-1200)s

Enable:

☒ Yes
☐ No

Hidden:

☐ Yes
☒ No

Multicast:

☐ Yes
☒ No

Broadcast ARP:

☐ Yes
☒ No

VLAN ID:

0

(0-4090)

Band:

☒ 2.4GHz
☒ 5GHz

WLAN Access Timer:

off

MaxClients Per Band:

64

(1-256)

Upstream Per Client:

0

(0-65536)kbps

Downstream Per Client:

0

(0-65536)kbps

Client Isolate:

off

802.11v:

on

802.11k:

on

802.11b:

on

802.11g:

on

2.4G Client Rate Control:

off

2.4G Client Rate:

1

Mbit/s

5G Client Rate Control:

off

5G Client Rate:

6

Mbit/s

2.4G MGMT Rate control:

off

2.4G MGMT Rate:

1

Mbit/s

5G MGMT Rate control:

off

5G MGMT Rate:

6

Mbit/s

Hide

Cancel

Save

Figure 5-6 Create Captive Portal WLAN - Advanced Mode

Table 5-3: Key word specification in Captive Portal WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open. Here select the Open type.
Captive Portal	Specify the captive portal authentication supporting state. Yes indicates the WLAN supports captive portal authentication, while No indicates the WLAN does not support captive portal authentication.
Enhance Open	Enhanced open provides improved data encryption in open Wi-Fi networks and protects data from sniffing. With enhanced open, the client and WLAN perform Diffie-Hellman key exchange during the access procedure and use the resulting pairwise key with a 4-way handshake. Stellar AP supports the following Enhanced Open authentication types: • OWE (Opportunistic Wireless Encryption) • Transition mode - The enhanced open transition mode enables a seamless transition from open unencrypted WLAN connections without adversely impacting the end user experience. It provides the ability for enhanced open and non-enhanced open clients to connect to the same open system virtual AP. In this mode the AP broadcasts two different types of BSSID. One legacy Open SSID on 2.4/5GHz band, and one Enhanced Open SSID on 2.4/5/6GHz band.
Inactivity Timeout Status	Specify the inactivity timeout interval configuration status. The clients will be disconnected from the wireless network for a specific duration that not transmitting any packets. If Inactivity Timeout Status is disabled, the inactivity timeout interval is set to fixed 600 seconds. If Inactivity Timeout Status is enabled, the configured Inactivity Timeout Interval will be used to disconnect inactivity client.
Inactivity Timeout Interval	Configure the inactivity timeout period, with a valid range of 60 to 12000 seconds.
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast (for up to 6 clients) can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.
VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4GHz, 5GHz, or 6GHz (if applicable for the region). Note: 6GHz wireless networks only support WPA 3 and Enhanced Open encryption methods.
MLO	MLO is a key technological innovation in Wi-Fi 7, which allows devices to simultaneously utilize multiple frequency bands (such as 2.4GHz, 5GHz, and 6GHz) for data transmission. This multi band aggregation method enables Wi-Fi 7 devices to significantly improve the efficiency and speed of data transmission. MLO Band: The band selected to enable MLO feature on the WLAN. Note: MLO function also relies on radio status and its EHT setting. Make sure corresponding radio and its EHT being enabled to activate MLO.
Scope Type	Specify the scope of APs in the cluster which will create the WLAN. • All - All APs in the cluster will create the WLAN.

	Group - Select the APs which will create the WLAN. The AP which MAC address is in the group will be valid for the WLAN.
WLAN Access Timer	Specify the WLAN working period, in which only SSID broadcasts. If NOT configured (Disabled), SSID will always broadcast if the WLAN is activated. - Access Days - Specify the days for broadcasting SSID per week. - Operational Hours - Specify the time of the day in which broadcasting SSID.
Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 1 to 256. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
FDB update on Association	Enable/Disable FDB update on Association. If enabled, when a client roams to a new AP, the AP will send ARP packets to the uplink switch to notify the switch to change the downstream forwarding port for the wireless client's traffic.
Client Isolate	Not permit the clients attached to the same WLAN to communicate with each other, they can only communicate with upstream gateway.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an AP to request a voice client to transition to a specific AP, or suggest a set of preferred APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best AP to transition to as they roam.
802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP
2.4G Client Rate Control	Enables/Disables 2.4G band accessing control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not be allowed to access, recommended value 12
5G Client Rate Control	Enables/Disables 5G band accessing control based on client data rate
5G Client Rate	5G band client with lower data speed will not be allowed to access, recommended value 24
6G Client Rate Control	Enables/Disables 6G band accessing control based on client data rate
6G Client Rate	6G band client with lower data speed will not be allowed to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage

WLAN Configuration

6G MGMT Rate Control	Enables/Disables 6G band wireless management frame rate control
6G MGMT Rate	6G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
Advertise AP Name	Advertise AP name in the beacon frame, disabled by default.
DTIM Interval	The DTIM interval indicates the DTIM period in beacons, which determines how often the AP should deliver the buffered broadcast and multicast frames to associated clients in the power save mode. The default value is 1, which means the client checks for buffered data on the AP at every beacon. User can also configure a higher DTIM value for power saving.
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

After the WLAN has been created, proceed to: [How to Configure Captive Portal Authentication](#) to complete the configuration.

Delete Your WLAN

In WLAN Window Advanced Mode Figure 4-3 WLAN Window-Advanced Mode, you can delete the WLAN by clicking the '✖' Button, as shown in Figure 5-7.

WLAN Configuration				
WLAN Name	Status	Security Level	Captive Portal	Operate
mywifi-1x	Enable	enterprise	No	  wmm
mywifi-employee	Enable	personal	No	  wmm
mywifi-guest	Enable	open	Yes	  wmm
mywifi-portal2	Disable	open	No	  wmm

Figure 5-7 Delete a WLAN

Modify Your WLAN

In WLAN Window Advanced Mode Figure 4-3 WLAN Window-Advanced Mode, you can modify the WLAN by clicking the '✎' Button, shown in Figure 5-8. All configurable WLAN parameters will be displayed on the right of WLAN Window Advanced Mode, Enterprise WLAN see Table 5-1, Personal WLAN see Table 5-2 and

WLAN Configuration

Captive Portal WLAN see Table 5-3. Click **Cancel** to cancel the modification or click **Save** to save the configuration.

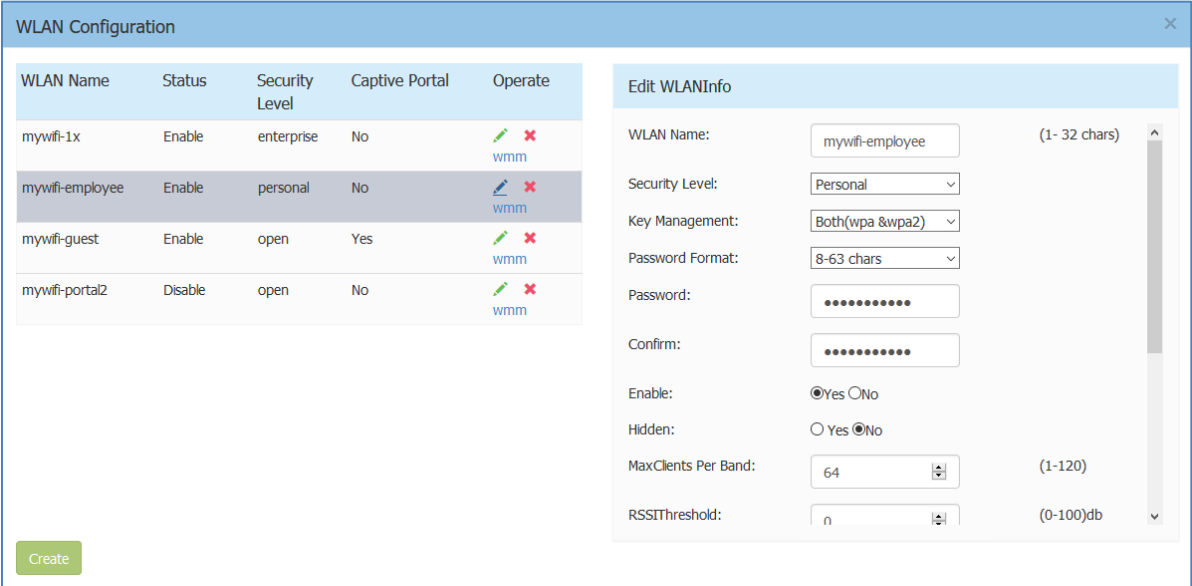


Figure 5-8 Modify a WLAN

Modify WLAN QoS

Wi-Fi Multimedia (WMM) is a Wi-Fi Alliance interoperability certification, based on the IEEE 802.11e standard. It provides basic Quality of service (QoS) features to IEEE 802.11 networks. WMM prioritizes traffic according to four Access Categories (AC): voice (AC_VO), video (AC_VI), best effort (AC_BE), and background (AC_BK). It is suitable for well-defined applications that require QoS, such as Voice over IP (VoIP) on Wi-Fi phones.

You can edit the mapping relationship between DSCP/802.1p values and WMM priorities for a WLAN on Stellar AP, illustrated in Figure 5-9.

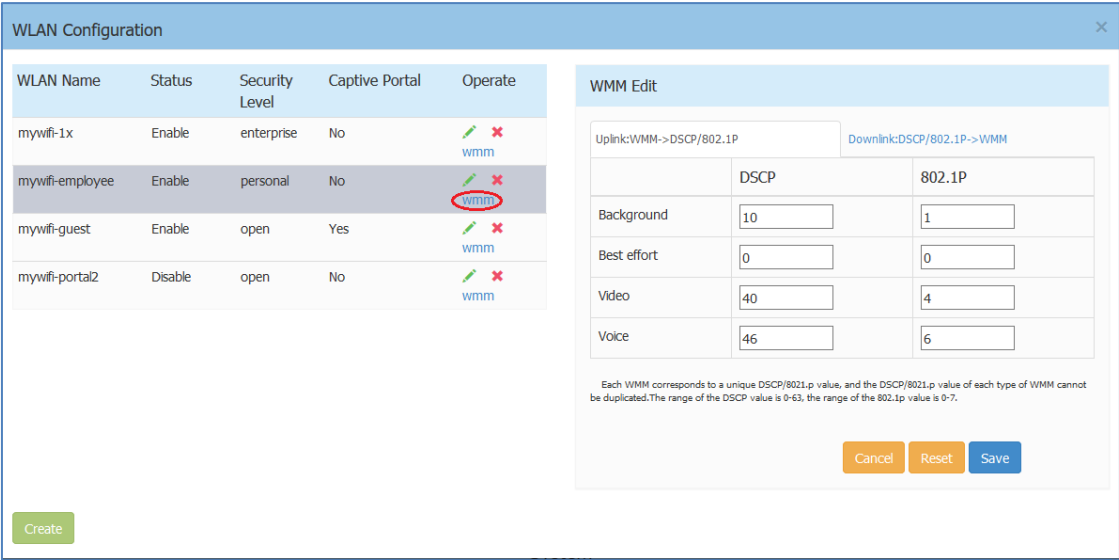


Figure 5-9 Modify WLAN QoS

6 AP Management

This chapter describes how to configure and manage your AP. The ALE Wi-Fi solution is a controller-less based architecture. The APs can establish an autonomous group, in which there are three types of AP roles, Primary Virtual Manager (PVM), Secondary Virtual Manager (SVM) and member AP. This chapter describes how to manage the group and how to check, backup, restore AP configuration and to upgrade firmware in GUI.

AP Management procedures described in this chapter include:

- [AP Group Management](#)
- [Import and Export AP Configuration](#)
- [Upgrade AP Firmware](#)
- [Modify AP Name and IP Address](#)
- [Check AP Configuration Detail](#)
- [Modify AP Transmission Power and Channel](#)
- [AP LED Specification](#)
- [Locate AP or Turn LED Off](#)
- [Kick off an AP from the group](#)
- [Allow an AP to join the group](#)
- [How to add a new AP to the group](#)
- [How to replace an current AP in the group](#)
- [How to Setup Wireless Networks with more than 64 APs](#)
- [How to Configure the AP if there is no DHCP server](#)

AP Group Management

By default, APs will have the group ID 100 and all APs that have the same group ID will align to the same group. The group will select the AP which has the highest MAC address as the PVM and the AP which has the second highest MAC address as the SVM. Each group has a management IP address that is a virtual IP and will be assigned to the PVM. When the PVM fails to respond due to an unexpected error or issue, the SVM will automatically upgrade to act as the PVM. There will be no interruption or service disturbance to member APs or any of the wireless users.

Table 6-1 describes the several group attributes parameters.

To configure or modify the group attributes, launch the window 'System-General Configuration', as shown in Figure 6-1. AP group information will be displayed at the top of the Dashboard, as shown in Figure 6-2.

Table 6-1: AP Group Attribution Parameters Specification

Parameter	Specification
Group ID	Define a unique AP Group
Group Name	Name of the group
Location	Specify where you will deploy this group of APs. Provide specific name to identify the group location.
Group Management IP	It is a virtual IP address and will be dynamically assigned to the PVM. It is used for the group management and can be configured manually.

Group Management Netmask	Netmask of Group Management IP.
--------------------------	---------------------------------

General Configuration

Group Info Management

Account Management

Group Name:

mywifi_in_office

(1-25 chars)

Location:

Paris

(1-32 chars)

Group Management IP:

192.168.1.200

Group Management Netmask:

255.225.255.0

Group ID:

8848

(1-9999)

Cancel

Save

Cancel

Save

Figure 6-1 AP Group Configuration Window

Alcatel-Lucent Enterprise

AP Group : mywifi_in_office - 192.168.1.200
Paris

Administrator Logout | About Help | English
Tools | Polling Cycle: 30s

Figure 6-2 AP Group Information Location

AP Configuration			
Primary Name	IP	Firmware	Operate
PVC			
AP-00:E0	192.168.20.162(AP) 192.168.1.200(M)	2.1.0.63	
SVC			
MEMBER			
Joining			

Figure 6-3 AP Group Management IP

There are two IP addresses on the PVM of the group, illustrated in Figure 6-3 (Navigate:Dashboard - AP Window - AP Configuration Window).

1. AP IP address [e.g.: 192.168.20.162(AP)] - The IP of the PVM which used to communicate with other Stellar APs in the group and with network entities outside the group. It can be set manually or assigned from a DHCP server in the network.

2. AP Group Management IP address [e.g.: 192.168.1.200(M)] - The virtual IP for the group management. It can be set by the administrator manually and as a static group management entrance through wired or wireless access.

Import and Export AP Configuration

In the AP Configuration Window (Navigate:Dashboard - AP Window - AP Configuration Window), you can backup, recover or clear the group configuration, illustrated in Figure 6-4 and Figure 6-5.

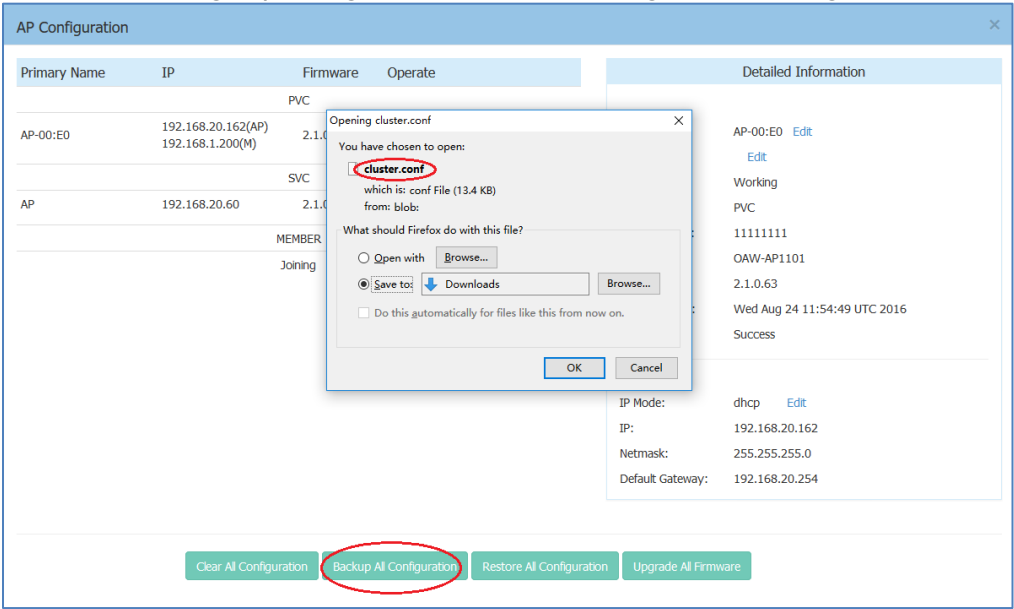


Figure 6-4 Export AP Group Configuration

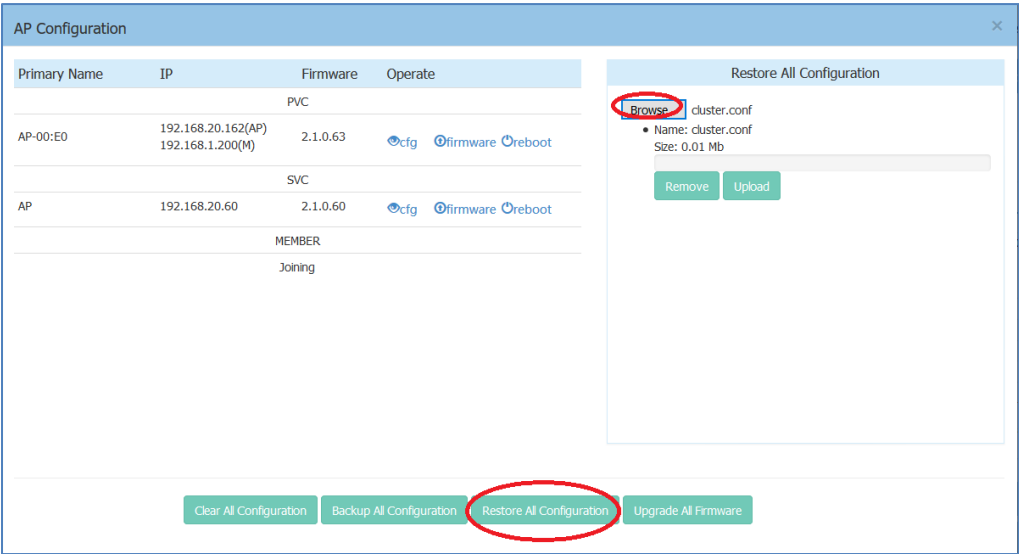


Figure 6-5 Import AP Group Configuration

Table 6-2: AP Group Configuration

Parameter	Specification
Clear All Configuration	Clear all AP configurations, return to factory state.
Backup All Configuration	Download and backup configuration file of AP group, it is recommended to do this when you have completed all configuration.
Restore All Configuration	Upload configuration file to all APs.

Upgrade All Firmware	Upgrade all AP's firmware.
----------------------	----------------------------



Note

Note6-1: All configuration settings (clear, backup or restore) will be applied to the entire group. There is no need to select specific APs to apply configuration settings. The entire group of APs have one configuration file.

Upgrade AP Firmware

Before upgrading the AP you should prepare the firmware file to be upgraded. You can download the firmware file and save it in the local drive of the machine you are using to connect to the Stellar AP or save the firmware file in a remote TFTP server.

In the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**), there are separate entrances for upgrading a single AP or all the APs in a group:

1. **Upgrade single AP:** Select the AP to be upgraded from the AP list, click  **firmware** to upload firmware, illustrated in Figure 6-6 and Figure 6-7. Generally, it takes approximately five minutes to upgrade the AP firmware.
2. **Upgrade all APs:** Click on  to open a dedicated upgrade page to upload separate AP firmware for each AP model and upgrade, illustrated in Figure 6-8.

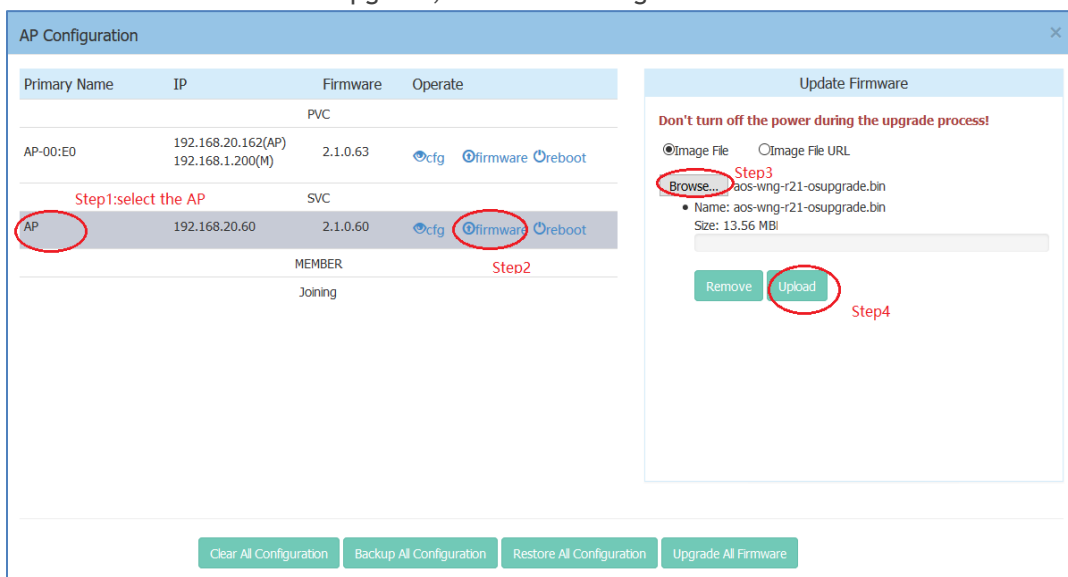


Figure 6-6 Update Single AP using Local Image File

You can also upload the AP firmware from a specified URL as shown in Figure 6-7.

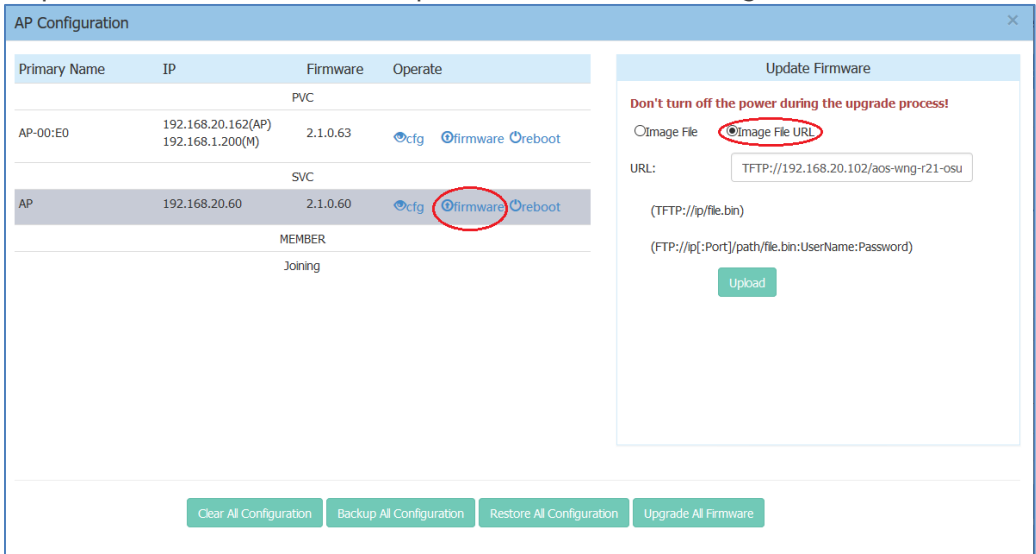


Figure 6-7 Update Single AP from Remote TFTP Server

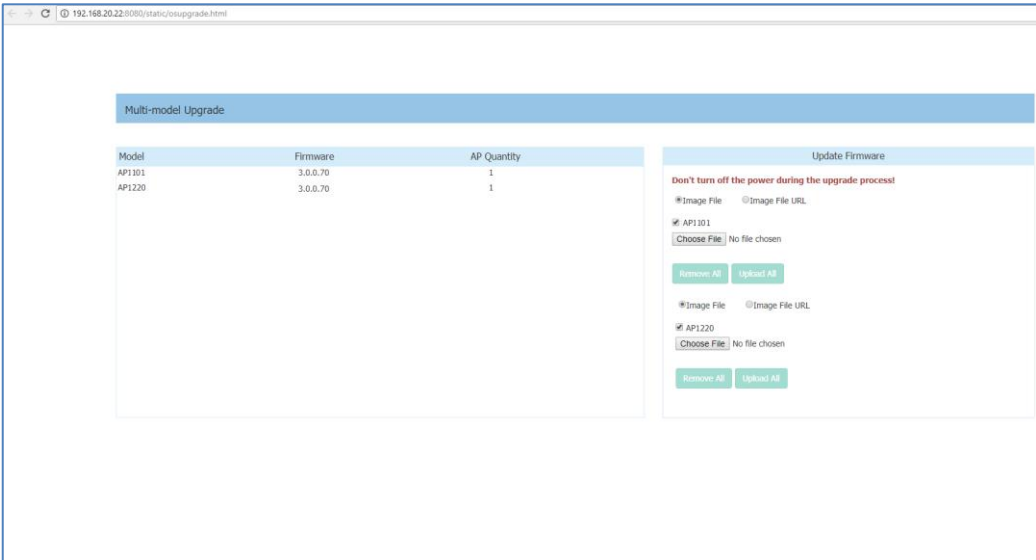


Figure 6-8 Update all APs' Firmware



Warning 6-1:
Don't turn off the power during the upgrade process!



Note 6-2: In order to make sure you're running the latest software, we strongly recommend to clear the browsing data in your browser after the software upgrade, including:

- Cookies
 - Cache
-

Modify AP Name and IP Address

In the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**), you can modify the name and other parameters as needed for the AP in Detailed Information panel.

→ **Modify AP Name**

Detailed Information	
APName:	AP-05:30 Edit
Location:	Edit
Status:	Working
Role in Group:	PVC
Serial Number:	NI9GG22Y006UC01
Model:	OAW-AP1101
Firmware:	2.1.0.65
Upgrade Time:	Wed Sep 7 02:27:11 UTC 2016
Upgrade Flag:	Success

Figure 6-9 Modify AP Name

Click on “**Edit**” to modify the AP name. Enter a name to identify the AP. By default, an Stellar AP is named with the last two bytes of its MAC address (e.g. 05:30 is the last-two-byte MAC address of the Stellar AP in Figure 6-9).

→ **Modify AP IP Address**

Enter an IP address to modify AP IP address. Stellar AP supports both static and dynamic IP addresses, illustrated in Figure 6-10.

Detailed Information	
APName:	AP Edit
Location:	Edit
Status:	Working Kick Off
Role in Group:	SVC
Serial Number:	NI9GG22Y006UC01
Model:	OAW-AP1101
Firmware:	2.1.0.60
Upgrade Time:	Fri Aug 19 15:18:42 UTC 2016
Upgrade Flag:	Success

IP Mode:	dhcp Edit
IP:	192.168.20.60
Netmask:	255.255.255.0
Default Gateway:	192.168.20.254

☐ DHCP

☒ Static

[Cancel](#)

[Save](#)

IP:	192.168.20.60
Netmask:	255.255.255.0
Default Gateway:	192.168.20.254

Figure 6-10 Modify AP IP Address

Check AP Configuration Detail

Click  to verify AP configuration in the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**).

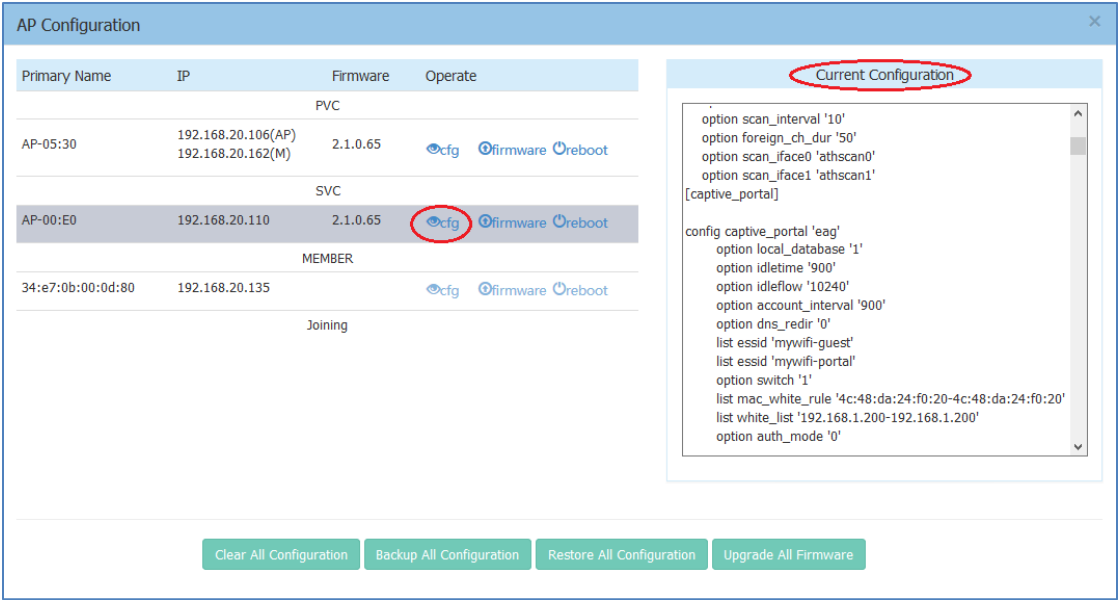


Figure 6-11 Check AP Configuration Detail

Modify AP Transmission Power and Channel

You can modify the transmission power and working channel for the Stellar AP in the RF Configuration Window. (Navigate: Dashboard-Wireless Page-RF Window-RF Configuration Window)

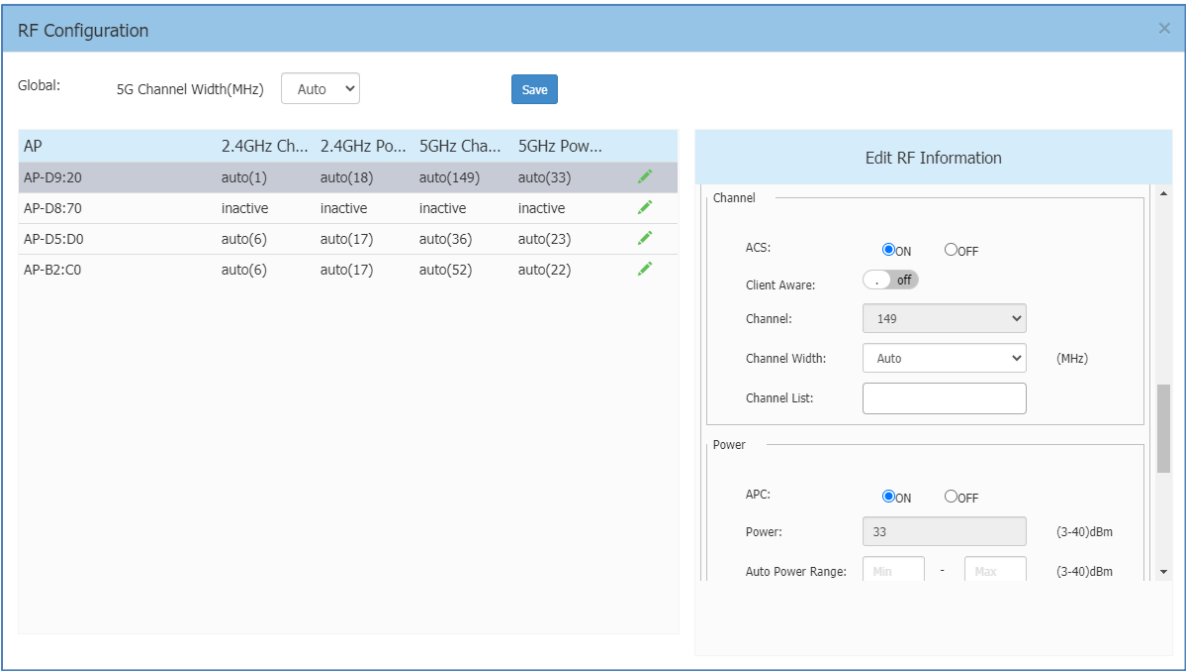


Figure 6-12 RF Management

Automatic Channel Selection (ACS) and Automatic Power Control (APC) are turned ON by default. The AP transmission power and channel are adjusted dynamically by default. If you disable ACS and APC the channel used by the AP and the transmit power must be set manually. In manual mode the AP transmit power can be adjusted in 1 dB increments. These values must be set for both radio bands.

AP LED Specification

Table 6-3: Describes the LED status during different stages of Stellar AP.

Red	Blue	Green	Time Line	Status
ON			Power on	Power on
ON			Bootloader-OS loading	System start up
Flash			System running	Network abnormal (Interface down)
		Flash	System running	Network normal, without SSID created
		ON	System running	Network normal, single band working, ether 2.4Ghz or 5Ghz working
	ON		System running	Network normal, dual bands working, 2.4Ghz and 5Ghz are both working
Flash	Flash		System running	Red and Blue LED rotate flash in a specific frequency; OS upgrading
Flash	Flash	Flash	System running	3 LED rotate flash in a specific frequency; Used for location an AP

Locate AP or Turn LED Off

Step1: Click  in **AP Window** of Dashboard to launch 'LED-Off/Locate' buttons.

Step2: Click 'LED-Off' to turn off the LED light.

AP Working:2 Down:0 Joining:0		
Primary Name	Status	Clients
 AP-00:E0	Working	2
 AP	Working	0

Figure 6-13 Turn LED off

Step3: Click "Locate" to locate AP.

AP			Working:2	Down:0	Joining:0
Primary Name		Status	Clients		
	AP-00:E0	Working	2		
	LED-On / <u>Locate</u>				
	AP	Working	0		

Figure 6-14 Locate AP

The Restore window appears. The LED blinks with red, blue and green color.

Step 4: Click "Restore" to return to the normal state.

AP			Working:2	Down:0	Joining:0
Primary Name		Status	Clients		
	AP-00:E0	Working	2		
	Restore				
	AP	Working	0		

Figure 6-15 Restore AP state

Remove an AP from the Group

An AP is removed from the AP group list (PVM/SVM/Member) by selecting “kick off”. Then the AP enters a group blacklist, if it is not disconnected from the network it will move to the ‘**Joining**’ state, and without authorization is not permitted to be a member of group again.
See in Figure 6-16 and Figure 6-17.

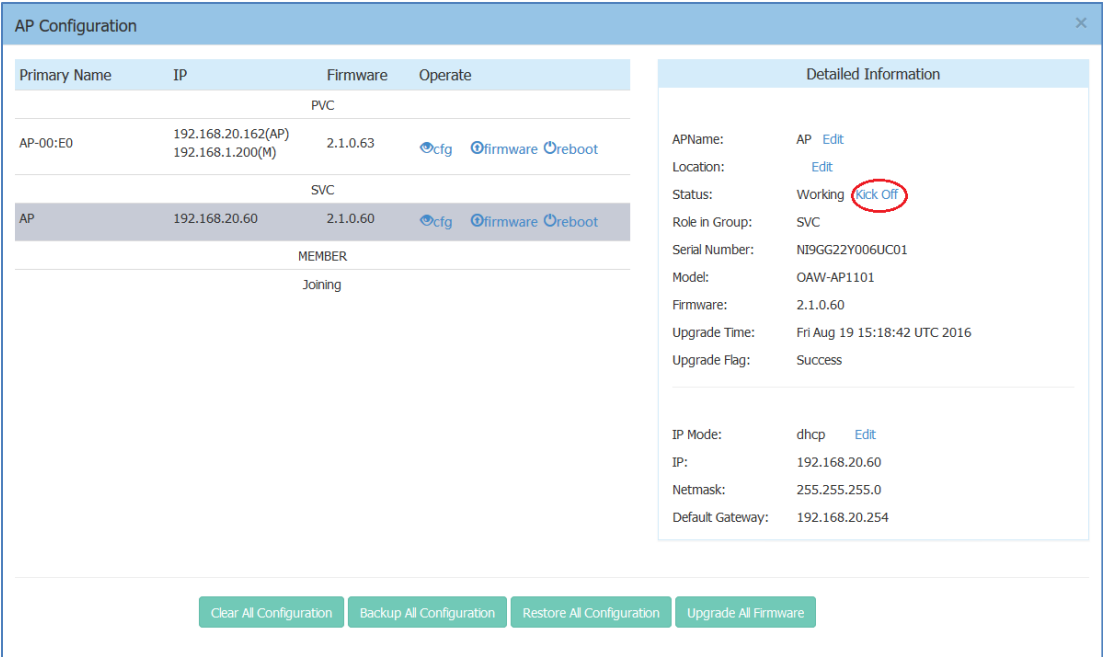


Figure 6-16 Remove an AP from Group

Allow an AP to Join the Group

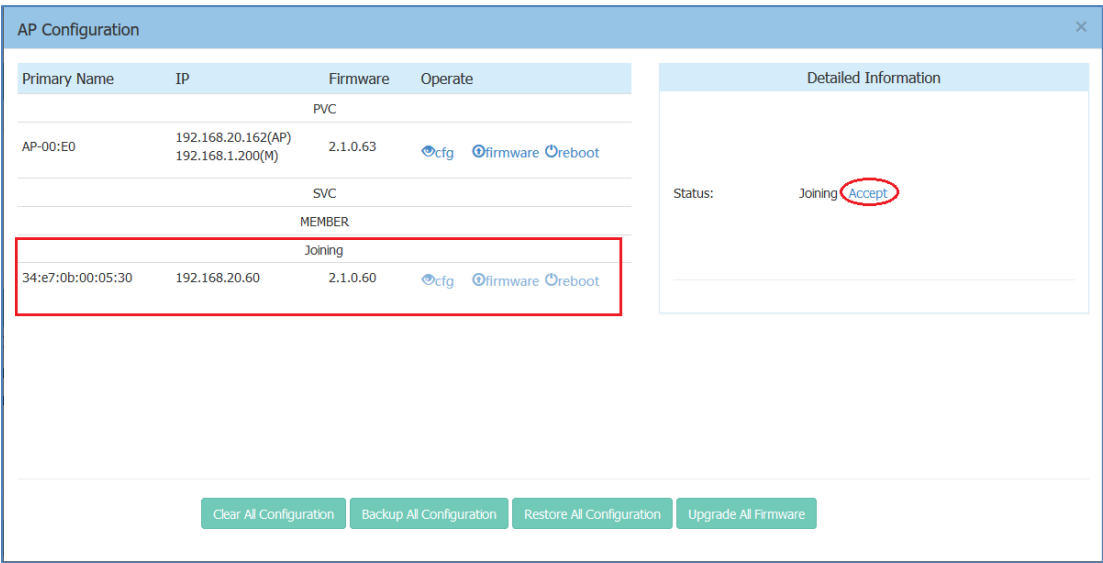


Figure 6-17 Allow AP to join group

In the displayed AP Configuration screen, an AP in ‘Joining’ state is in the group blocklist, the ‘Accept’ operation lets it join the group and removes it from the group blocklist.

How to Add a New AP to Group

To add a new AP to the group, ensure that the PVM is not in the 'Down' state. If the PVM is down, upgrade the SVM to be the PVM before plugging in the new AP.

How to Replace a Current AP in Group

1. **To replace the current PVM:** Upgrade the SVM to the PVM before disconnecting the old PVM. Then replace the old PVM with a new Stellar AP.
2. **To replace the SVM or a MEMBER of the group:** Disconnect and replace the SVM or member directly with a new Stellar AP, users on other Stellar APs will not be affected.

How to Setup Wireless Networks With large scale of Stellar APs

If you have more Stellar APs than a group specification, you can setup more than one AP group to provide Wi-Fi service.

There are three methods to setup more than one AP group in the network:

Method one: Divide the Stellar APs into different subnets by changing the default VLAN of the switch ports to which the Stellar APs connect; for example: subnet-A uses default VLAN 100 while subnet-B uses default VLAN 200.

Method two: Setup up different group IDs for each AP group respectively. Perform the following steps:

1. Select the APs which you want to work in Group-A, plug in to the switch to build the first AP group;
2. Browse to the Group-A management interface and change its group ID. (For example: change the group ID from 100 to 8818), see in [General Window](#).
3. Repeat the above process to setup Group B/C/etc.

Method three: Deploy Stellar AP with ALE OmniVista and scale up to 4000 AP in one network.



Note

Note 6-3: Without Omni Vista management, each group is managed independently and roaming between groups is not supported.

How to Configure the AP if There is No DHCP server

Case one: If the APs reboot and the DHCP server is not accessible, all the APs return to the system default IP -192.168.1.254. This means there are duplicate IPs in the broadcast domain. All the APs work separately as the PVM and broadcast the same WLANs. In this case, it is highly recommended to fix the DHCP sever in the network and let the wireless service recover.

Case two: If you want to configure a single Stellar AP without a DHCP server, perform the following steps:

1. Connect the Stellar AP (default IP address is 192.168.1.254) to your configuring terminal (laptop for example) directly with an Ethernet cable.
2. Specify a static IP address and a DNS sever for the network card of your laptop, for example: IP Address - 192.168.1.100; Subnet Mask - 255.255.255.0; Default Gateway - 192.168.1.254; DNS sever -192.168.1.254.
3. Browse <http://mywifi.al-enterprise.com:8080> or <http://192.168.1.254:8080> to configure the Stellar AP.


How to Configure the Power Consumption

AWOS support Power Profiles where the Administrator can adjust the power consumption of the Aps. (Navigate: **Dashboard-Power Profile**)

Power Profile											
Power Profile						Power Control					
Name	Chainmask	Radio OFF	Wired Speed	Operate		Name	Calendar	Start Ti...	End Time	Power Profile	Status
Power-test	2*2	2.4GHz	5Gbps	✎ ✖		Power-ctr...	Wed,Thu	00:00	24:00	Power-test	enable

Figure 6-18 Power Profile Window

Step1: Click 'Power Profile' in the **Power Profile Window** of Dashboard to create a new 'Power Profile'.

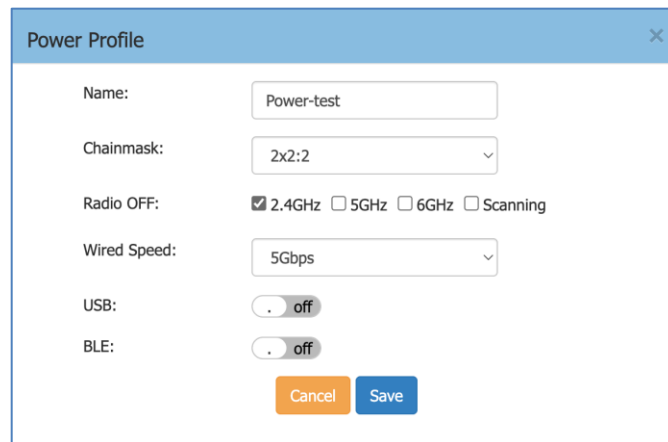

The 'Power Profile' window contains the following fields and controls:

- Name:** Text input field with 'Power-test'.
- Chainmask:** Dropdown menu showing '2x2:2'.
- Radio OFF:** Checkboxes for '2.4GHz' (checked), '5GHz', '6GHz', and 'Scanning'.
- Wired Speed:** Dropdown menu showing '5Gbps'.
- USB:** Toggle switch set to 'off'.
- BLE:** Toggle switch set to 'off'.
- Buttons:** 'Cancel' (orange) and 'Save' (blue) buttons at the bottom.

Figure 6-19 Create Power Profile

Allow the AP radio MIMO to move from 4x4:4 -> 3x3:3 -> 2x2:2 -> 1x1:1 for power saving.

Allow the AP to disable the USB Host interface.


Allow the AP to reduce the wired port speed from 5Gbps -> 2.5Gbps -> 1Gbps.

Disable IoT(BLE/Zigbee) Radio .

Disable Scanning Radio.

Disable one or several Radios in multi-radio APs (for instance, turning off 2,4GHz and 6GHz and keeping 5Ghz active).

Step2: Click 'Power Control' in the Power Profile Window of Dashboard to create a new 'Power Control'.

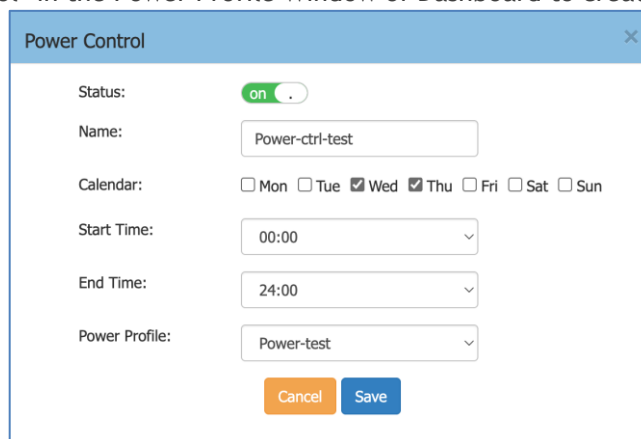

The 'Power Control' window contains the following fields and controls:

- Status:** Toggle switch set to 'on'.
- Name:** Text input field with 'Power-ctrl-test'.
- Calendar:** Checkboxes for days of the week: 'Mon', 'Tue', 'Wed' (checked), 'Thu' (checked), 'Fri', 'Sat', 'Sun'.
- Start Time:** Time selection dropdown showing '00:00'.
- End Time:** Time selection dropdown showing '24:00'.
- Power Profile:** Dropdown menu showing 'Power-test'.
- Buttons:** 'Cancel' (orange) and 'Save' (blue) buttons at the bottom.

Figure 6-20 Create Power Control

The administrator can define different timeframes in the week and assign a Power Profile.

7 Authentication Management

As WLANs evolve from best-effort to mission-critical infrastructure, organizations are finding that the operational aspects of network security take on much greater importance. The ALE Wi-Fi solution supports enhanced security methods to assure your wireless connection is more secure to eliminate any type of potential sniffers and other security threats. The major features of the ALE WLAN are:

- **To secure users and network traffic in a WLAN** - ALE provides a full suite of authentication, encryption, and policy enforcement capabilities in an architecture that allows easy integration of additional security services.
- **Wireless Intrusion Prevention System (WIPS)** - To enforce no-wireless policies or detect attacks against a WLAN, ALE AP provides advanced threat detection and suppressing functions. An AP can scan the wireless environment and detect the potential rogue and restrict it from replying to user connection requests.

AP Security described in this chapter includes:

- [Authentication and Encryption Methods](#)
- [How to Configure Captive Portal Authentication](#)

Authentication and Encryption Methods

When creating a WLAN, select the security type as illustrated in Figure 7-3.

- **Open:** No Authentication or encryption method for this WLAN. User data will be transmitted as Plain text Transmit Mode.
- **Personal:** There will be Static-WEP, and several WPA, WPA2, WPA3 combinations available once you select Personal. This does not require an external RADIUS server as illustrated in Figure 7-3.
- **Enterprise:** Authentication method will be based on WPA Enterprise Architecture. Encryption method TKIP or AES is selected. An external RADIUS server is required as illustrated in Figure 7-4.

**Note**

Note 7-1: WPA uses 802.1X authentication which is one of the Extensible Authentication Protocol (EAP) types available today. 802.1X is a port-based network access control method for wired, as well as wireless, networks.

It was adopted as a standard by the IEEE in August of 2001. EAP handles the presentation of users' credentials, in the form of digital certificates (already widely used in Internet security), unique usernames and passwords, smart cards, secure IDs, or any other identity credential that the IT administrator is comfortable deploying. WPA allows flexibility in both the type of credentials that are used and in the selection of an EAP type.

Enterprise Authentication is developed for medium and large businesses and requires a RADIUS authentication server that provides automatic key generation and authentication throughout the entire enterprise.

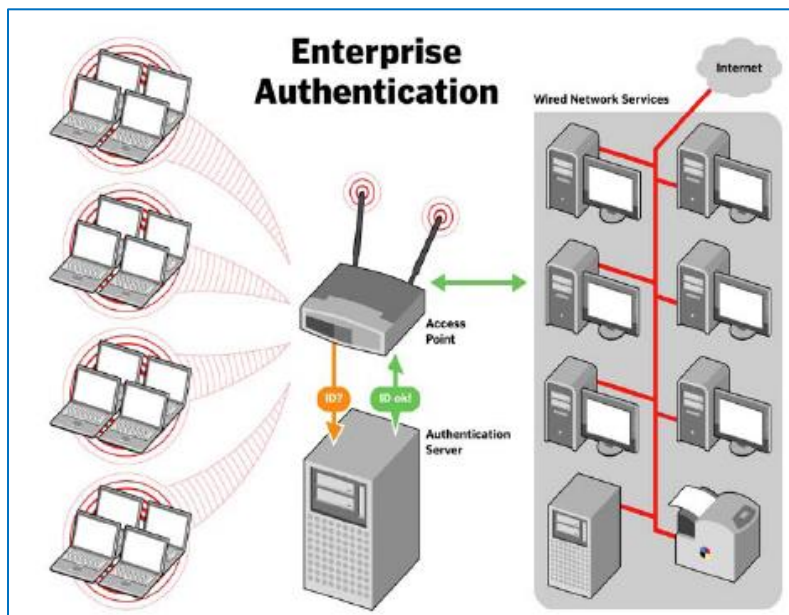


Figure 7-1 Enterprise Authentication

Users in small office and home office (SOHO) wireless LAN environments lack the budget and IT staff to install and maintain RADIUS authentication servers. There are alternatives for this type of wireless LAN authentication and validation: Static-WEP and WPA-Personal. Both protocols use a pre-shared key, but the encryption on WEP is weaker than the encryption on WPA-Personal systems. It's recommended to use WPA-Personal instead of WEP protocol for encryption and authentication.

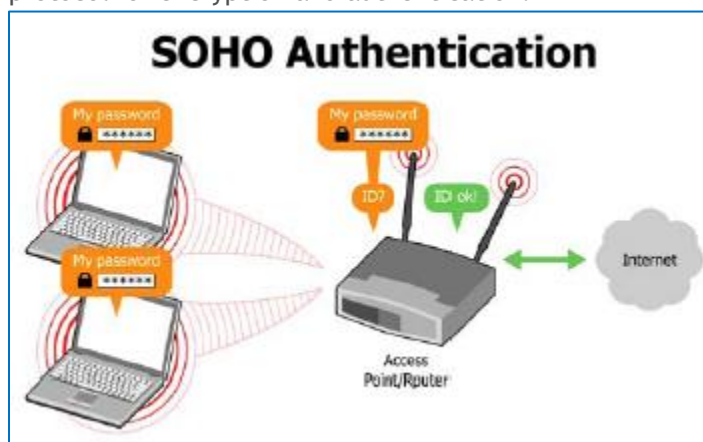


Figure 7-2 SOHO Authentication

The screenshot shows the 'Create New WLAN' dialog box with the 'Security Level' set to 'Personal'. The 'Key Management' dropdown menu is open, showing options: 'Both(wpa &wpa2)', 'Both(wpa &wpa2) wpa2-personal', 'Both(wpa2&wpa3)' (highlighted in blue), and 'wpa3-personal'. The 'WLAN Name' is 'mywifi-employee', 'Password Format' is 'Both(wpa2&wpa3)', 'Password' is masked with dots, and 'Confirm' is also masked. There are 'Cancel' and 'Save' buttons at the bottom right, and an 'Advanced' link at the bottom left.

Figure 7-3 Authentication Security Type-Personal

The screenshot shows the 'Create New WLAN' dialog box with the 'Security Level' set to 'Enterprise'. The 'Key Management' dropdown menu is open, showing options: 'wpa3-enterprise' (highlighted in blue), 'Both(wpa &wpa2)', 'wpa2-enterprise', and 'wpa3-enterprise'. The 'WLAN Name' is 'mywifi-employee', 'CNSA' is 'wpa3-enterprise', 'AuthServer' is '192.168.1.100', 'AuthPort' is '1812', 'AuthSecret' is masked with dots, and 'Nas Identifier' is '10'. There are 'Cancel' and 'Save' buttons at the bottom right, and an 'Advanced' link at the bottom left.

Figure 7-4 Authentication Security Type-Enterprise

There are multiple Wi-Fi security protocols for personal and enterprise networks:


- Wired Equivalent Privacy (WEP), introduced as part of the original 802.11 standard ratified in 1997. It uses the RC4 cipher to ensure confidentiality and a CRC-32 Checksum to ensure integrity of the data transmitted.
- Wi-Fi Protected Access (WPA) became available in 2003. It was the replacement to the increasingly apparent vulnerabilities of the WEP encryption standard. The keys used by WPA are 256-bit, a significant increase over the 64-bit and 128-bit keys used in the WEP system. WPA includes message integrity checks and the Temporal Key Integrity Protocol (TKIP). TKIP employs a per-packet key system that was radically more secure than the fixed key system used by WEP. RC4 cipher is still used to ensure confidentiality in WPA.

- WPA2 replaced WPA began in 2004. Most important upgrade is mandatory use of AES algorithms (instead of previous RC4) and the introduction of CCMP (AES CCMP, Counter Cipher Mode with Block Chaining Message Authentication Code Protocol, 128 Bit) as a replacement for TKIP (which is still present in WPA2, as a fallback system and WPA interoperability).
- WPA3 began as a replacement to WPA2 in 2018. It introduces new features to simplify Wi-Fi security, including enabling better authentication, increased cryptographic strength, and requiring the use of Protected Management Frames (PMF) to increase network security. WPA3-Personal uses Simultaneous Authentication of Equals (SAE) which replaces Pre-Shared Key (PSK) in WPA2-Personal. SAE improves security of the initial key exchange and offers better protection against offline dictionary-based attacks. WPA3-Enterprise utilizes 192-bit security while still using the 802.1x standard to provide a secure wireless network for enterprise use. This provides a superior encryption method to better protect any kind of data. The security suite is aligned with the recommendations from the Commercial National Security Algorithm (CNSA) suite and commonly placed in high-security Wi-Fi networks such as in government, defense, finance, and other industries.

How to Configure Captive Portal Authentication

Create a Captive Portal WLAN

Navigate: Dashboard-WLAN window->'New' button.

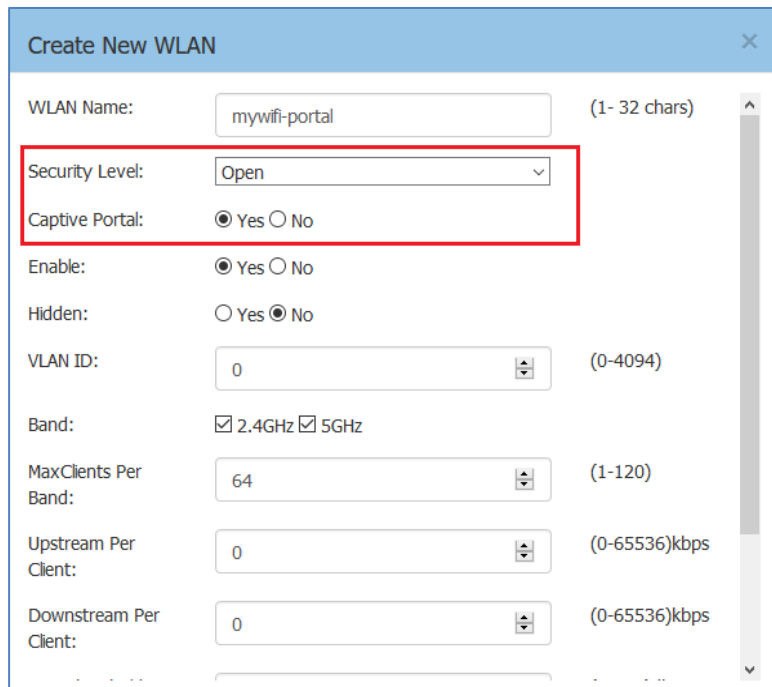


The screenshot shows the 'Create New WLAN' configuration window. The 'WLAN Name' field is set to 'mywifi-portal'. The 'Security Level' dropdown menu is set to 'Open'. The 'Captive Portal' section has the 'Yes' radio button selected. Other settings include 'Enable' (Yes), 'Hidden' (No), 'VLAN ID' (0), 'Band' (2.4GHz and 5GHz checked), 'MaxClients Per Band' (64), 'Upstream Per Client' (0), and 'Downstream Per Client' (0).

Figure 7-5 Create Captive Portal type WLAN

If you have created the captive portal WLAN, proceed to: [Enable Captive Portal Service.](#)

Enable Captive Portal Service

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

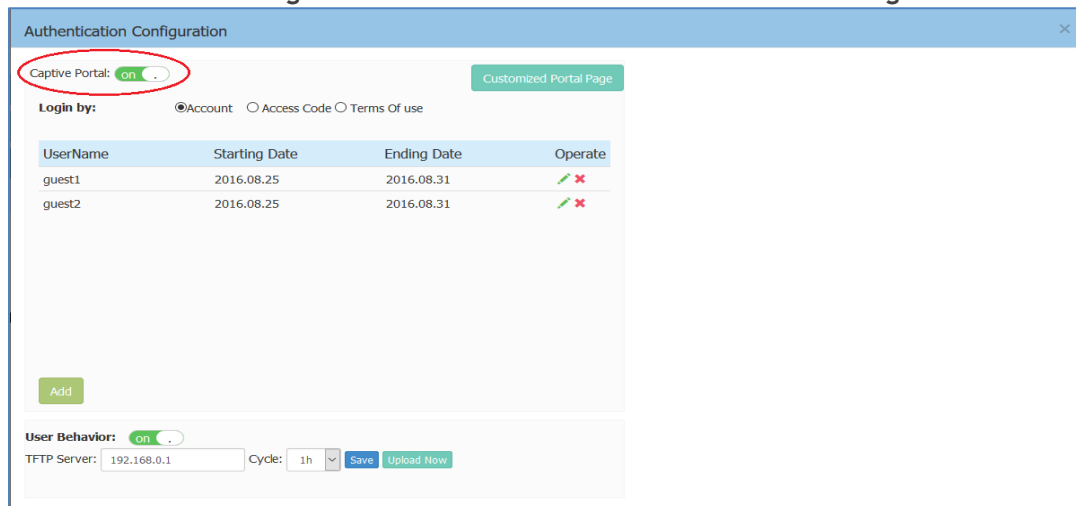

The screenshot shows the 'Authentication Configuration' window. At the top, 'Captive Portal' is set to 'on' (indicated by a green toggle switch and a red circle). Below this, there are radio buttons for 'Login by:' with 'Account' selected. A table lists two users: 'guest1' and 'guest2', both with starting dates of 2016.08.25 and ending dates of 2016.08.31. At the bottom, 'User Behavior' is set to 'on', and the TFTP Server is 192.168.0.1 with a cycle of 1h. Buttons for 'Add', 'Save', and 'Upload Now' are visible.


UserName	Starting Date	Ending Date	Operate
guest1	2016.08.25	2016.08.31	
guest2	2016.08.25	2016.08.31	

Figure 7-6 Enable Captive Portal Service

After you have enabled the captive portal service, proceed to: [Select Your Login Method](#).

Select Your Login Method

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

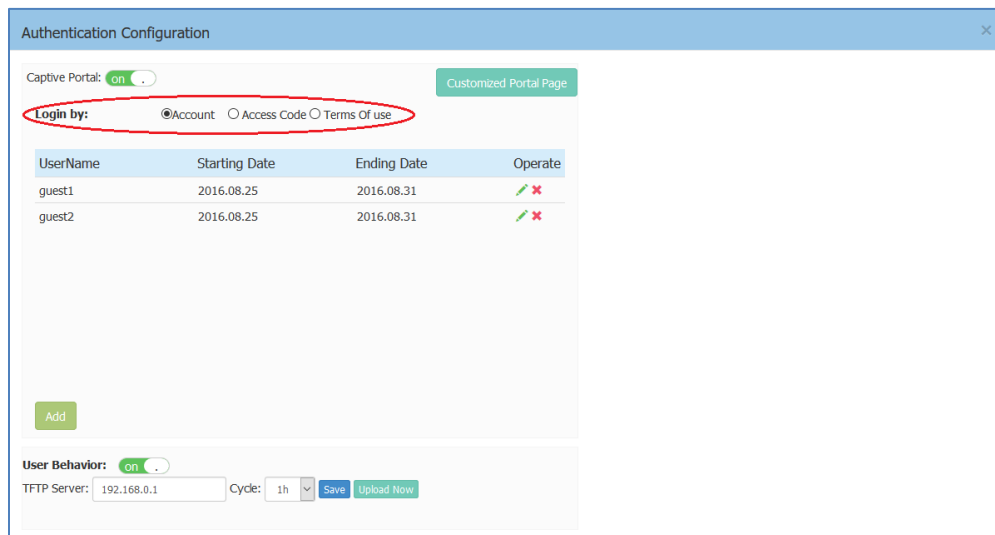

This screenshot is identical to the previous one, but with a red circle around the 'Login by:' radio buttons. The 'Account' radio button is selected, while 'Access Code' and 'Terms Of use' are unselected.

Figure 7-7 Select Your Login Method

There are three login methods for the captive portal authentication:

- (1) Login by account and password;
- (2) Login by unified access code for the organization;
- (3) Login by accepting terms of use;

If you have selected the account or access code login method, proceed to: [Create Users or Access Code](#).

Create Users or Access Code

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

Authentication Configuration

Captive Portal: on

Customized Portal Page

Login by: Account Access Code Terms Of use

UserName	Starting Date	Ending Date	Operate
guest1	2016.09.05	2016.09.30	✓ ✗
guest2	2016.09.05	2016.09.30	✓ ✗

Add

User Behavior: on
*TFTP Server: 192.168.0.1 Cycle: 1h Save Upload Now

Add Local Auth User

*UserName:

*Password:

*Confirm:

Firstname

Lastname

Mail

Phone

Company

*Starting Date

*Ending Date

Cancel Save

Figure 7-8 Create Captive Portal Users



Note 7-2: If you have selected login by account method for the captive portal authentication, it ONLY supports users in the local user database. It does not support connecting to an external authentication server. You can add user accounts to the local user database, see in Figure 7-8.

Note 7-3: Single user account can be used by multiple devices simultaneously, there are no limits to the number of devices a captive portal user account can connect to the network.

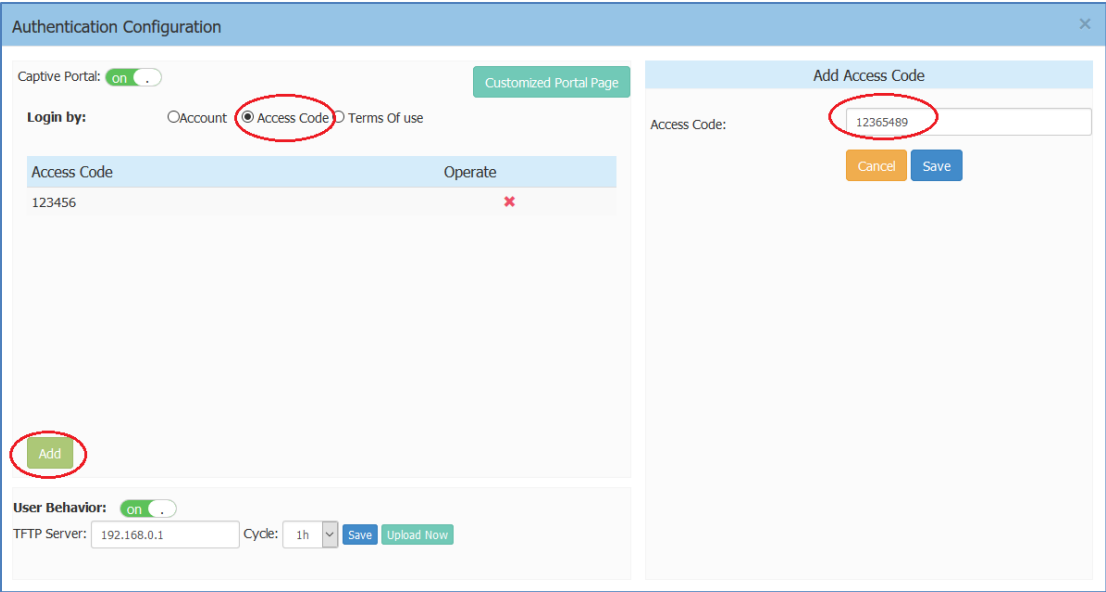


Figure 7-9 Create Access Code

Customize Your Splash Page (Optional)

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window-Customized Portal Page Panel.

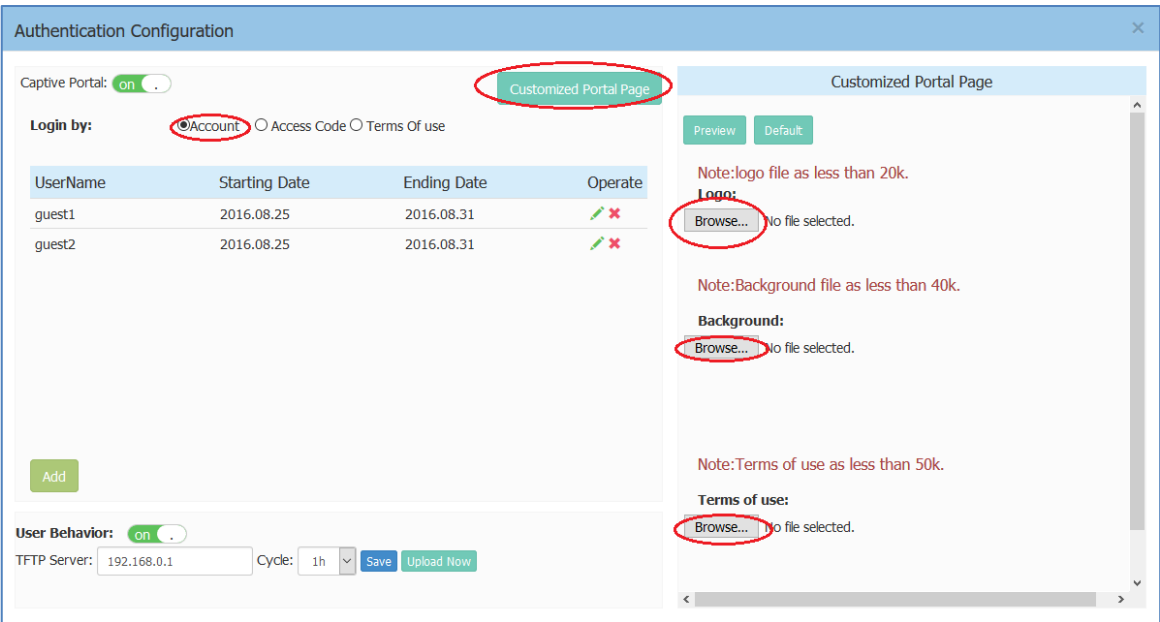


Figure 7-10 Customize Your Splash Page

Log User Behavior (Optional)

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window

The user behaviors including online and offline are logged and sent to the specified TFTP server. The detailed information of the user behavior can refer to: [Authentication Configuration Window](#).

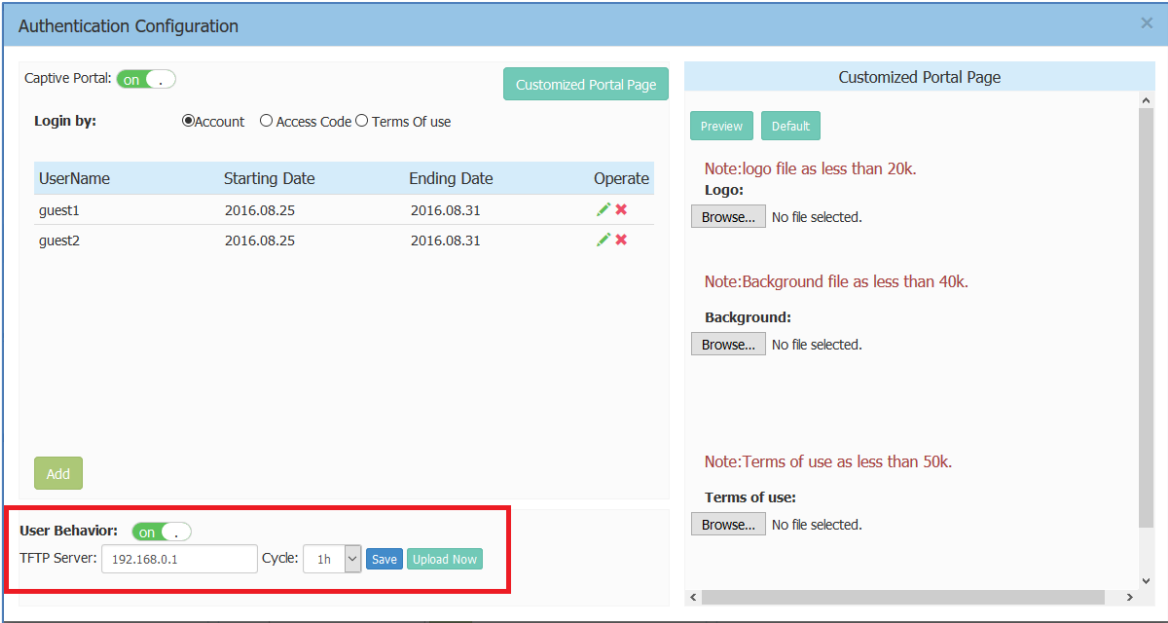


Figure 7-11 Log User Behavior

Specify Your Walled Garden (Optional)
Navigate: Dashboard-Access Page-Blocklist & Allowlist Window-Walled Garden Tab.

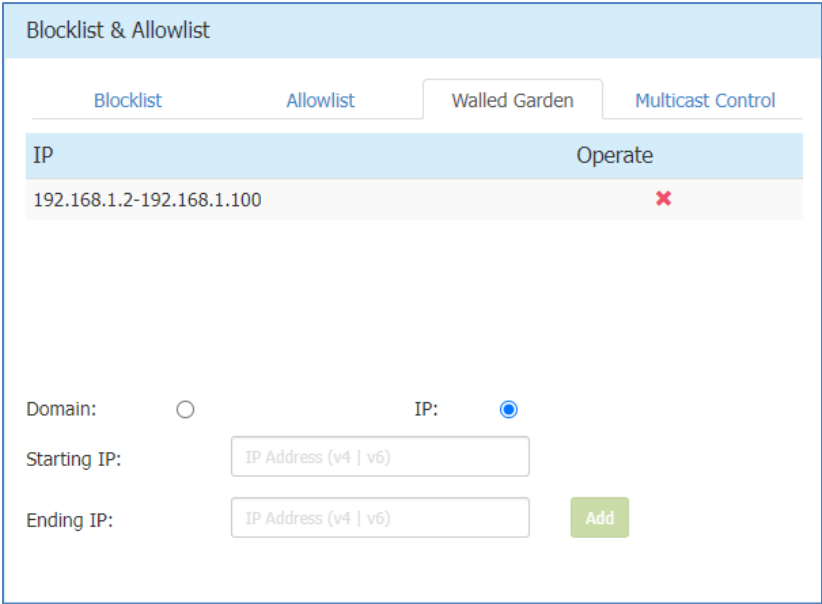


Figure 7-12 Wall Garden

Specify Your Captive Portal Allowlist (Optional)
Navigate: Dashboard-Access Page-Blocklist & Allowlist Window-Allowlist Tab.

Blocklist & Allowlist

Blocklist

Allowlist

Walled Garden

Multicast Control

MAC Address	Operate
90:E7:0B:03:D5:D0-90:E7:0B:03:D5:D0	✖

Starting MAC:

Starting MAC

Ending MAC:

Ending MAC

Add

Figure 7-13 Portal Allowlist

8 Tools

Tools are several commands provided for diagnosing and troubleshooting. The commands are applied to a single AP in the group. You can select an AP from the group and execute a command to discover the running information of the AP, such as system health, wireless health and reboot reason. Illustrated in Figure 8-1, Figure 8-2.



Figure 8-1 Tools in Dashboard

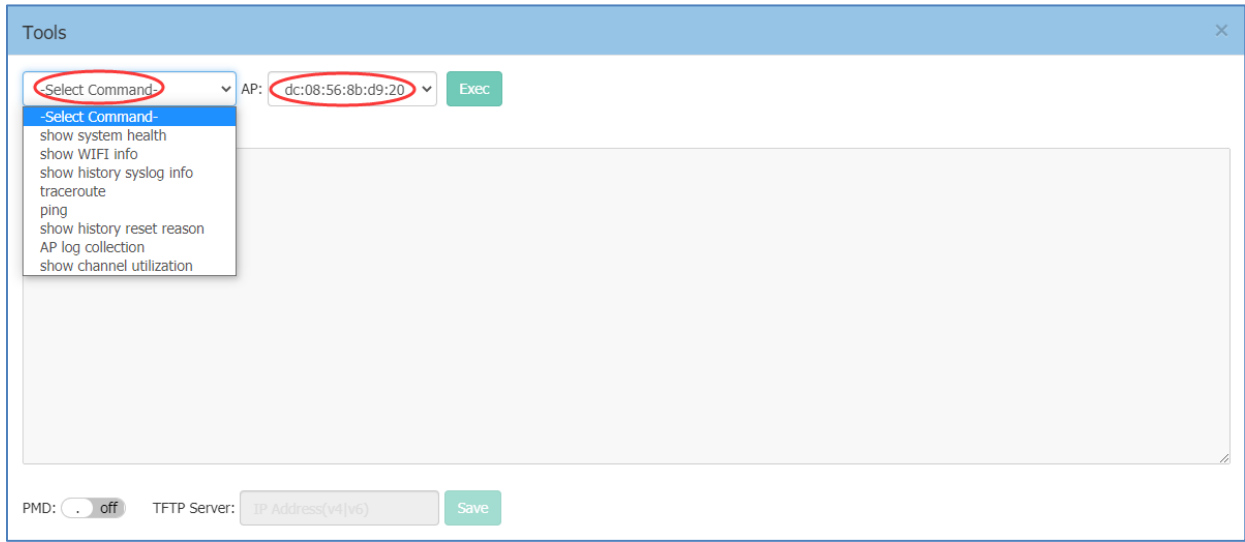


Figure 8-2 Troubleshooting Command

Table8-1 describes the commands for troubleshooting.

Command	Purpose
show system heath	Show system CPU and memory usage information of specified AP
show WIFI info	Show wireless interface information of specified AP

Tools

show history syslog info	Show historic Syslog messages generated in last time system running (Before this time system up) of specified AP
tracert	Traceroute from specified AP to another host in the network
ping	Ping operation from specified AP to another host in the network
show history reset reason	Show historic reboot reason of specified AP
AP log collection	Collect AP log files for troubleshooting and download by TFTP/HTTP
show channel utilization	Display current 2.4G/5G band channel utilization detected by the AP

PMD

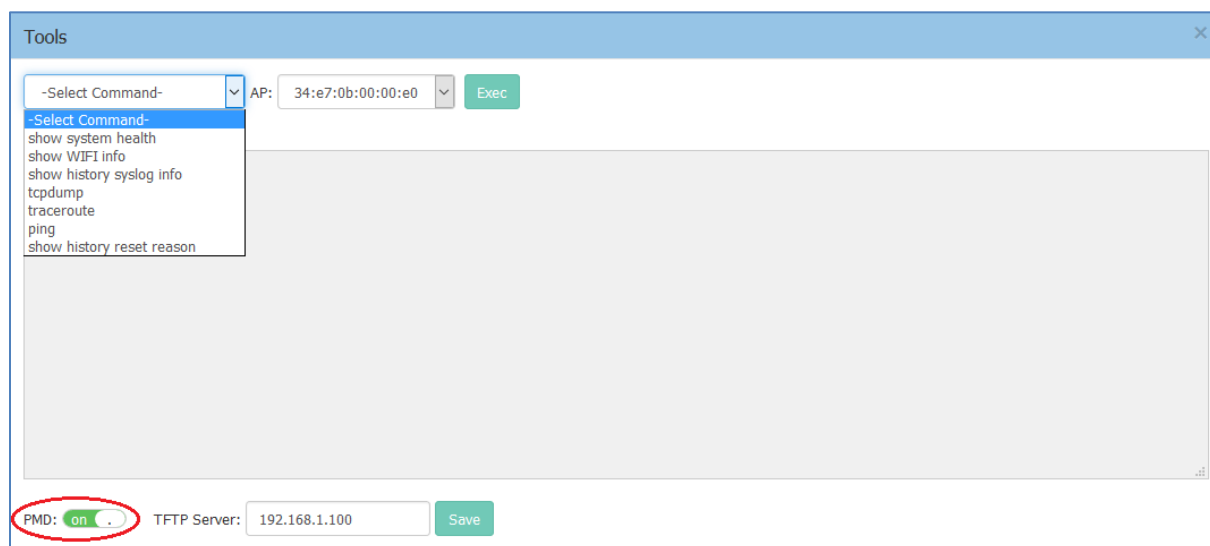


Figure 8-3 PMD

Post Mortem Dump (PMD) is a troubleshooting method helping to identify root cause of a core dump and exception pointers after a fatal crash. If PMD is enabled and configured, the AP will send PMD files to a specific TFTP server immediately when there is key process crashing on the AP. By default, PMD files sending to external TFTP server is disabled.

Reset the AP to Factory Default Settings

Press and hold the reset button for approximately 5 seconds then release. The LED will turn off and then turn red as the AP reboots to the factory default settings.

SSH Secure shell

Stellar Access Points support secure access via SSHv2

9 AP UI

AP UI is a dedicated web interface to monitor and configure single AP in the group, while group web management system is focus on cluster configuration as well as monitoring. In AP UI, you can:

- (1) Learn the WLANs status, connecting clients on the AP;
- (2) Configure DHCP/DNS/NAT services on the AP;
- (3) Configure wireless Mesh/Bridge feature for the AP;
- (4) Maintenance - Upgrade/Reset/Reboot the AP.

Login to AP UI

When AP is working in the Express mode, you need to login the group web management. In the AP List of group web, you can click the link to open a specific AP UI.

Primary Name	IP	Firmware	Operate
PVC			
AP-C2:70	192.168.55.17(AP) 192.168.55.239(M)	3.0.3.28	cfig reboot
SVC			
AP-D7:50	192.168.55.9	3.0.3.28	cfig reboot
MEMBER			
AP-24:00	192.168.55.1	3.0.3.29	cfig reboot
AP-18:40	192.168.55.10	3.0.3.28	cfig reboot
AP-0C:F0	192.168.55.19	3.0.3.28	cfig reboot
AP-09:F0	192.168.55.13	3.0.3.28	cfig reboot
AP-05:90	192.168.55.18	3.0.3.28	cfig reboot

Detailed Information

AP Name: AP-C2:70 [Edit](#)

MAC: 34:E7:0B:03:C2:70

Location: [Edit](#)

Status: Working

Role in Group: PVC

Serial Number: SSZ170200040

Model: OAW-AP1221

Firmware: 3.0.3.28

Upgrade Time: Thu May 3 17:40:04 2018

Upgrade Flag: successfully

IP Mode: DHCP [Edit](#)

IP: 192.168.55.17

Netmask: 255.255.255.0

Default gateway: 192.168.55.254

DNS: 219.141.136.10

[Reboot All AP](#)
[Clear All Configuration](#)
[Backup All Configuration](#)
[Restore All Configuration](#)
[Upgrade All Firmware](#)
[Connect To OmniVista Cirrus](#)

Figure 9-1 AP List - link to AP UI

AP			
MAC	IP	Status	Clients
34:E7:0B:03:D7:50	192.168.55.9	CLUSTER	8

WLAN			
WLAN Name	Status	Type	Clients
Employee-test	enable	Personal	1
Guest	enable	Open	0
Enterprise	disable	Enterprise	0
Employee	enable	Personal	7
ex-portal	disable	Open	0
hehe-test	enable	Open	0

Clients			
IP	MAC	WLAN	Auth
192.168.55.98	7c:b0:c2:bca3:db	Employee-test	PSK
100.1.1.9	30:f7:72:3e:e0:33	Employee	PSK
100.1.1.54	04:d6:aa:9c:b3:6e	Employee	PSK
100.1.1.22	9cf3:87:c2:f8:18	Employee	PSK
100.1.1.14	10:4a:7d:52:7c:c7	Employee	PSK

RF				
	Channel	Status	Power	Clients
2.4G	6	enable	20	4
5G_all	140	enable	29	4

System

Network

Service

Figure 9-2 AP UI

When AP is working in the OmniVista Enterprise mode, you can open the AP UI through the “AP Web” hyperlink. More information can refer to help information on OmniVista platform.

AP Interface

Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration.

Name	Speed(MB)	Model	Link Status	Enable	Operate
ENET0	1000	Trunk	Up	Yes	
Backhaul1	0	Trunk	Down	No	
Connector1	0	Trunk	Down	No	

Figure 9-3 AP Interface

- ENET0 - Uplink interface of the AP.
- Backhaul1 - Downlink interface of the Mesh/Bridge link.
- Connector1 - Uplink interface of the Mesh/Bridge link.

For each AP interface

- Speed - Link speed of the AP interface.
- Mode - VLAN access mode or WLAN trunk mode.

- Link Status - Up/down.
- Enable - Indicate whether the AP interface is enabled or disabled.
- Operate - Can be applied to Backhaul1 or Connector1 interface for wireless mesh/bridge configuring.

AP Network

Navigate: AP-UI -> Network -> AP Networks.

The screenshot displays the 'AP Network Configuration' window. On the left, a table lists existing networks:

Name	Vlan	Protocol	IP Address	Operate
vlan667	667	Static		
vlan31	31	Static		
wan		DHCP	192.168.55.17	
vlan666	666	Static	100.1.1.1	

On the right, the 'Edit Network' form is shown for 'vlan666':

- Network Name: vlan666
- Vlan: 666
- Protocol: Static (dropdown menu)
- IP Address: 100.1.1.1
- Netmask: 255.255.255.0
- DNS: 192.168.55.17
- Default Route: off (toggle switch)
- Buttons: Cancel, Save

Figure 9-4 AP Network

- Network Name - Name of the network. There are 2 types of network on AP: VLAN networks mapping to WLAN (SSID); WAN networking mapping to AP uplink port.
- VLAN - VLAN ID mapping to specific WLAN (SSID).
- Protocol - IP address allocation for the network interface. IP address of a network interface is usually set as the gateway of the devices connecting the network.
 - DHCP - Indicates the interface IP address of the network is obtained from an outside DHCP server.
 - Static - Indicates the interface IP address of the network is manually set.
- Operate - Edit the AP network.
- IP Address - Interface IP address of the network.
- Netmask - Netmask of the network.
- DNS - DNS server for the network.
- Default Route - Indicate whether the interface of the network is default route of the AP. By default, WAN interface in the default route of the AP.

Configure Mesh/Bridge through AP UI

The Alcatel-Lucent mesh solution is an effective way to expand network coverage for outdoor and indoor enterprise environments without any wires. Using mesh, you can bridge multiple Ethernet LANs or you can extend your wireless coverage (Wireless backhauling). As traffic traverses across mesh APs, the mesh network automatically reconfigures around broken or blocked paths. This self-healing feature provides increased reliability and redundancy: the network continues to operate if an AP stops functioning or a connection fails.

To expand your wireless coverage without bridging Ethernet LAN segments, you can use Mesh services configured as wireless backhaul. In this deployment scenario, the AP provides network access for wireless

clients and establishes a mesh path to the mesh root, which uses its wired interface to connect to the switch.

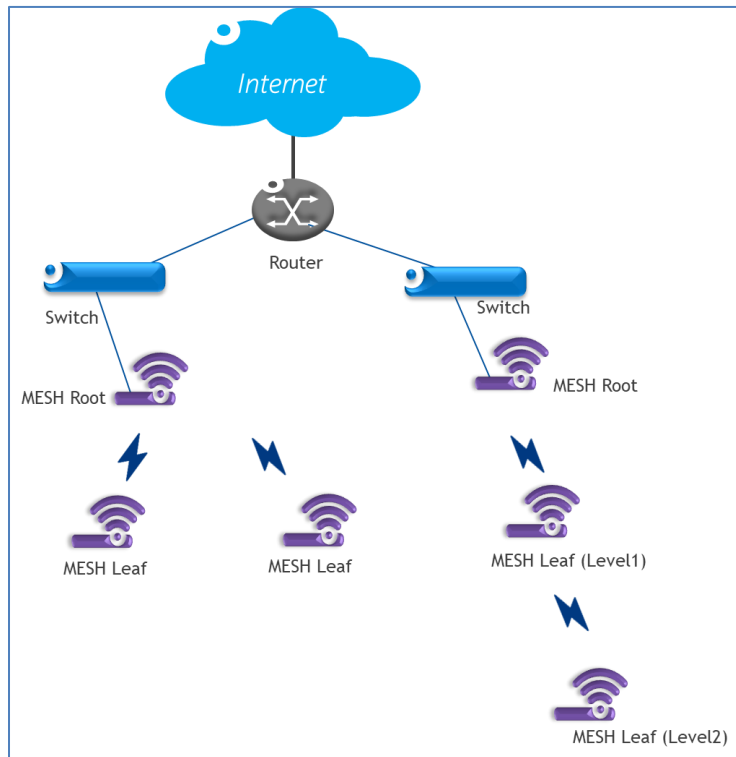


Figure 9-5 MESH Topology

MESH Configuration:

Out-of-box MESH: Out-of-box MESH is mainly used to improve the MESH deployment efficiency and administrator only needs to specify the root MESH point, other leaf MESH point can automatically join the MESH network without manual configuration. By default, Stellar AP with factory configuration powered up without wired uplink will try to establish MESH link automatically with build-in configuration (MESH SSID [Stellar-MESH] and password on 2.4G band). The out-of-box will be permanently disabled once the AP ever connected to wired uplink and only reset to factory operation can bring the out-of-box function back. The out-of-box MESH can be manually modified on band (Change from 2.4G to 5G) as well as passphrase (Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration), and it will return to factory setting after reset operation.

Regular MESH: The MESH is configured on Stellar AP one after one by administrator manually. To configure MESH for the Stellar AP working in EXPRESS mode, administrator needs to login separate AP-UI of APs planned to enable MESH in the network and then perform the MESH configuration:

Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration.

AP Interface Configuration

Name	Speed(MB)	Model	Link Status	Enable	Operate
ENET0	1000	Trunk	Up	Yes	
ENET1	10	Trunk	Down	No	
LAG0	0	Trunk	Down	No	
Backhaul0	0	Trunk	Down	No	
Connector0	0	Trunk	Down	No	

Edit Interface

Enable: ☒ Yes ☐ No

Model: ☒ Mesh ☐ Bridge

SSID:

Is Root: ☒ Yes ☐ No

Band: ☒ 2.4G ☐ 5G_High ☐ 5G_Low

Mcast Rate: Mbit/s

Passphrase:

Confirm:

Figure 9-6 Configure Mesh Root

AP Interface Configuration

Name	Speed(MB)	Model	Link Status	Enable	Operate
ENET0	1000	Trunk	Up	Yes	
ENET1	10	Trunk	Down	No	
LAG0	0	Trunk	Down	No	
Backhaul0	0	Trunk	Down	No	
Connector0	0	Trunk	Down	No	

Edit Interface

Enable: ☒ Yes ☐ No

Model: ☒ Mesh ☐ Bridge

SSID:

Is Root: ☐ Yes ☒ No

Band: ☐ 2.4G ☒ 5G

Mcast Rate: Mbit/s

Passphrase:

Confirm:

Figure 9-7 Configure Mesh Leaf

Edit the Backhaul/Connector interface to complete the MESH configuration. Either Backhaul configuration or Connector configuration is sufficient. The last saved configuration will be effective if Backhaul1 and Connector1 are both configured:

- Enable - Enable/disable the wireless mesh on the AP.
- Mode - AP working mode, mesh mode or bridge mode.
- SSID - WLAN used to setup wireless mesh connection (SSID 'Stellar-MESH' is built-in for Out-of-box MESH, it can be modified to become a regular MESH SSID).
- Band - Mesh working band. All the mesh connection from root node to leaf shall be in the same band.
- Is Root - Specify the root node of the wireless mesh chain.

- MLO - MLO is a key technological innovation in Wi-Fi 7, which allows devices to simultaneously utilize multiple frequency bands (such as 2.4GHz, 5GHz, and 6GHz) for data transmission. This multi band aggregation method enables Wi-Fi 7 devices to significantly improve the efficiency and speed of data transmission.
- Mcast Rate - Specify the multicast traffic maximum forwarding rate on the mesh link. By default, it is 24Mbps. Recommend changing the value under the guidance of ALE support team if necessary.
- Passphrase - Password of the WLAN used to setup wireless mesh connection.
- Confirm - Re-enter the password to confirm.

Wireless Bridge Configuration:

A point-to-point wireless bridge is used to connect LAN(s), which are often in different buildings, through the wireless interface. The wireless bridges eliminate the need for expensive leased lines and fiber-optic cables.

Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration.

Edit the Backhaul1/Connector1 interface to complete the wireless bridge configuration. Either Backhaul1 configuration or Connector1 configuration is sufficient. The last saved configuration will be effective if Backhaul1 and Connector1 are configured with different attributes:

- Enable - Enable/disable the wireless bridge on the AP.
- Mode - AP working mode, mesh mode or bridge mode.
- SSID - WLAN used to setup wireless bridge connection.
- Band - Wireless bridge working frequency.
- Is Root - Specify the root node of the wireless bridge.
- Passphrase - Password of the WLAN used to setup wireless bridge connection.
- Confirm - Re-enter the password to confirm.

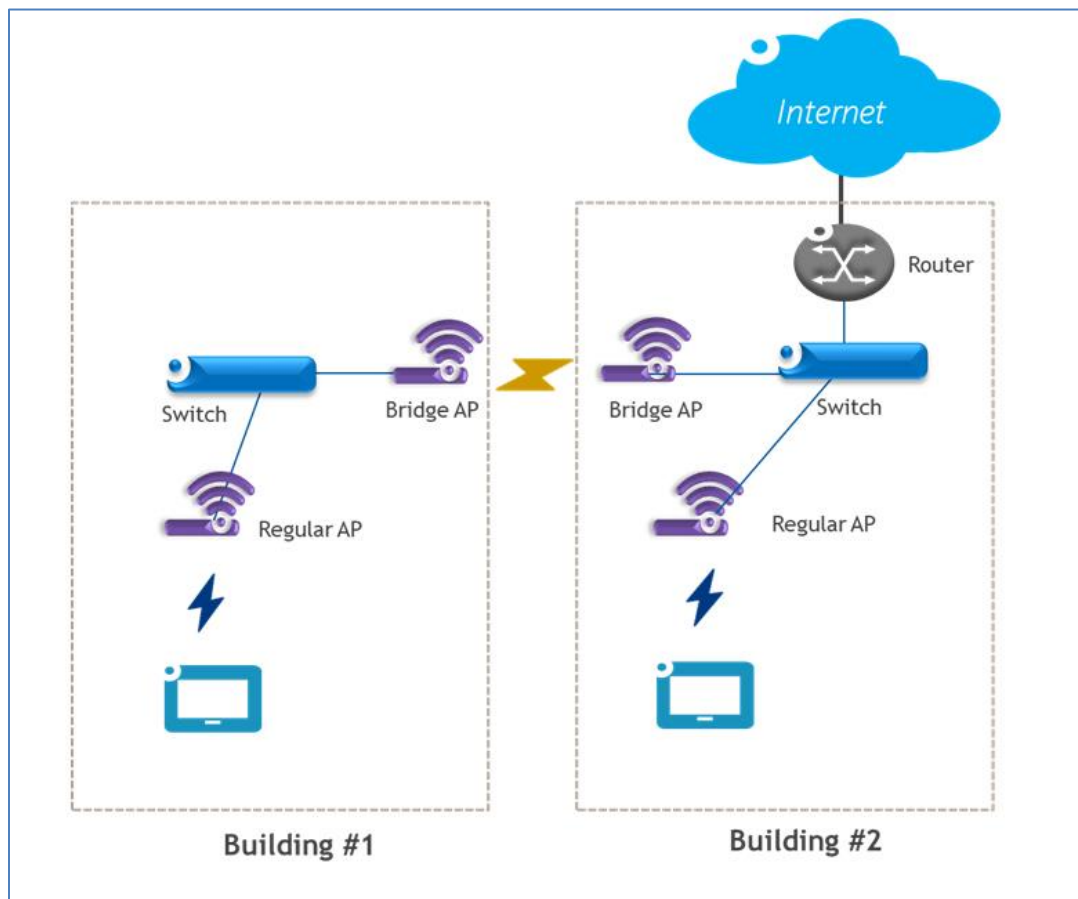


Figure 9-8 Configure Wireless Bridge

Note:

1. AP1201, AP1201L, AP1201H, AP1201HL is low performance than other mid-end/high-end APs, and those APs do not support bridging the packets with VLAN tags, so not recommend deploying wireless bridge with above AP models. If really needs to deploy wireless bridge with AP1201, AP1201L, AP1201H, AP1201HL, please contact ALE support for help. AP1201, AP1201L, AP1201H, AP1201HL is working correctly in MESH deployment.
2. MESH AP can provide service to wireless client accompanied with MESH link. While Wireless Bridge AP can only provide bridge link, not able to connect wireless clients.

Configure DHCP through AP UI

Navigate: AP-UI -> Service -> DHCP.

For an AP group in the same L2 domain, you can setup DHCP server on a specific AP in the group.

The screenshot shows the 'AP Configuration' window. On the left, a table lists APs grouped by role: PVC, SVC, and MEMBER. The 'AP-C2:70' row is highlighted, and its 'Operate' column contains a red box around the 'dhcp' icon. On the right, the 'Detailed Information' panel for AP-C2:70 is shown, displaying various attributes and their values.

Primary Name	IP	Firmware	Operate
PVC			
AP-C2:70	192.168.55.17(AP) 192.168.55.239(M)	3.0.3.28	
SVC			
AP-D7:50	192.168.55.9	3.0.3.28	
MEMBER			
AP-18:40	192.168.55.10	3.0.3.28	
AP-1A:80	192.168.55.15	3.0.3.28	
AP-06:80	192.168.55.11	3.0.3.28	
AP-05:90	192.168.55.18	3.0.3.28	
AP-0C:F0	192.168.55.19	3.0.3.28	

Detailed Information	
AP Name:	AP-C2:70 Edit
MAC:	34:E7:0B:03:C2:70
Location:	Edit
Status:	Working
Role in Group:	PVC
Serial Number:	SSZ170200040
Model:	OAW-AP1221
Firmware:	3.0.3.28
Upgrade Time:	Thu May 3 17:40:04 2018
Upgrade Flag:	successfully
IP Mode:	DHCP Edit
IP:	192.168.55.17
Netmask:	255.255.255.0
Default gateway:	192.168.55.254
DNS:	219.141.136.10

Reboot All AP Clear All Configuration Backup All Configuration Restore All Configuration Upgrade All Firmware Connect To OmniVista Cirrus

Figure 9-9 DHCP Server in AP group

Clients				RF				
IP	MAC	WLAN	Auth	2.4G	Channel	Status	Power	Clients
100.1.1.116	F4:31:c3:dd:35:8f	HAN-Employee	PSK	5G_all	140	enable	20	0
						enable	27	1

System
Network
Service

DHCP						DNS	NAT
Pool Name	Gateway	Pool Size	Assign	Network	Operate		
asdf_666	100.1.1.1	249	80	vlan666	Action		
					Bind Network		
					Delete		
					Leases		

Pool Detail	
Pool Name:	asdf_666
Pool Size:	249
Assign:	80
Network:	vlan666
Lease Time:	86400s
Subnet:	255.255.255.0
Gateway:	100.1.1.1
Range Start:	100.1.1.2
Range Stop:	100.1.1.250
DNS1:	192.168.55.17
DNS2:	

Figure 9-10 DHCP Server

- Pool Name - Name of the DHCP pool.
- Pool Size - Size of the DHCP pool.
- Assign - IP addresses have been allocated.
- Network - Network to which the DHCP pool is bound. A Network usually means the VLAN mapping to specific SSID or the AP WAN interface. All the networks are displayed in the window: AP UI -> Network -> AP Networks. You must map the VLAN to a SSID before it can be displayed in the AP UI.
- Lease Time - Period of time that the IP address allocated can be used by the device. By default, lease time is 24 hours.
- Subnet - Subnet of the DHCP pool.
- Gateway - Specify the gateway for the DHCP pool.
- Range Start - DHCP pool starting IP address.
- Range Stop - DHCP pool ending IP address.
- DNS1 - Primary DNS server for the DHCP pool.
- DNS2 - Secondary DNS server for the DHCP pool.
- Operate
 - Bind Network - Bind the DHCP pool to specific Network. Before binding, you need to configure the Network basic parameters in the 'AP UI -> Network -> AP Networks window'. Only Network with static IP (as gateway) can be bound to a DHCP pool.
 - Delete - Delete the DHCP pool.
 - Leases - Display the IP addresses which have been allocated to devices.

Configure DNS Cache through AP UI

Navigate: AP-UI -> Service -> DNS.

- Cache Size - Specify the size for the DNS cache.

Configure NAT through AP UI

Navigate: AP-UI -> Service -> NAT -> Source NAT.

Source NAT

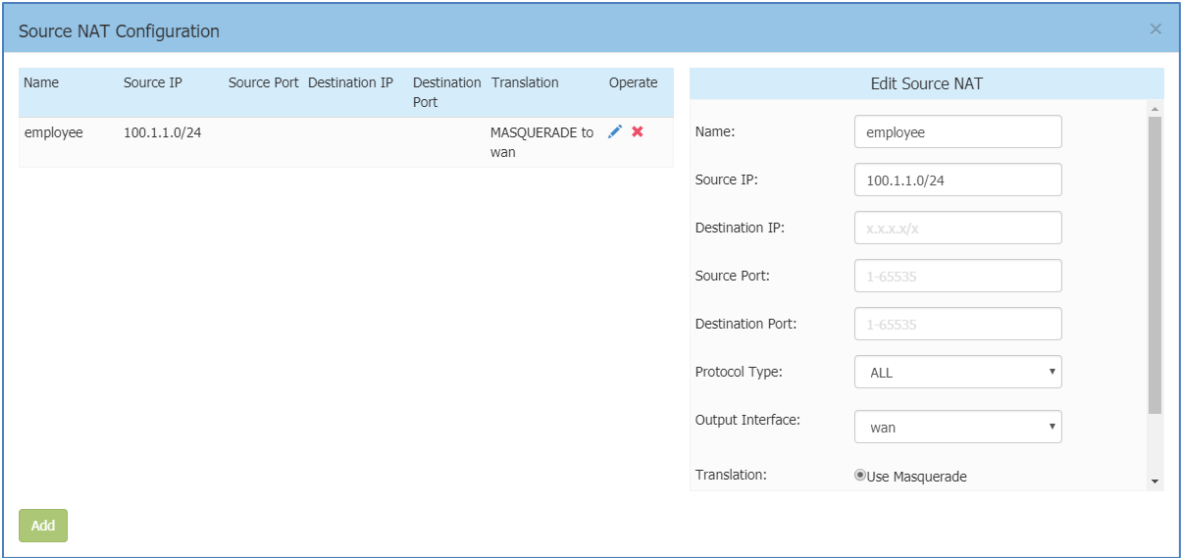


Figure 9-11 Source NAT

Source NAT can be utilized to translate the internal IP addresses to single external IP address while visiting Internet, by saving public IP address.

- Name - Name of the Source NAT rule.
- Source IP - Mapping source IP address of the NAT rule, single IP or segment.
- Destination IP - Mapping destination IP address of the NAT rule, single IP or segment.
- Source Port - Mapping source port of the NAT rule.
- Destination Port - Mapping destination port of the NAT rule.
- Protocol Type - Network protocol to which the NAT rule is applied.
- Output Interface - Specify the outbound interface of the NAT rule.
- Translation - Use Masquerade, indicates the internal IP addresses will be translated to the interface IP address (gateway) of the network.

Destination NAT

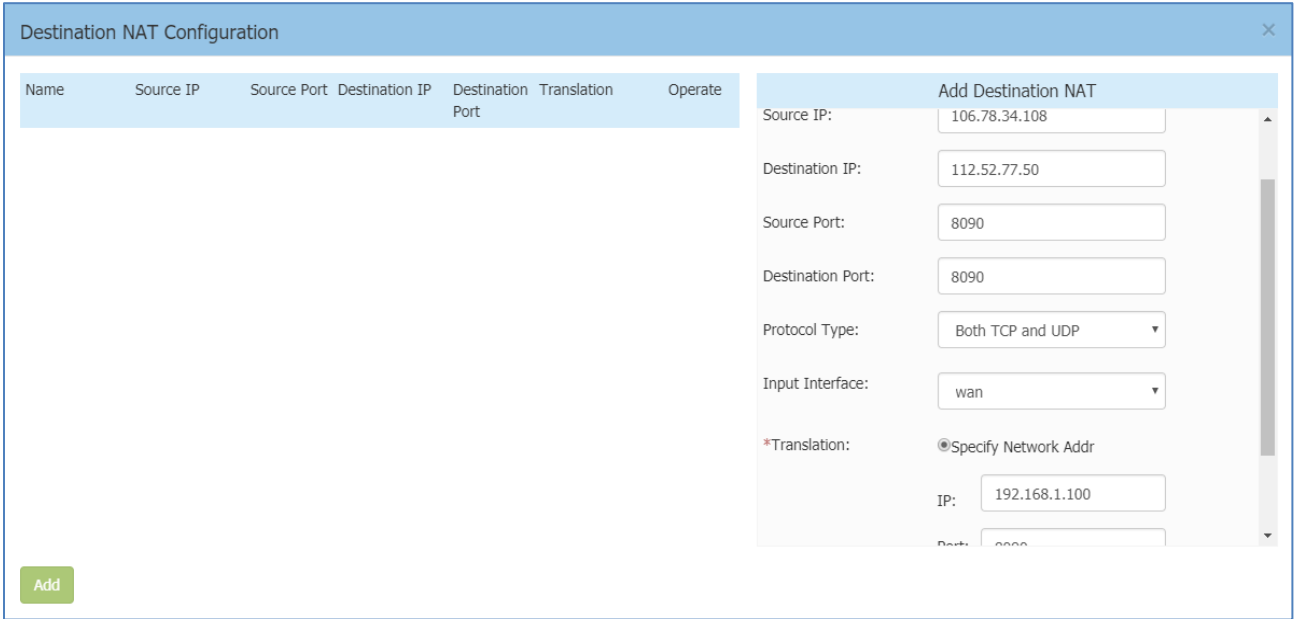


Figure 9-12 Destination NAT

Destination NAT can be utilized to realize visiting specific server in the internal network from internet.

- Name - Name of the destination NAT rule.
- Source IP - Mapping source IP address of the NAT rule, single IP or segment.
- Destination IP - Mapping source port of the NAT rule.
- Source Port - Mapping source port of the NAT rule.
- Destination Port - Mapping destination port of the NAT rule.
- Protocol Type - Network protocol to which the NAT rule is applied.
- Input Interface - Specify the inbound interface of the NAT rule.
- Translation
 - IP - IP address to which the external IP address will be translated
 - Port - Port to which the external IP address will be translated

Configure Static Neighbor AP through AP UI

Navigate: AP-UI -> Neighbor AP.

Neighbor AP is the candidate to which clients connecting to current AP might roam. There two types of neighbor AP - Auto Neighbor AP as well as Static Neighbor AP. Auto Neighbor AP is discovered through wireless scanning automatically, while Static Neighbor AP is manually added.

Auto AP		
Neighbor AP List		
Order	MAC Address	IP Address
1	dc:00:11:22:34:40	192.168.20.138

Figure 9-13 Auto Neighbor AP

Static AP			
Neighbor AP List			
Order	MAC Address	IP Address	Operate
1	dc:00:11:22:34:60	N/A	✖

Add Neighbor AP

AP MAC:

Cancel

Save

Figure 9-14 Static Neighbor AP

- Order - Item number of the neighbor AP.
- MAC Address - MAC address of the neighbor AP.
- IP Address - IP address of the neighbor AP.
- Operate - Remove the neighbor AP, only applicable for static neighbor APs.

RF Environment

The RF Environment is used to view Scanning Mode data for APs. Wireless networks operate in environments with electrical and radio frequency devices that can interfere with network communications. APs can examine the radio frequency environment in which the Wi-Fi network is operating, identify interference, and classify its sources. An analysis of the results can then be used to quickly isolate issues with packet transmission, channel quality, and traffic congestion caused by contention with other devices operating in the same band or channel.

Note: To view the scanning mode data of the AP, the AP must be in "scanning mode". When the AP is in scanning mode, Wi-Fi service exhibits the following different behaviors on different models of APs:

1. AP models without scanning radio, regular Wi-Fi services will be stopped (all clients will be disconnected).
2. Wi-Fi 6 AP models with scanning radio, regular Wi-Fi services will NOT be affected.
3. Wi-Fi 6E AP models with scanning radio, i.e. AP1451 has scanning radio in 2.4G/5GHz so Wi-Fi clients on 2.4/5GHz will NOT be affected, but 6GHz service will be stopped (all 6GHz clients will be disconnected, so they may steer to 2.4G/5GHz band).
4. Wi-Fi 7 AP models with scanning radio, regular Wi-Fi services will NOT be affected.

There are two types of AP Scanning Mode:

- One Time - The scanning mode will last for 5 minutes duration and then return to normal AP mode in which wireless clients can associate.
- Always - The scanning mode is always active and wireless client is not allowed to associate if the AP is powered on.

When the scanning mode is terminated automatically (One Time mode) or manually (Always mode), AP will return to normal AP mode and clients are allowed to connect.

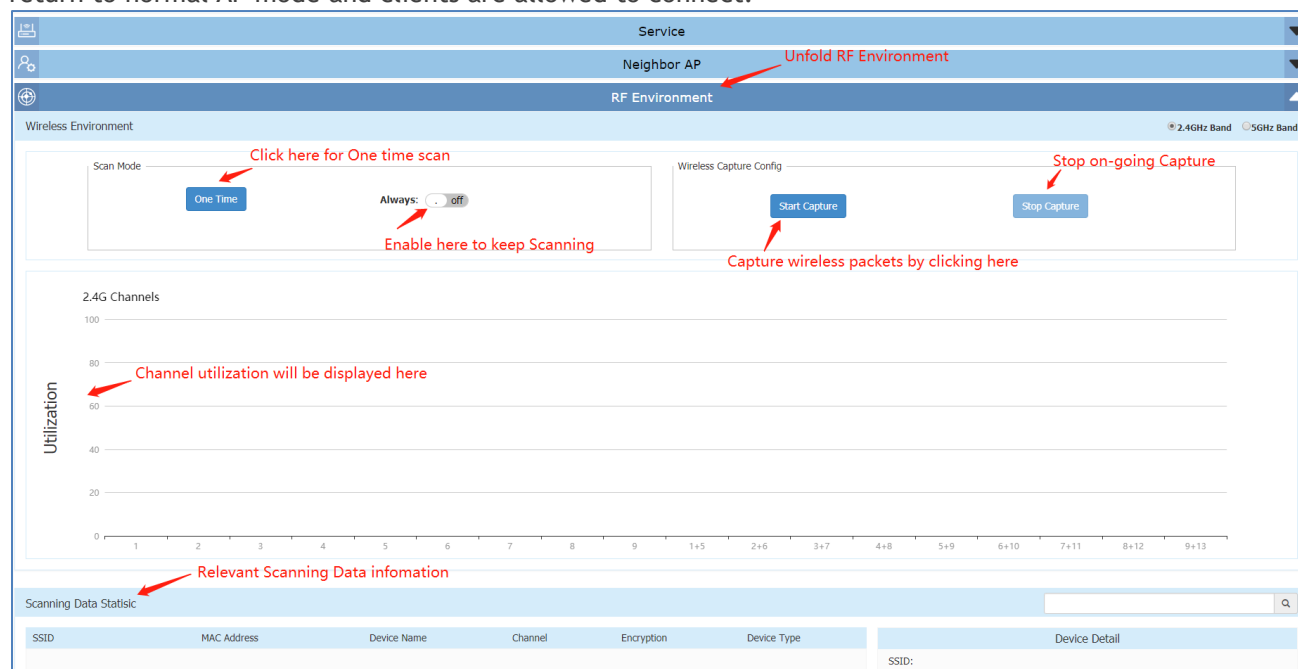


Figure 9-15 RF Environment

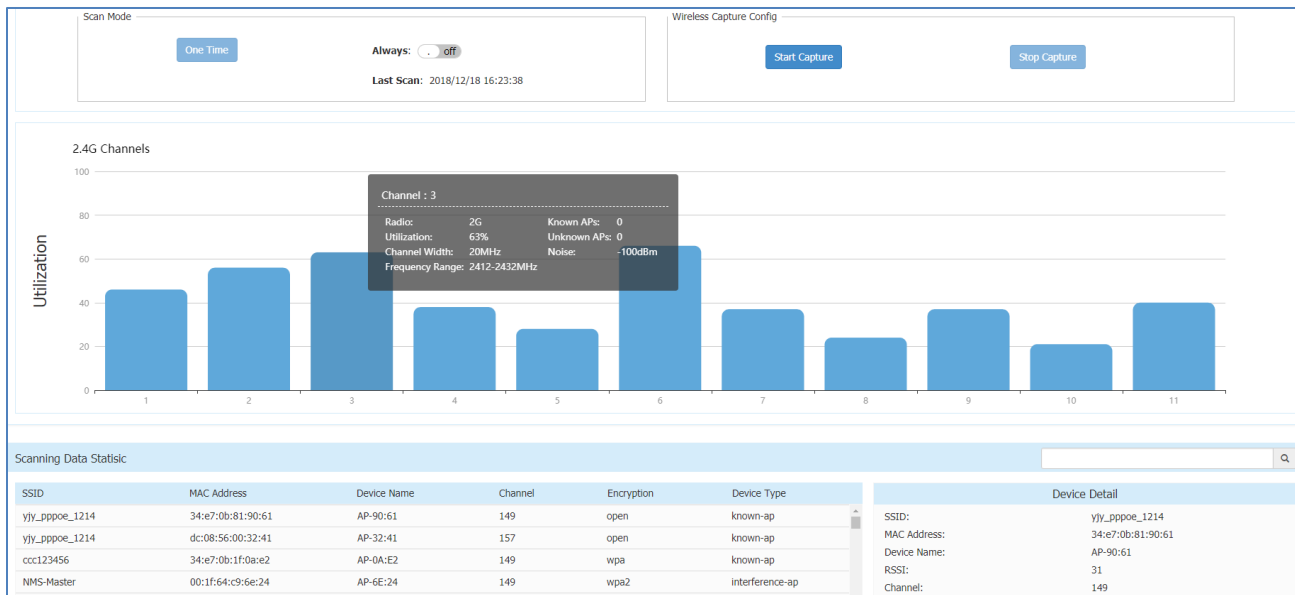


Figure 9-16 RF Scanning Data

The RF scanning data can be viewed by selecting 2.4G/5G radio:

- Channel - Wi-Fi channel.
- Radio - Radio of the Wi-Fi channel.
- Utilization - Utilization of the Wi-Fi channel.
- Channel Width - Width of the Wi-Fi channel.
- Frequency Range - Frequency range of the Wi-Fi channel.
- Known APs - APs which are identified working in the same network with scanning APs on the Wi-Fi channel.
- Unknown APs - Foreign APs including interfering APs and Rogue APs on the Wi-Fi channel.
- Noise - Noise is the measure of the wireless signal created from the sum of all the noise sources and unwanted signals.

Wireless Packet Capture

Capture Config

Channel: [dropdown]

TFTP Server: 192.168.20.42

Filter: ☐

MAC1: [text input with x's]

MAC2: Any Address [dropdown]

Frame Type: 802.11 ALL [dropdown]

Reset Start

Figure 9-17 Wireless Packet Capture

User can use specific AP to capture wireless packets for troubleshooting purpose:

- Channel - Specify the Wi-Fi channel for packet capture.
- TFTP Server - The file server to which the packets captured will be uploaded.
- Filter - A filter used to select the Wi-Fi packets wanted to be captured.
 - MAC1 - Target MAC for wireless packet capturing, could be destination MAC or Source MAC. Can be used together with MAC2 to be a combination for specifying the filter condition. For example, to capture the bidirectional packets between client A (MAC1) and client B (MAC2).
 - MAC2 - Target MAC for wireless packet capturing, could be destination MAC or Source MAC. Can be used together with MAC2 to be a combination for specifying the filter condition.
 - Frame Type - Specify the 802.11 packet type that will be captured:
 - 802.11 ALL - All the 802.11 packets mapping MAC address condition on the channel will be captured, including management, data and control packets.
 - 802.11 MGMT - The 802.11 management packets mapping MAC address condition on the channel will be captured (Packet type: beacon/ assoc-req/ assoc-resp/ reassoc-req/ reassoc-resp/ probe-req/ probe-resp/ disassoc/ auth/ deauth/ atim).
 - 802.11 DATA- The 802.11 data packets mapping MAC address condition on the channel will be captured (Packet type: null/data/ data-cf-ack/ data-cf-poll/ data-cf-ack-poll/ cf-ack/ cf-poll/ cf-ack-poll/ qos-data/ qos-data-cf-ack/ qos-data-cf-poll/ qos-data-cf-ack-poll/ qos/ qos-cf-poll/ qos-cf-ack-poll).
 - 802.11 CTRL - The 802.11 control packets mapping MAC address condition on the channel will be captured (ps-poll/ rts/ cts/ ack/ cf-end/ cf-end-ack).

10 Web Management with HTTPS

There are two methods to login to the AP group web management system:

(1) HTTP protocol with URL <http://AP-IP:8080> (For example: <http://172.16.101.34:8080>) or <http://mywifi.al-enterprise.com:8080>, which is simpler and easier for the user without needing to install the digital certificate;

(2) HTTPS protocol with URL <https://AP-IP> (For example: <https://172.16.101.34>) or <https://mywifi.al-enterprise.com>, which is more secure communication between AP and the browser.

User can select his/her preferred managed method accordingly.

User can access the web manager directly with HTTP. If you want to access with HTTPS, a CA root needs to be downloaded from the AP and installed into the trust store of the browser used. The certificate installation procedure varies from operating system and browser combinations. You can follow below illustrated steps to install the root CA accordingly.

Download the Certificate from AP

In the HTTP login page, you can download the root certificate file “ALE-OmniAccess-WLAN.CRT” from AP, illustrated in Figure 10-1 and Figure 10-2.

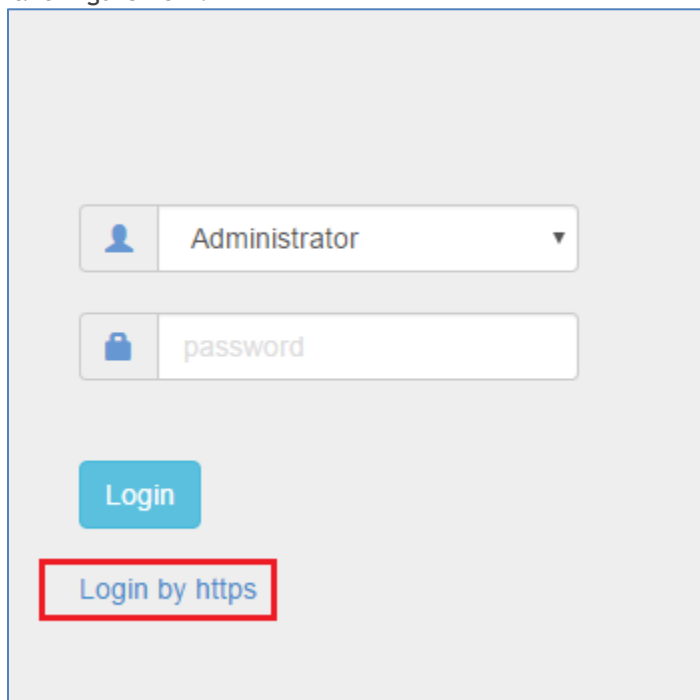
The image shows a web login interface. At the top, there is a header area. Below it, there is a login form. The form has two input fields: the first is for the username, with a user icon on the left and the text "Administrator" inside; the second is for the password, with a lock icon on the left and the text "password" inside. Below these fields is a blue "Login" button. At the bottom of the form, there is a link that says "Login by https", which is highlighted with a red rectangular border.

Figure 10-1 HTTP Login Page

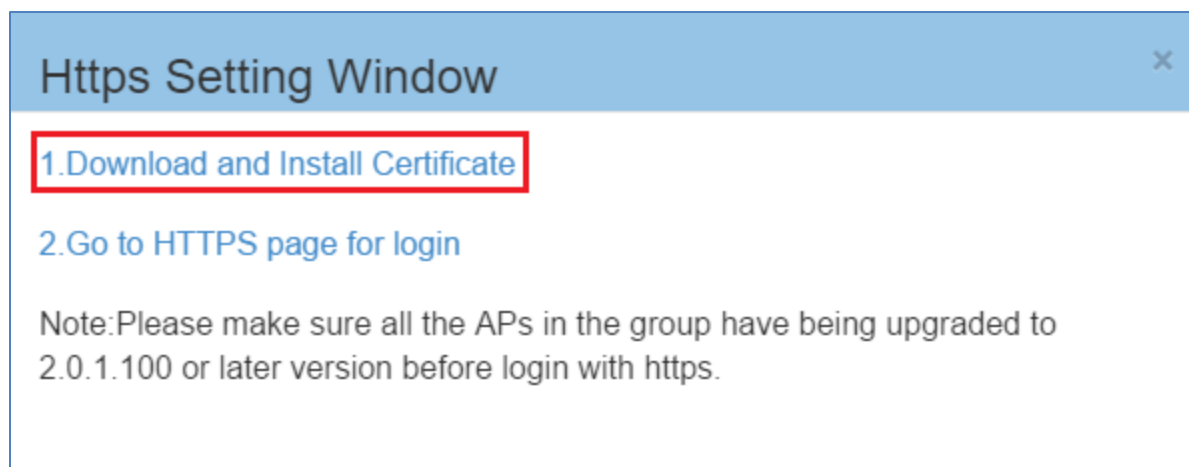


Figure 10-2 Download Certificate from AP

Install the Certificate on Different Platform accordingly

You can follow the demonstrated steps to install the certificate based on the operating system and browser combinations.

After you have installed the certificate successfully, you can access <https://PVM-IP> (For example: <https://172.16.101.34>) or <https://mywifi.al-enterprise.com> to manage the AP group.

Case A: Microsoft Windows + Microsoft IE/Google Chrome

When using Microsoft IE or Google Chrome on Microsoft Windows platform, you can follow the steps illustrated from Figure 10-3 to Figure 10-8 to install the certificate.

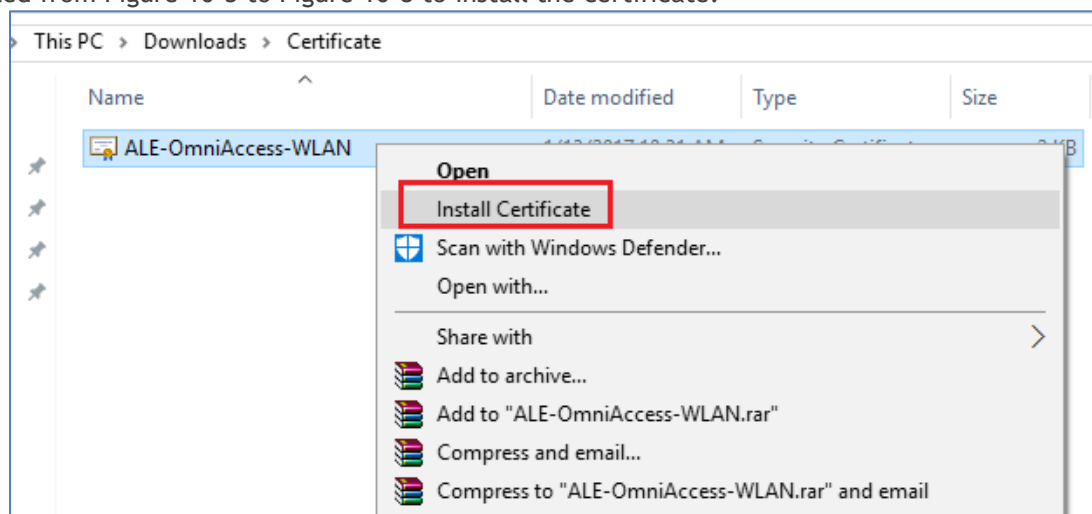


Figure 10-3 Case A - Step 1

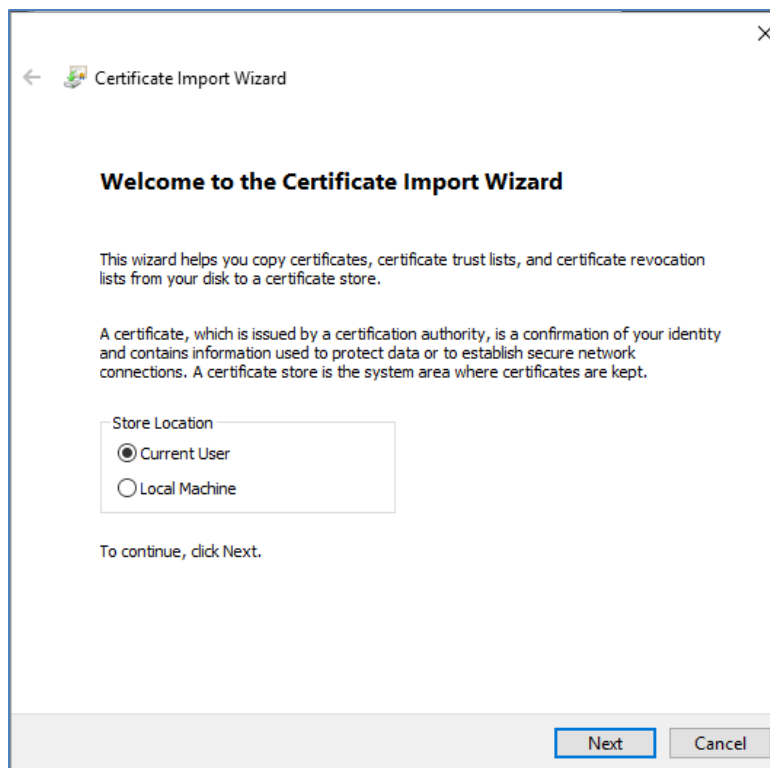


Figure 10-4 Case A - Step 2

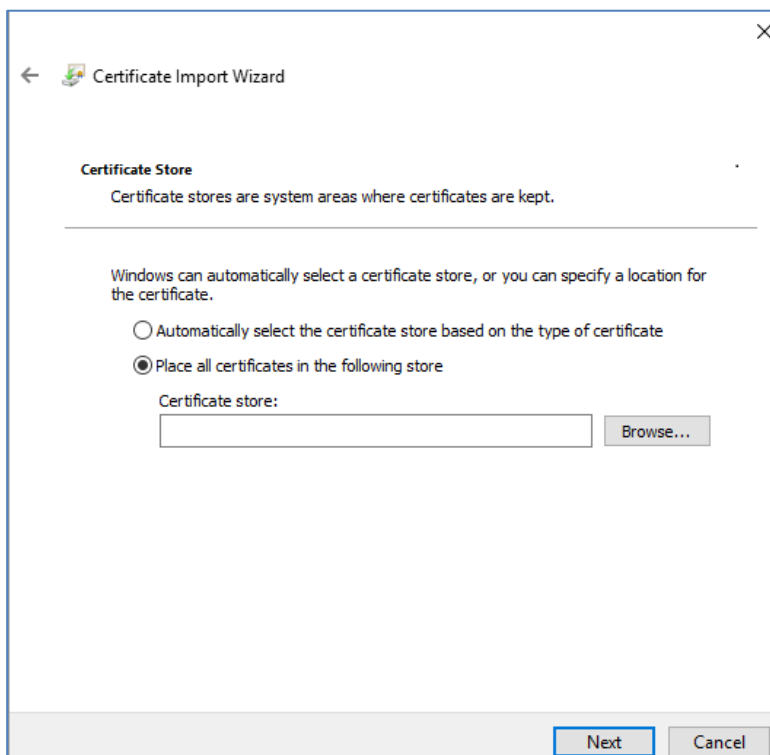


Figure 10-5 Case A - Step 3

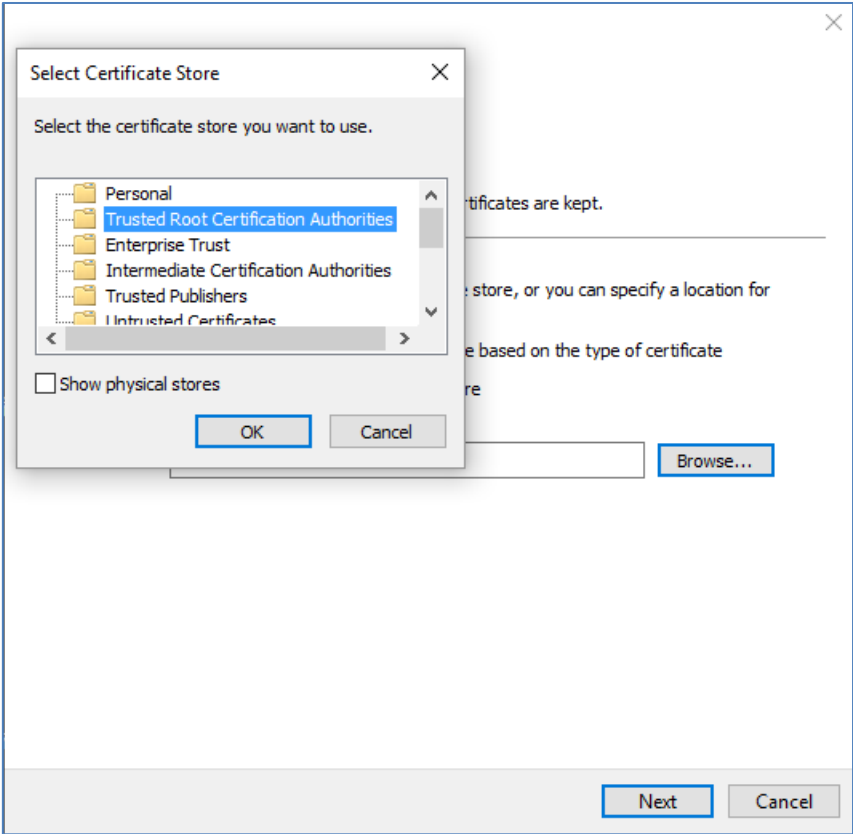


Figure 10-6 Case A - Step 4

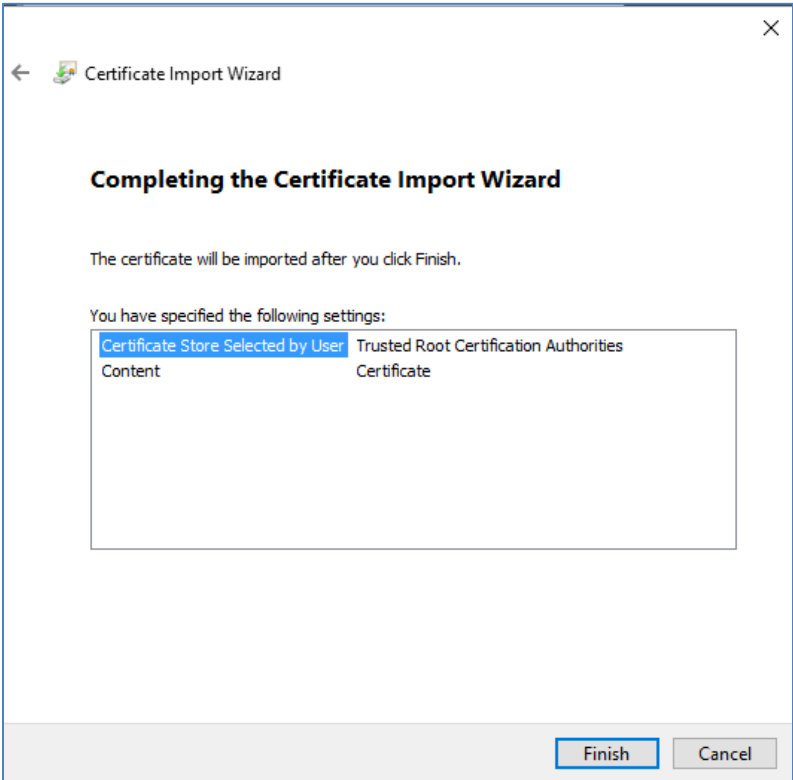


Figure 10-7 Case A - Step 5

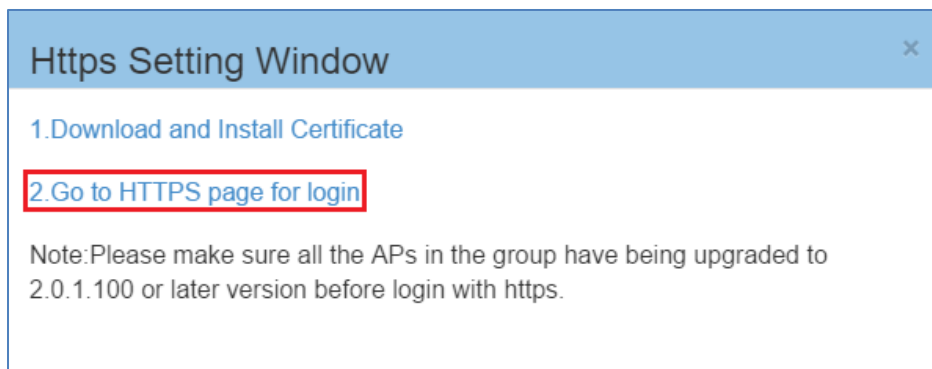


Figure 10-8 Case A - Step 6

Case B: Microsoft Windows + Mozilla Firefox

When using Mozilla Firefox browser on Microsoft Windows, you can follow the steps illustrated from Figure 10-9 to Figure 10-13 to install the certificate.

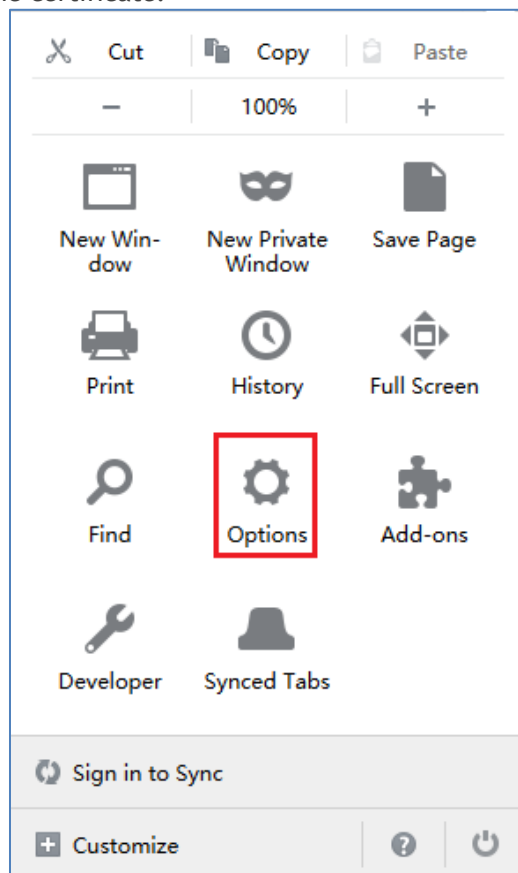


Figure 10-9 Case B - Step 1

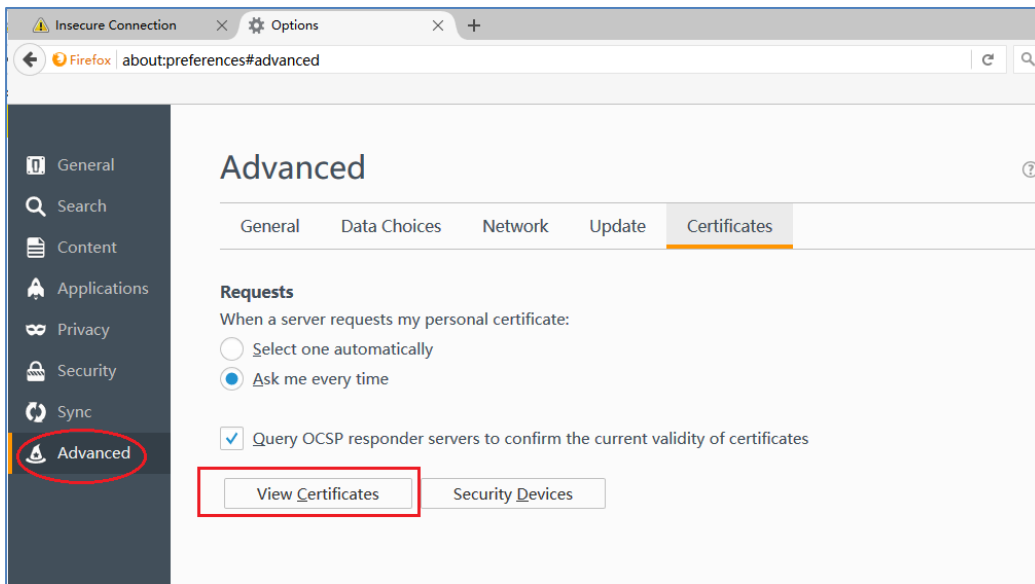


Figure 10-10 Case B - Step 2

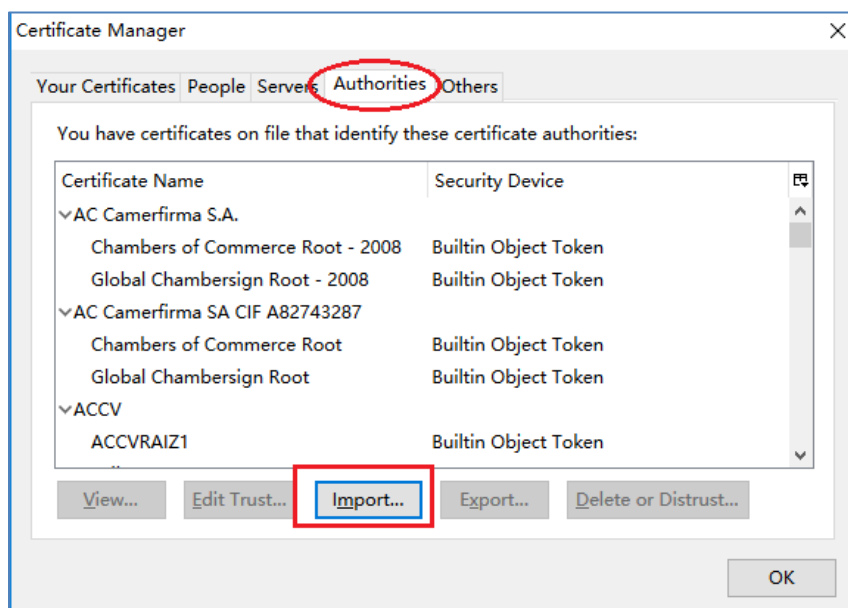


Figure 10-11 Case B - Step 3

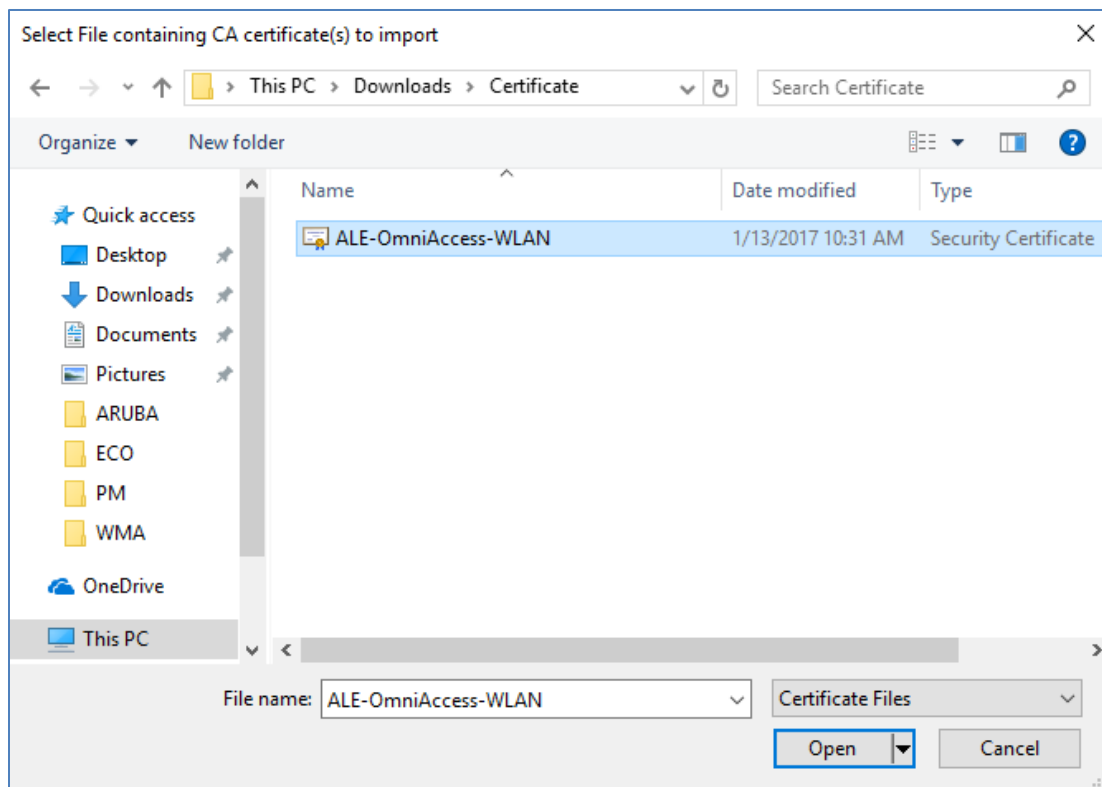


Figure 10-12 Case B - Step 4

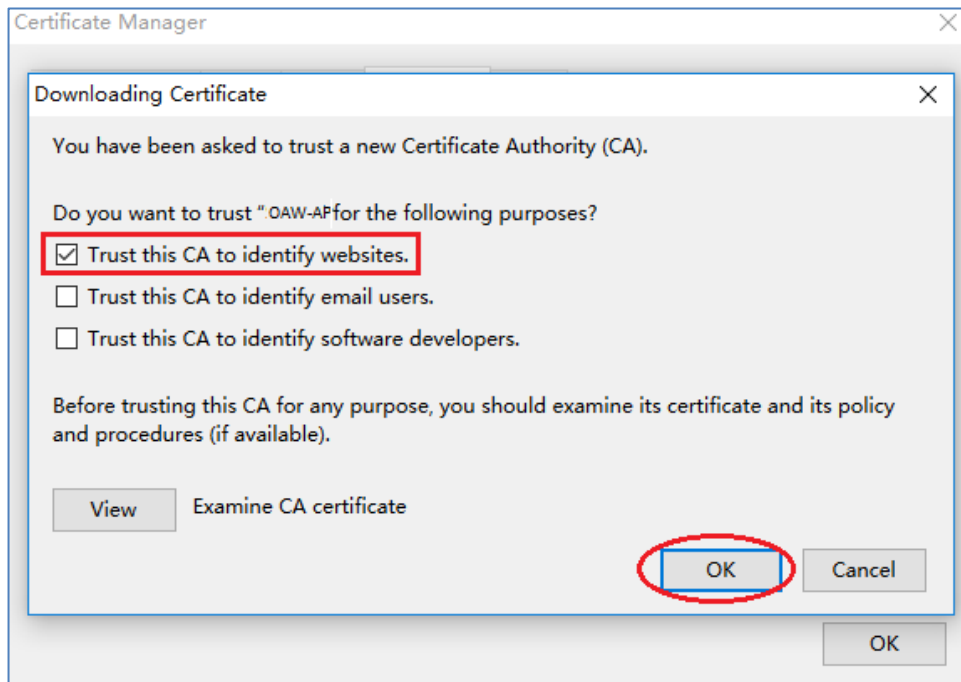


Figure 10-13 Case B - Step 5

Case C: Apple MAC OS X + Google Chrome

When using Google Chrome on Apple MAC OS X, you can follow the step illustrated from Figure 10-14 to Figure 10-22 to install the certificate.

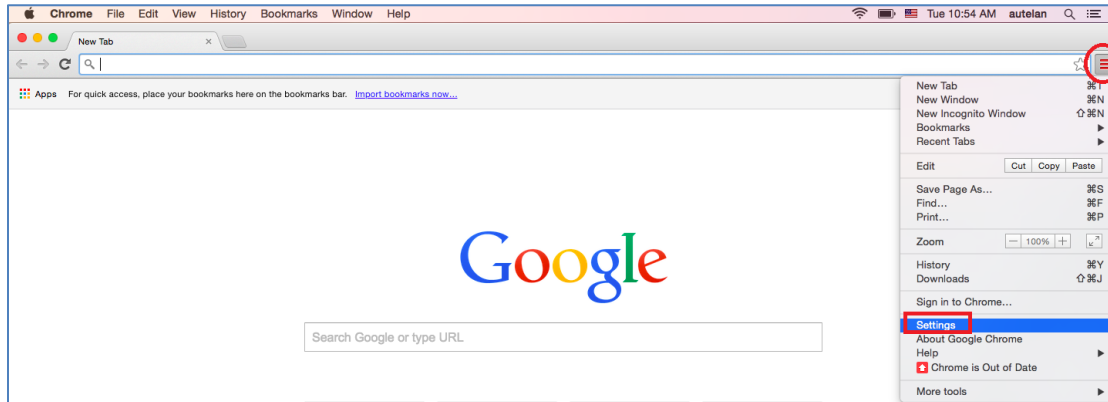


Figure 10-14 Case C - Step 1

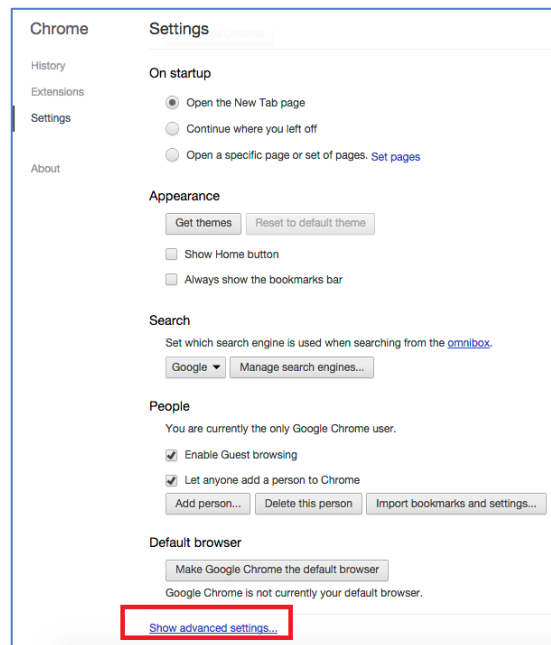


Figure 10-15 Case C - Step 2

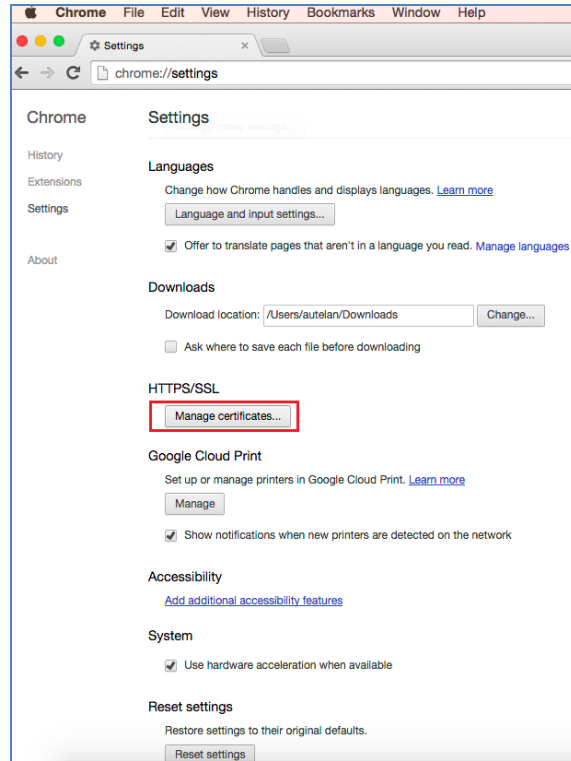


Figure 10-16 Case C - Step 3

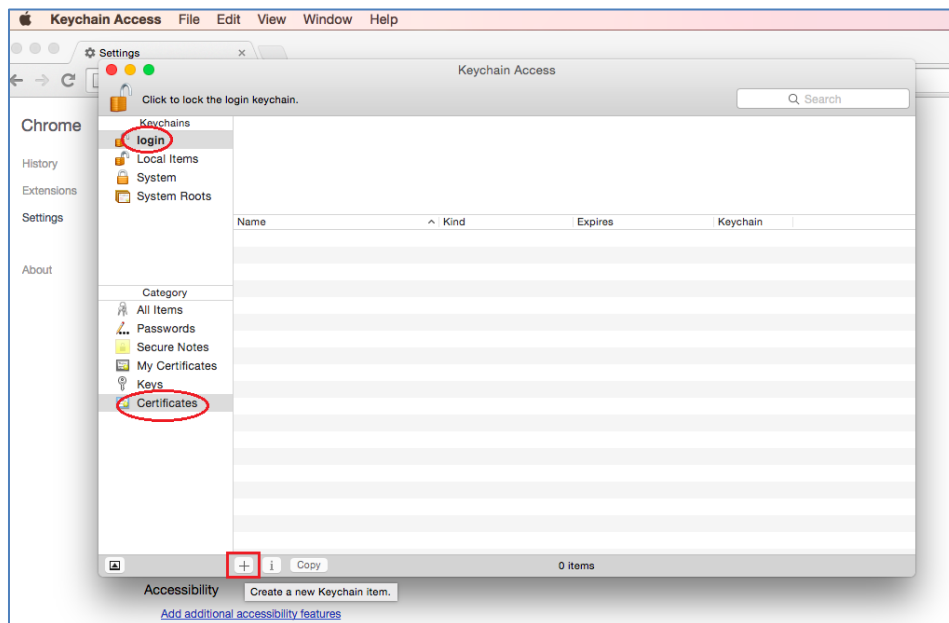


Figure 10-17 Case C - Step 4

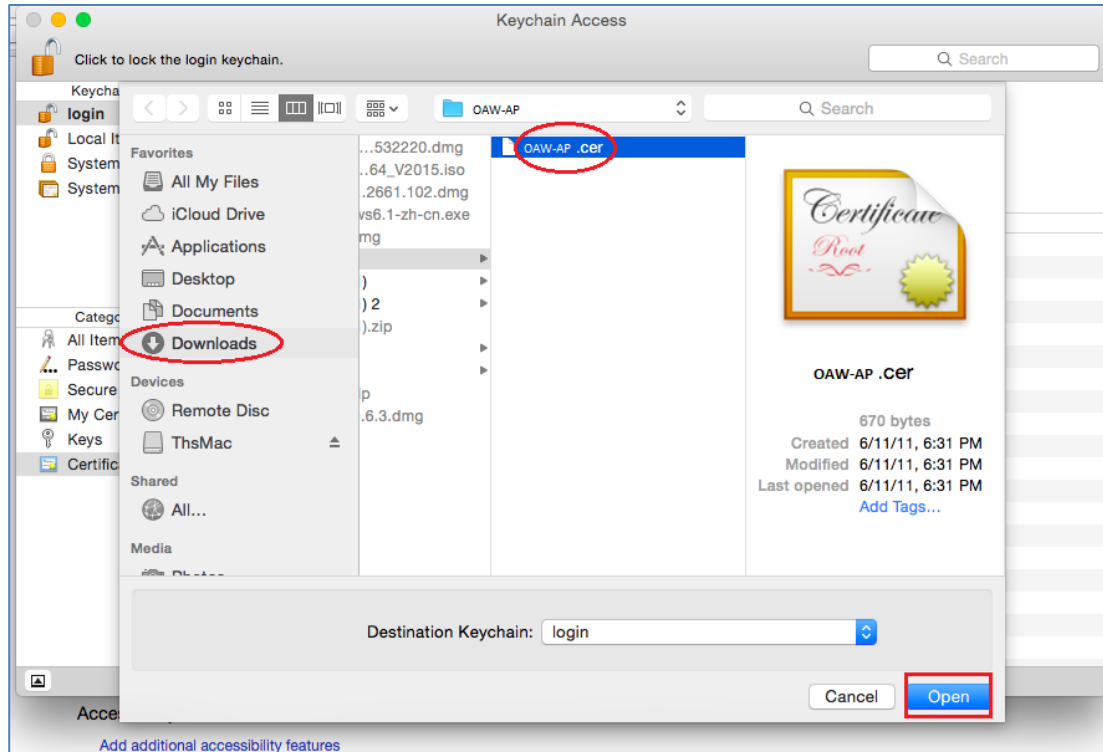


Figure 10-18 Case C - Step 5

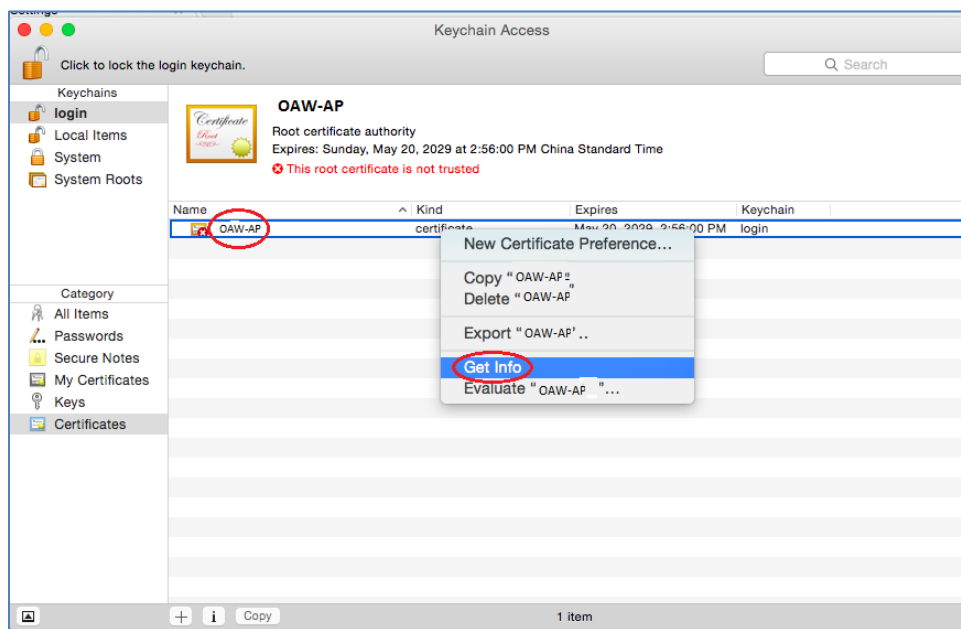


Figure 10-19 Case C - Step 6

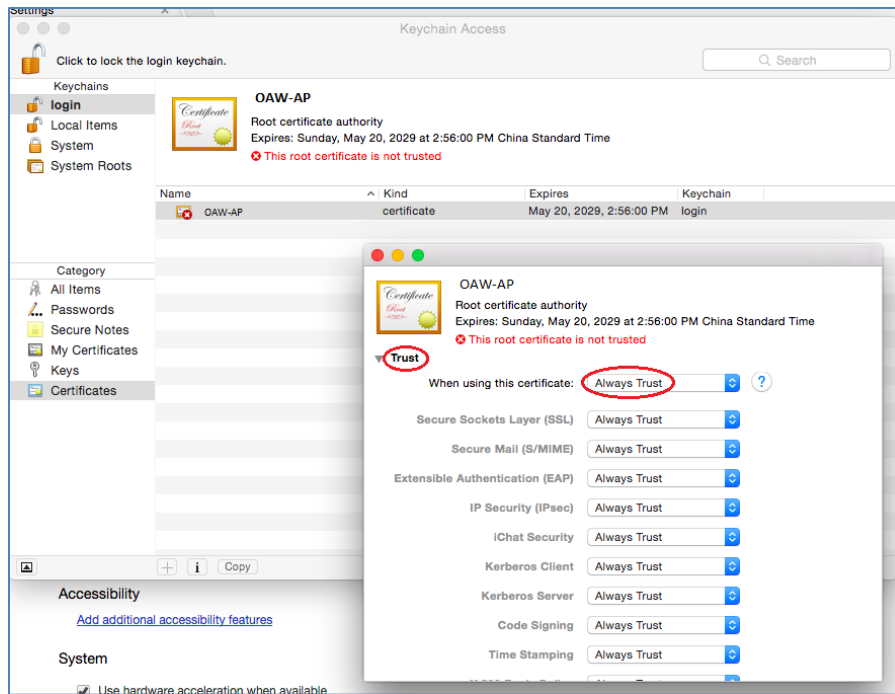


Figure 10-20 Case C - Step 7

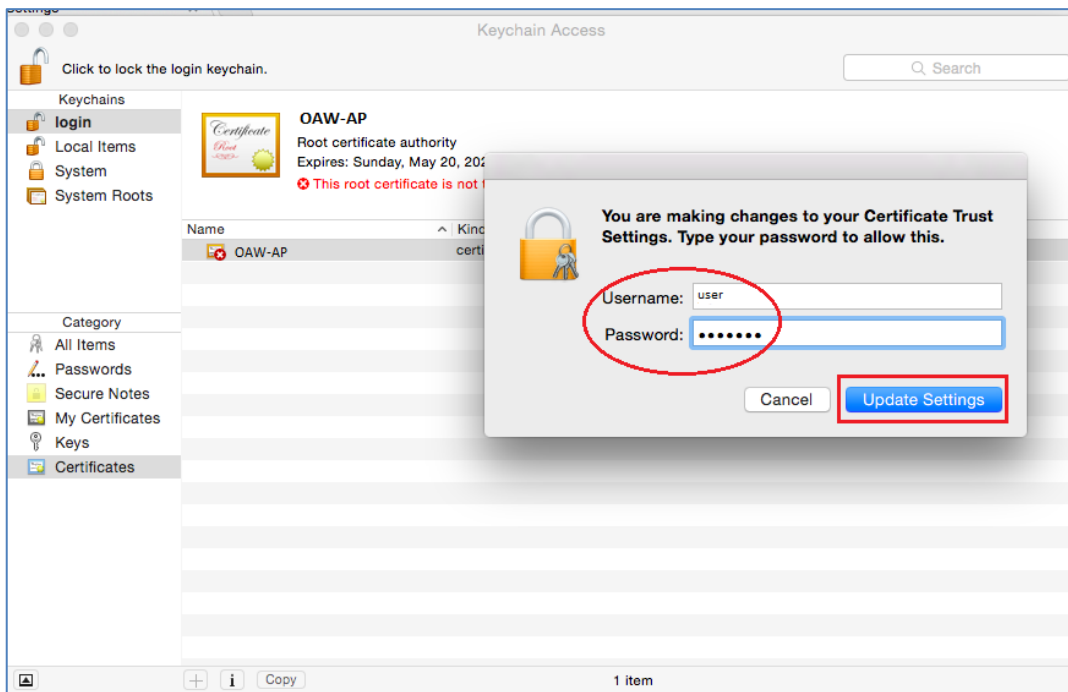


Figure 10-21 Case C - Step 8

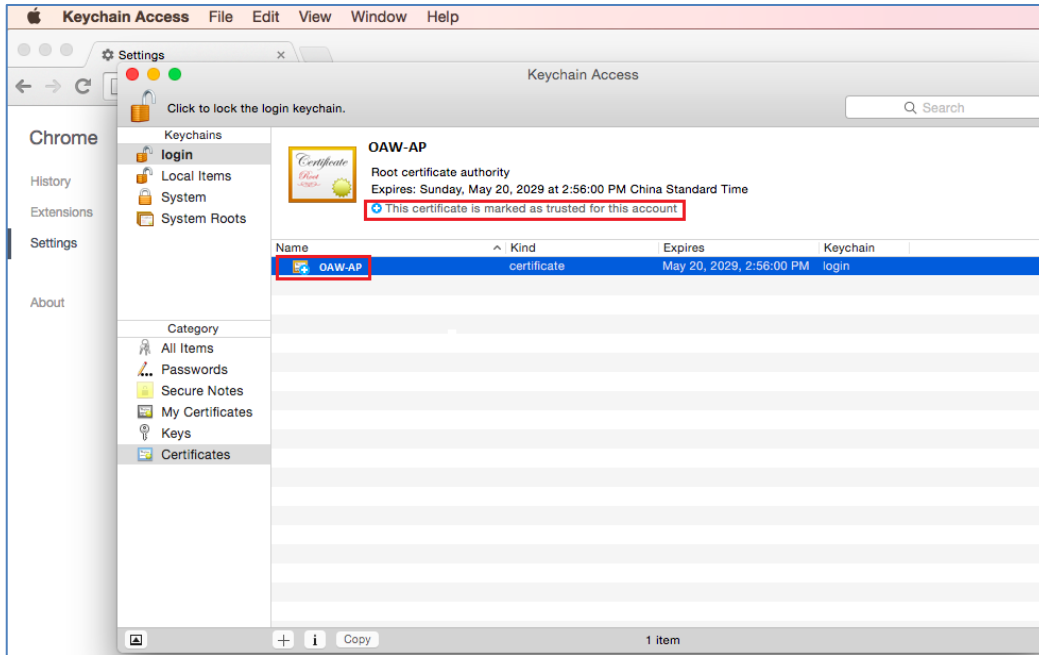


Figure 10-22 Case C - Step 9

Case D: Apple MAC OS X + Mozilla Firefox

When using Mozilla Firefox browser on Apple MAC OS X platform, go to [Case B: Microsoft Windows + Mozilla Firefox](#) and follow the steps to install the certificate.



Note

Note 9-1: The recommended operating system and web browser refer to [Prerequisites for Setting up and Accessing AP Group](#).

A. End-User Software License Agreement

ALCATEL-LUCENT ENTERPRISE USA, INC. ("ALU E")
SOFTWARE LICENSE AGREEMENT

IMPORTANT

Please read the terms and conditions of this license agreement carefully before installing or downloading this software. The installation and use of the software is subject to these terms and conditions (Agreement).

In this Agreement:

"Licensee" or You, Your and Yourself, means: the legal person or entity that by its authorized agents or representatives installs and/or uses, the Software.

"Software" (as defined in Section 1 below) for its own use and not for resale or distribution.

"Licensor" means Alcatel-Lucent Enterprise USA, Inc. or one of its Affiliated Companies or authorized distributors entitled to distribute the Software.

"Affiliated Companies" means any entity Controlling, Controlled by or under common Control, directly or indirectly, with Alcatel-Lucent Enterprise USA, Inc., "Control" means the ability to determine the management policies of a company or other entity through ownership of a majority of shares, by control of the board of management, by agreement or otherwise

Provided that You accept the terms and conditions of this Software License Agreement (the "Agreement") in accordance with the following paragraph and pay all applicable "License Fees", the Software shall be licensed subject to, and the use of the Software shall be governed by, this Agreement, except to the extent that a separate valid license agreement has been previously entered into between Licensee and Licensor that sets forth the terms and conditions for the use and license of the Software for the number of users for which, and on the platform on which Licensee is installing it, on terms and conditions equivalent to this Agreement ("Separate Agreement").

Notwithstanding anything to the contrary herein, if Licensee has entered into a Separate Agreement, the Software is licensed subject to the terms and conditions of the Separate Agreement and the provisions of the Separate Agreement shall supersede and replace any and all conflicting terms and conditions of this Agreement, even if Licensee clicks the accept button below. In such case, for the avoidance of doubt, the Separate Agreement and this Agreement shall not be deemed two concurrent agreements, and only the Separate Agreement shall be deemed entered into between Licensee and ALU E with respect to the Software.

IN THE EVENT WHERE NO SEPARATE AGREEMENT IS CURRENTLY IN FORCE, BY CLICKING THE ACCEPT BUTTON OR INSTALLING OR USING THE SOFTWARE, LICENSEE IS CONSENTING TO BE BOUND BY THE PROVISIONS OF THIS AGREEMENT AND IS BECOMING A PARTY TO THIS AGREEMENT. IF LICENSEE DOES NOT AGREE TO THE TERMS OF THIS AGREEMENT, CLICK THE BOX ADJACENT TO THE STATEMENT "I DO NOT ACCEPT THE LICENSE AGREEMENT" AND PROMPTLY DELETE ANY FILE CONTAINING THE SOFTWARE AND RETURN THE UNUSED SOFTWARE TO THE PARTY FROM WHOM YOU OBTAINED THE SOFTWARE. IF YOU HAVE ANY QUESTIONS ABOUT ANY PART OF THIS AGREEMENT PLEASE CONTACT YOUR ALE REPRESENTATIVE. LICENSEE IS ENCOURAGED TO SEEK LEGAL REVIEW OF THIS AGREEMENT PRIOR TO ACCEPTING IT.

1. License Grant and Restrictions of Use. This is a license, not a sales agreement, between the Licensee and ALU. Subject to Licensee paying all applicable fees, and subject to the terms set forth in this License Agreement ("Agreement"), ALU E or any of its Affiliated Companies, or, its local authorized Reseller or its authorized distributors from whom you purchased a license to use the software ("Licensor"), grants you this non-exclusive, non-transferable license to use the software program(s) delivered with this Agreement in

machine-readable form (the "Software"), and any documentation delivered with the Software (the "Documentation"). You shall not, and you shall not authorize other persons or entities to: (i) directly or indirectly, by electronic or other means, reproduce (except one copy for archival purposes), publish, distribute, rent, lease, sell, sublicense, assign or otherwise transfer the Software and Documentation or any part thereof or this Agreement; (ii) reverse-engineer, decompile, disassemble, merge, modify, use for competitive analysis, create derivative works of, or translate the Software or use any part of the Software outside the scope of the intended use of the Software; (iii) use the Software and Documentation for any purpose other than internal business purposes and not permit sublicensing, time sharing, rental, facility management, service bureau or application development use of the Software nor permit publication or distribution of results of any benchmark tests run on the Software without the express written permission of Licensor, or (iv) remove or obscure any copyright, trademark or other proprietary notices or legends from any portion of the Software, the Documentation or any associated documentation.

This license solely enables you to install the Software on one or more server computers and to use the Software on that concurrent number and type of server computers for which you have paid Licensor the applicable license fees. The Software is considered to be in use when it resides in memory or is otherwise stored on a machine. The Software might not be usable by you until you have obtained a license key that enables the Software. By obtaining a license key for the Software, you ratify your assent to this Agreement. You agree to ensure that anyone who uses the Software or Documentation does so only for your authorized use and complies with the terms of this Agreement. You may not use the Software to provide time-sharing, service bureau or other similar types of services to third parties.

If you use the Software within a country in the European Union, the Software Directive enacted by the Council of European Communities Directive dated 14 May, 1991, will apply to the examination of the Software to facilitate interoperability. You agree to notify Licensor of any such intended examination of the Software and may procure support and assistance from Licensor

2. Confidentiality. Licensor considers the Software to contain valuable trade secrets of ALU E, or it's licensors, the unauthorized disclosure of which could cause irreparable harm to ALU E or it's licensors. Except as expressly set forth herein, Licensee agrees to use reasonable efforts not to disclose the Software to any third party and not to use the Software other than for the purpose authorized by this License Agreement. This confidentiality obligation shall continue after any termination of this License Agreement.

3. Indemnity. Licensee agrees to indemnify, defend and hold Licensor harmless from any claim, lawsuit, legal proceeding, settlement or judgment (including without limitation Licensor's reasonable United States and local attorneys' and expert witnesses' fees and costs) arising out of or in connection with the unauthorized copying, marketing, performance or distribution of the Licensed Materials.

4. Limited Warranty. Unless a longer period is mandated by law, Licensor warrants that for a period of 90 days from the date of shipment of the media containing the Software to you, the Software, if operated as instructed, will perform substantially in accordance with the accompanying user documentation. Licensor's obligation under this warranty shall be limited as set forth below. Licensor does not warrant that the Software is totally free from error or omission or that its operation will be uninterrupted. All warranty obligations are void if the Software has been improperly installed or, except as allowed by applicable law, has been modified by a party other than Licensor.

EXCEPT FOR THE WARRANTIES SET FORTH ABOVE, THE LICENSED MATERIALS ARE LICENSED "AS IS" AND LICENSOR AND ITS SUPPLIERS AND/OR AUTHORIZED REPRESENTATIVES DISCLAIM ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING (WITHOUT LIMITATION) ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT, PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, THAT SOFTWARE ERRORS (IF ANY) WILL BE CORRECTED, AND THAT THE SOFTWARE WILL OPERATE UNINTERRUPTED OR ERROR FREE. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES SO THE ABOVE EXCLUSIONS MAY NOT APPLY TO LICENSEE. THIS WARRANTY GIVES LICENSEE SPECIFIC LEGAL RIGHTS. LICENSEE MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

a. **Specific Disclaimer for High Risk Activities:** The Software are not designed or intended for use in high-risk activities, including, without limitation, nuclear facilities, aircraft navigation or aircraft communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Components could lead directly to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). Licensor and its suppliers and/or authorized representatives specifically disclaim any express or implied warranty of fitness for High Risk Activities.

5. **Limitation of Liability.** Licensor's cumulative liability to Licensee or any other party for any loss or damages resulting from any claims, demands, or actions arising out of or relating to this License Agreement shall not exceed the license fee paid to LICENSOR for the Licensed Materials. IN NO EVENT SHALL LICENSOR AND ITS SUPPLIERS AND/OR AUTHORIZED REPRESENTATIVES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR INTERRUPTION OR COMPUTER FAILURE OR MALFUNCTION OR LOSS OF PROFITS OR REVENUES, GOODWILL, INFORMATION OR DATA, OR ANY OTHER PECUNIARY LOSS, WHATSOEVER, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE), ARISING IN ANY WAY OUT OF THE USE OR MISUSE OF THE LICENSED MATERIALS, OR THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, EVEN IF LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION TO INCIDENTAL OR CONSEQUENTIAL DAMAGES MAY NOT APPLY TO LICENSEE.

6. **Taxes and Duties.** Licensee will be responsible to pay any sales, use, value added, consumption or goods and services tax, import duties, or any other taxes or charges which may be applicable to this product or license.

7. **Export Control.** This product is subject to the jurisdiction of the United States. Licensee may not export or re-export the Licensed Materials, without complying with all United States export laws and regulations, including but not limited to (i) obtaining prior authorization from the U.S. Department of Commerce if a validated export license is required, and (ii) obtaining "written assurances" from licensees, if required.

8. **Support and Maintenance.** Except as may be provided in a separate agreement between Licensor and Licensee, if any, Licensor is under no obligation to maintain or support the copies of the Licensed Materials made and distributed hereunder and Licensor has no obligation to furnish Licensee with any further assistance, documentation or information of any nature or kind.

9. **Term.** This License Agreement is effective upon Licensee installing or downloading the Software and shall continue until terminated. Licensee may terminate this License Agreement at any time by returning the Licensed Materials and all copies thereof and extracts therefrom to Licensor and certifying to Licensor in writing that all Licensed Materials and all copies thereof and extracts therefrom have been returned or erased by the memory of Licensee's computer or made non-readable. Licensor may terminate this License Agreement upon the breach by Licensee of any term hereof. Upon such termination by Licensor, Licensee agrees to return to Licensor or destroy the Licensed Materials and all copies and portions thereof.

10. **Governing Law.** This License Agreement shall be construed and governed in accordance with the laws of the State of California and controlling U.S. federal law. No choice of law rules of any jurisdiction will apply.

11. **Severability.** Should any term of this License Agreement be declared void or unenforceable by any court of competent jurisdiction, this Agreement will remain in effect with the term omitted, unless omission would frustrate the intent of the parties, in which case this Agreement will immediately terminate.

12. **No Waiver.** The failure of either party to enforce any rights granted hereunder or to take action against the other party in the event of any breach hereunder shall not be deemed a waiver by that party as to subsequent enforcement of rights or subsequent actions in the event of future breaches.

13. Notes to United States Government Users. Software and documentation are provided with restricted rights. Use, duplication or disclosure by the government is subject to (i) restrictions set forth in GSA ADP Schedule Contract with ALU's reseller or distributor.(s), or (ii) restrictions set forth in subparagraph (c) (1) and (2) of 48 CFR 52.227-19, as applicable.

14. Third Party Materials. Licensee is notified that the Software contains or may be accompanied by or packaged with third party software and materials licensed to Licensor by certain Suppliers and/or Authorized Representatives. Some Suppliers and/or Authorized Representatives are third party beneficiaries to this License Agreement with full rights of enforcement. Please refer to the file entitled "Third Party Licenses and Notices" in the user's documentation residing on the media for the Suppliers and/or Authorized Representatives license and notice terms. You agree to accept the license terms, including Warranty terms, of any and all such third party end user license agreements included in the Software or Documentation.

15. The Asset Management feature may be chosen during installation, it collects and stores information such as; the make, model and serial number of Licensee's devices, the device software version numbers and system uptime information and such other information that would, in Licensor's sole discretion, be utilized to improve the customer experience. The information helps us to diagnose potential problems, if any, in the software. We may or may not use the diagnostic information, in our sole discretion, to provide support solutions, including updates, upgrades or services packs, if any are made generally available. We will not use the Asset Management feature to track, collect or upload any data that personally identifies You (such as your name, address, email address) except Customer information provided to us by You. Licensee may opt-out of providing this data during installation of the Software by, as the case may be, checking or un-checking the box adjacent to the Asset Management feature option. If the box next to the Asset Management feature option is not checked the option will not be activated. If You decide to activate the Asset Management feature after full installation, You may do so by following the instructions on the Preference page for Asset Management in Your OmniVista 2500 client. Your use of the software constitutes your acknowledgment and agreement to the terms of use.

16. Entire Agreement. This Agreement is the complete and exclusive agreement between the parties with respect to the subject matter hereof, superseding and replacing any and all prior agreements, communications, and understandings (both written and oral) regarding such subject matter. This Agreement may only be modified, or any rights under it waived, by a written document executed by Officers of both parties. Any provisions of either purchase order, invoice, or similar document submitted by Licensee to Licensor, which are in addition to or inconsistent with the terms and conditions of this Agreement will be deemed stricken from such document.

17. Notices. If Licensee has any questions concerning this product or would like to otherwise contact ALU E, please write to:

Alcatel-Lucent Enterprise USA, Inc., 26801 West Agoura Road, Calabasas, CA 91301
ATTN: Sales.

Copyright 2025 Alcatel-Lucent Enterprise USA, Inc.